


Assembly Instruction

ITEM NO.: 1068DG-1

 
ACCENT CHAIR

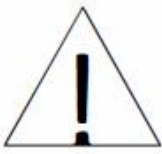


Legs & hardware are stored at the bottom of seat inside the dust cover as shown in drawing, please take out the legs and hardware for assembly.

Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

Component list

No	Drawing	Qty	Description
A		1 PC	CHAIR
B		2 PC	FRONT LEG L&R
C		2 PC	REAR LEG L&R
D		4 PC	BOLT (M8×80mm) (FRONT LEG)
E		8 PC	WASHER
F		1 PC	ALLEN KEY
G		4 PC	BOLT (M8×65mm) (REAR LEG)

- Step 1 **Take out the Legs & hardware from the the bottom of seat inside the dust cover as shown in drawing.**

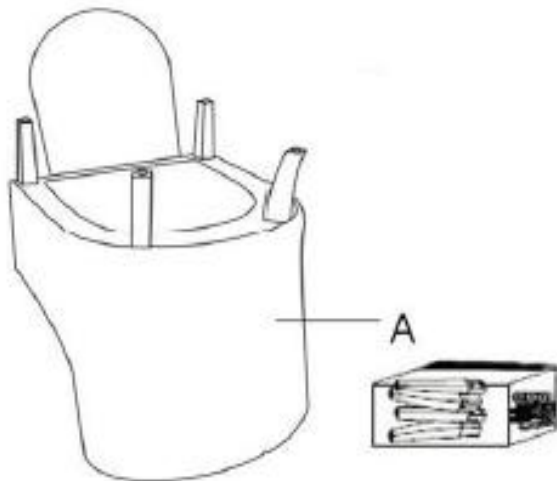


Step 2 **Front Leg Assembly:**


Align and insert front legs to the front seat frame pre-drilled holes, make sure both pre-drilled holes are in line, insert bolts D and washers then tighten with Allen Key.

Rear Leg Assembly:


Align and insert rear legs to the rear seat frame pre-drilled holes, rear legs curves must facing outward, make sure both pre-drilled holes are in line, insert bolts G and washers then tighten with Allen Key.

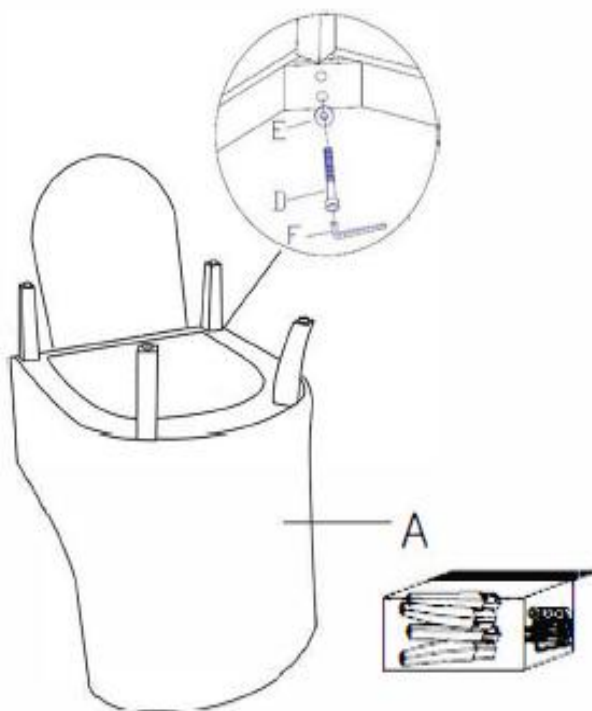

- Step 3 **Check all the bolts are tighten securely in position, put the dust cover back to the position. Upright the chair and make sure the chair is stable.**

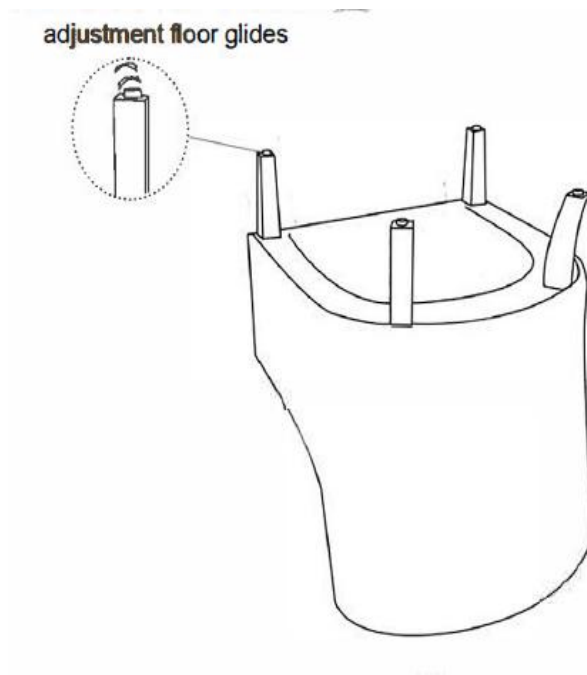

Chair Assembly is completed.

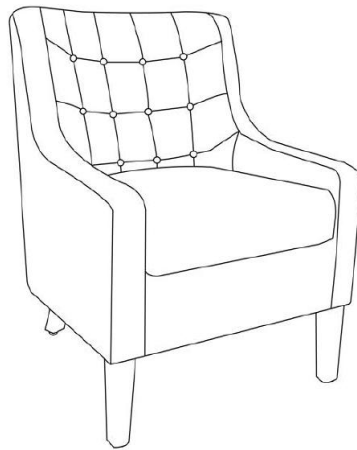

Care Instruction for Fabric Furniture:

In order to maintain the original appearance of your fabric furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and/or exposure to heating and air conditioning outlets will fade/damage fabric.
- Vacuum or wipe with a soft brush to remove dust.
- Clean fabric furniture with professional cleanser.



- For items use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.