

ASSEMBLY INSTRUCTIONS


 







ITEM NO:1023BU/GY - 1
ACCENT CHAIR




Legs & hardware are stored at the bottom of box,
please take out for assembly.

  Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

Component List


NO	Drawing	Qty	Description
A		1	Chair Back
B		1	Seat
C		2	Wooden Front Leg 11-1/2"
D		2	Wooden Rear Leg 12-1/2"
E		4	Bolt $\phi 5/16 \times 1-1/2$ "
F		8	Bolt $\phi 5/16 \times 2-1/2$ "
G		12	Lock Washer
H		12	Flat Washer
I		1	Allen Key

Step #1

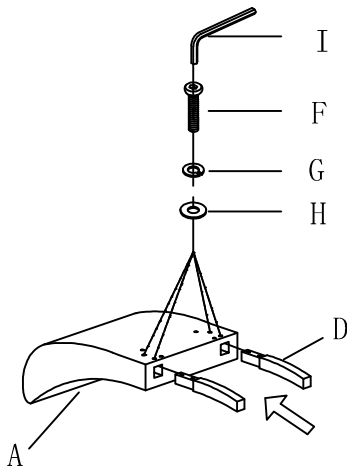


Step #2


open up the non-woven fabric at the bottom of the seat

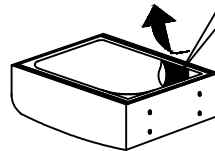


Step #3

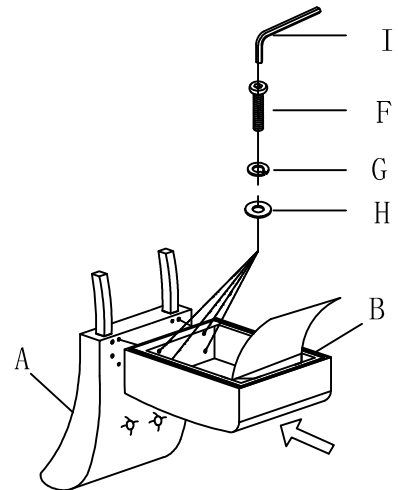


Step #1

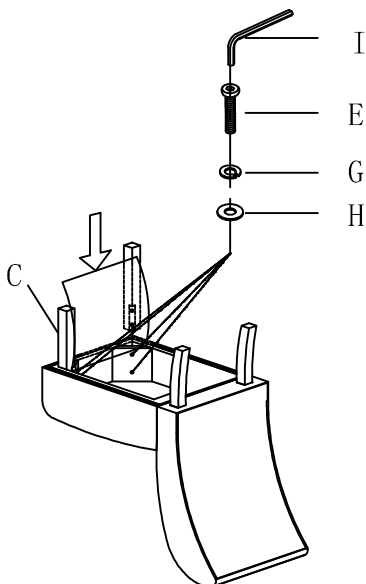

Step #2

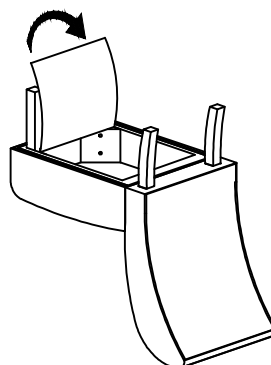

Step #3

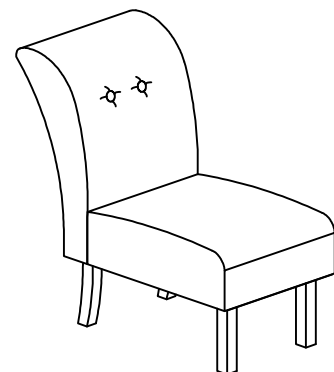

Care Instruction for 100% Polyester Furniture:

In order to maintain the original appearance of your 100% Polyester Furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and air conditioning outlets will fade/damage Fabric
- Do not place your upholstered furniture too close to windows, radiators, or vents, and be sure to use windows, radiators, or vents.
- Vacuum or wipe with a cloth regularly to remove dust.



For item used on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.