 












Assembly Instruction

 ITEM: 5048-72 DINING TABLE

PART LIST				HARDWARE LIST			
A	TOP PANEL		1 PC	1	BOLT		ø5/16" * 5/8" 24PCS
				2	ALLEN KEY		5mm 1PC
				3	METAL BRACKET		4PCS
				4	CAM BOLT		M6 4PCS
B	LEG		4 PCS	5	CAM SCREW		M6 4PCS
				6	CAM NUT		M6 4PCS


STEP 1

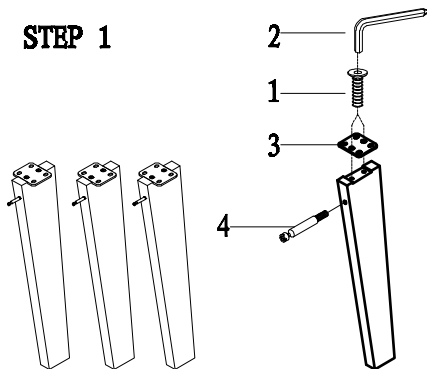

Attach brackets to the table legs, insert the cam bolts and bolts to the legs and tighten the bolt#1 only with allen key.


STEP 2

Align and attach table legs to the table top pre-drilled holes, insert cam screws and cam nuts, make sure cam nut holes align with cam bolts at table legs, tighten cam screws with allen key, do not fully tighten it.

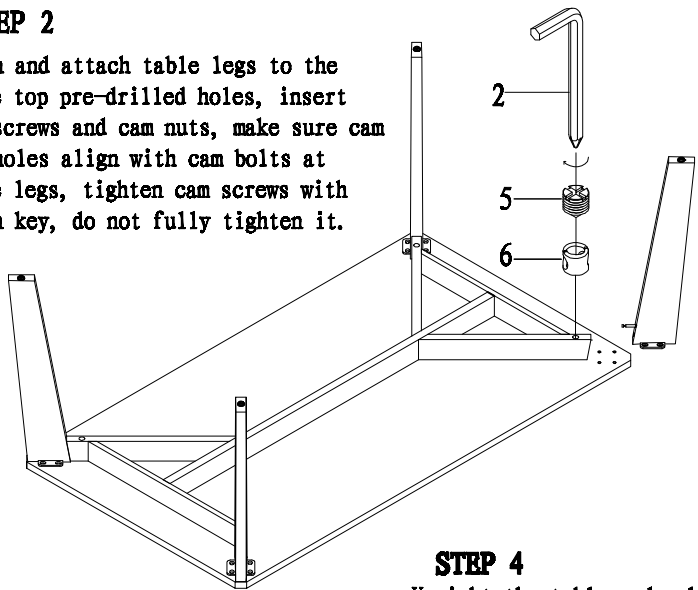

STEP 3

Insert bolts#1 onto the brackets as shown in drawing, tighten all bolts#1 and cam screws#5.

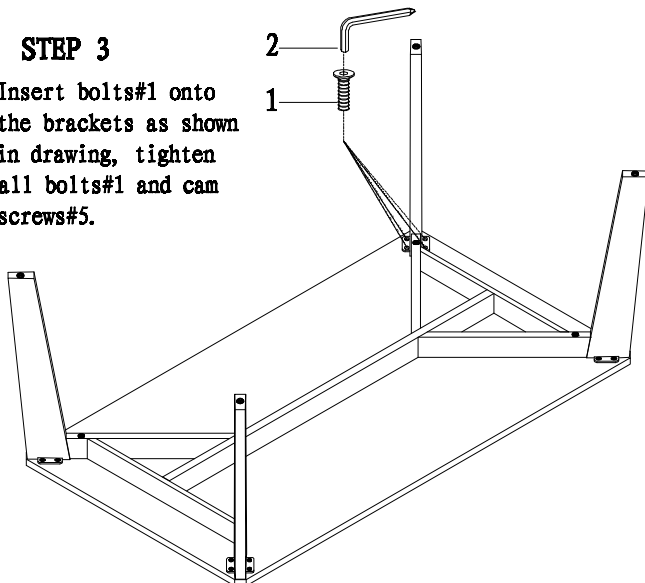

STEP 4

Upright the table and make sure the table is stable and level on the floor.

