












Assembly Instruction

ITEM: 5177S DINING CHAIR

PART LIST					HARDWARE LIST			
A	L&R FRONT LEG		2 PCS	1	BOLT-SMALL		5/16"X2"	4 PCS
B	L&R REAR LEG		2 PCS	2	BOLT-LARGE		5/16"X2-1/2"	4 PCS
C	CHAIR BACK WITH SEAT		1 PC	3	SPRING WASHER		5/16"	8 PCS
				4	WASHER		5/16"X19mm	8 PCS
				5	ALLEN KEY		5mm	1 PC


STEP 1

Align and attach both front legs to the chair seat, insert bolts and washers to the pre-drilled holes, do not tighten it first.

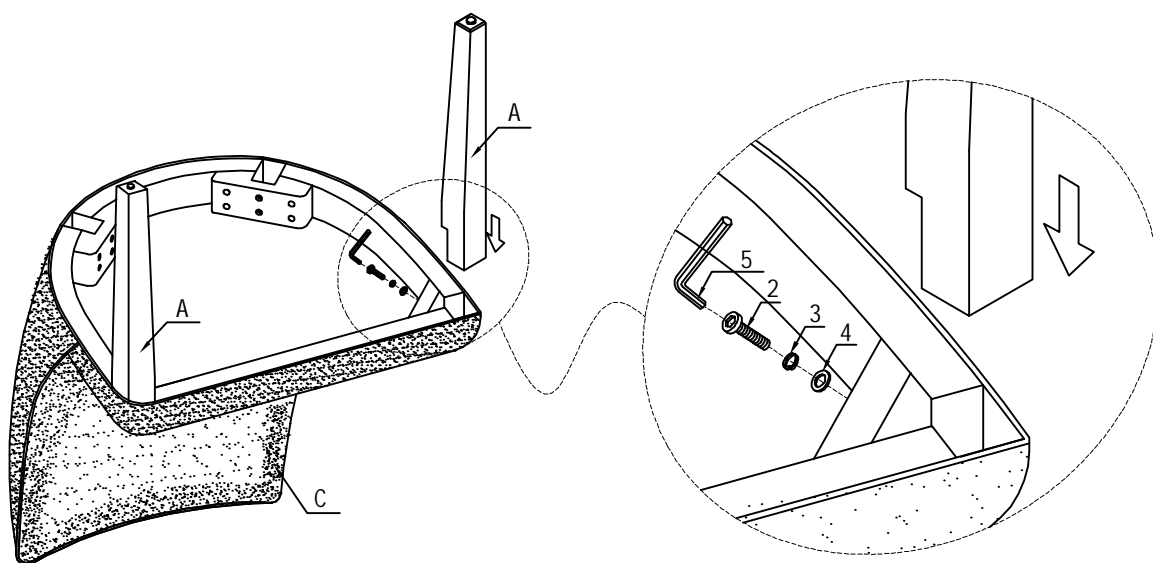


STEP 2

Align and attach both rear legs with outward direction to the chair seat, insert bolts and washers to the pre-drilled holes, do not tighten it first.

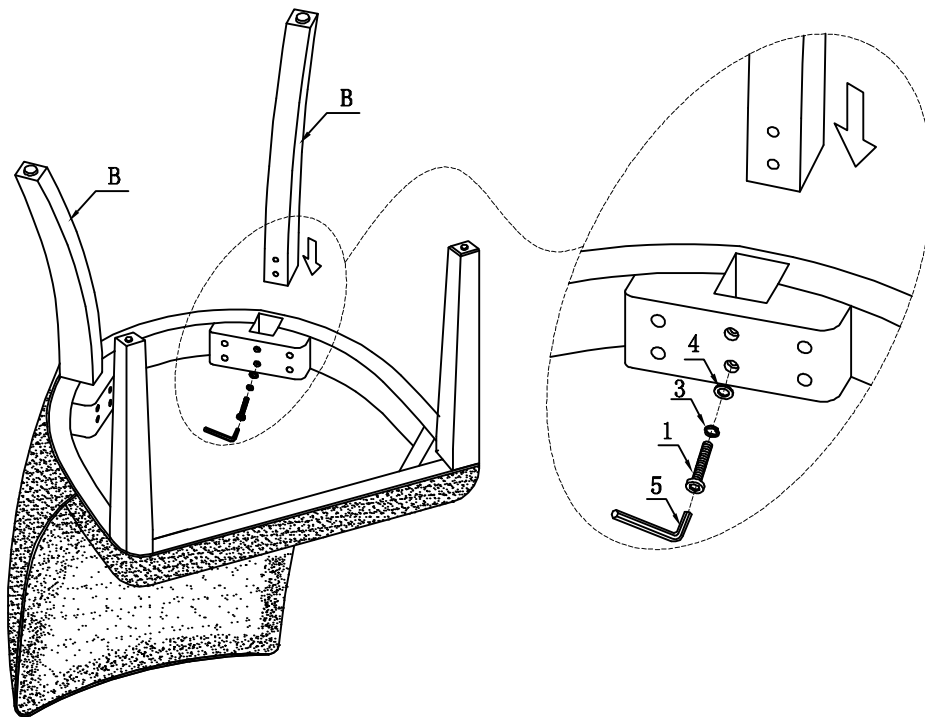

STEP 3

Assembly completed

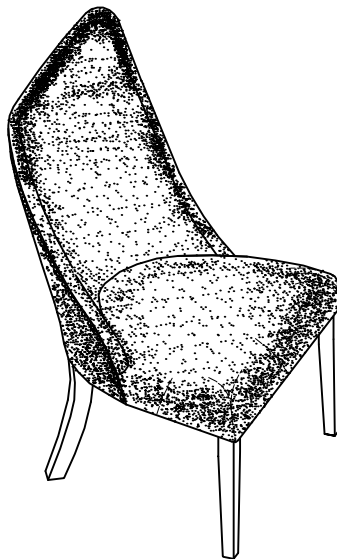

Helpful Tip:

-Instead of applying downward pressure while reaching under to tighten bolts, have someone sit in the chair while you tighten the bolts.

Stand chair up on an even surface and check that it is balanced. If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corner, tighten all bolts. If balanced, apply downward pressure evenly in the center and tighten all bolts. Do not over-tighten beyond hole depth.