



ASSEMBLY INSTRUCTION

5429-24 ADJUSTABLE COUNTER HEIGHT CHAIR WITH BACK

A

B

C

D

E

F

G



Leg Frame

1PC



Leg

2PCS



Bottom Ring

1PC



Center Ring

1PC



Seat

1PC



Metal Plate and Pole

1PC




Chair Back

1PC


HARDARE LIST

H		Bolt with Lock Washer and Flat Washer	1/4"X12mm	5pcs
I		Bolt with Lock Washer and Flat Washer	1/4"X15mm	12pcs
J		Flat Head Bolt	5/16"X25mm	3pcs
K		Flat Washer	ø28mm	1pc
L		L-Allen Key	4mm	1pc


STEP 1

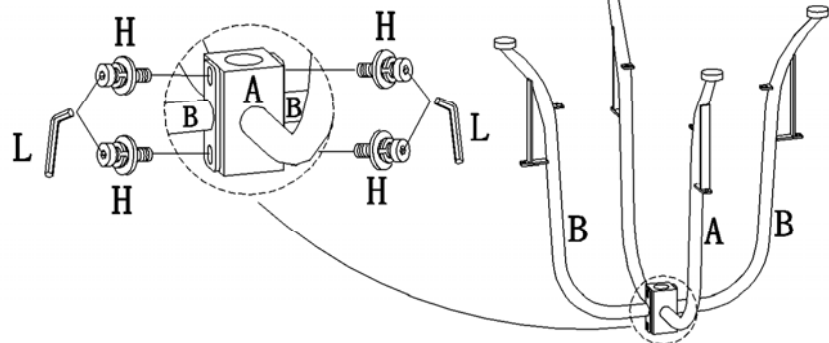

STEP 2

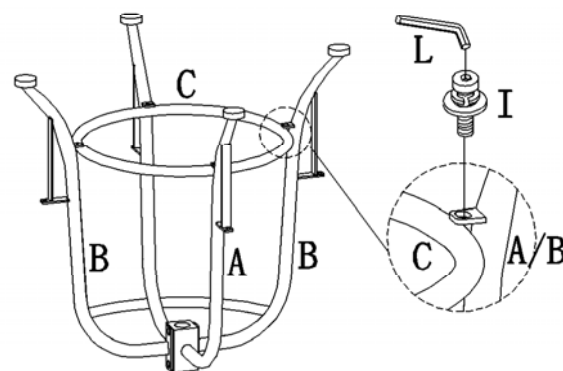

STEP 3

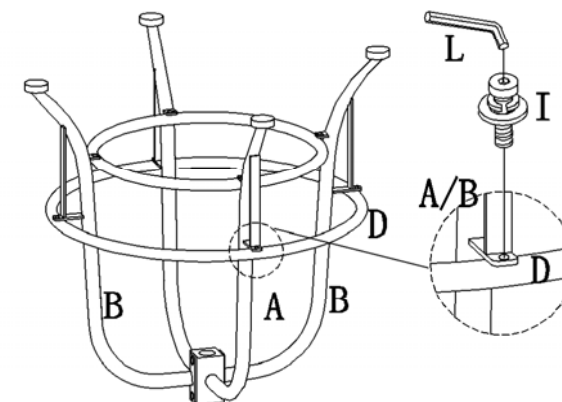

Step 1. Attach Leg (B) to Leg Frame (A) ,insert Bolt (H) then tighten with Allen Key (L).


Step 2. Attach Bottom Ring (C) to the legs,insert Bolt (I) then tighten with Allen Key (L).

Step 3. Attach Center Ring (D) to the legs,insert Bolt (I) then tighten with Allen Key (L).


ASSEMBLY INSTRUCTION

5429-24 ADJUSTABLE COUNTER HEIGHT CHAIR WITH BACK


STEP 4

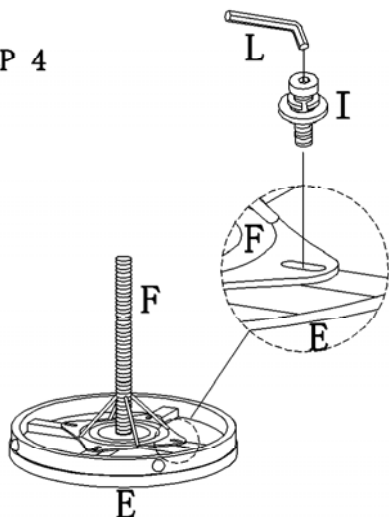


STEP 5

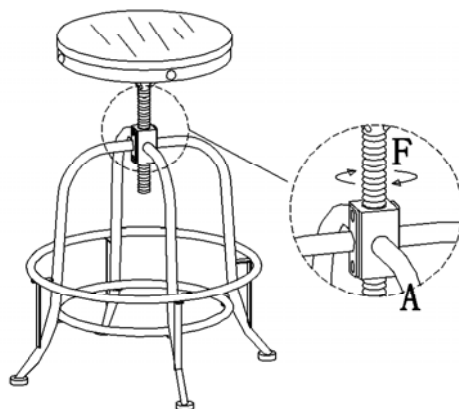

STEP 6

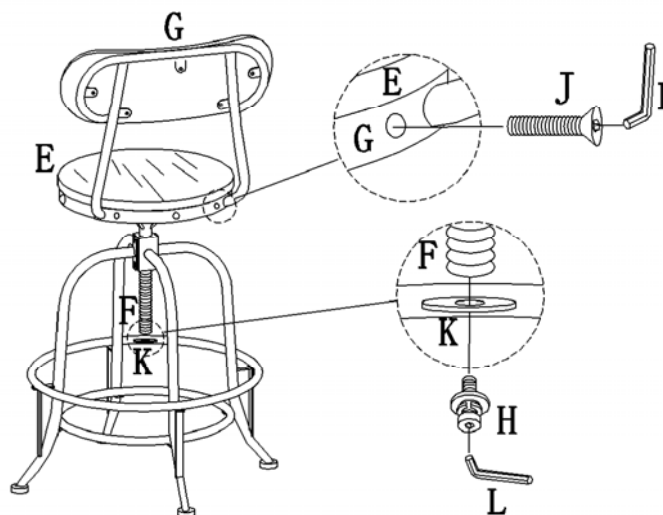

COMPLETED.

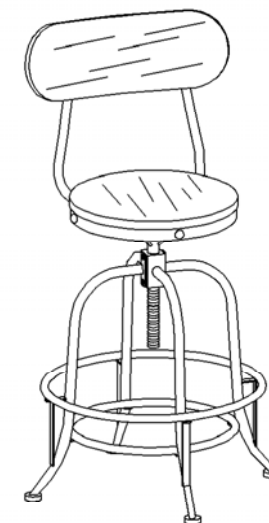

Step 4. Upside down Seat (E) and attach Metal Plate and Pole (F) to it, insert Bolt (I) then tighten with Allen Key (L).
Step 5. Rotate Metal Plate and Pole (F) to the Leg Frame (A) to the proper position.
Step 6. Attach Flat Washer (K) to Metal Plate and Pole (F) ,insert Bolt (H) then tighten with Allen Key (L).
Then attach Chair Back (G) to Seat(E) , insert Bolt (J) then tighten with Allen Key (L).

▲ For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.