












Assembly Instruction


ITEM: 5581-84 DINING TABLE

| PART LIST | | | | HARDWARE LIST | | | | |
|-----------|------------|---|-------|---------------|-------------|---|-------------|--------|
| A | TOP PANEL |  | 1 PC | 1 | BOLT |  | 5/16*1/2" | 4 PCS |
| B | SIDE LEG |  | 2 PCS | 2 | BOLT |  | 5/16*1-1/2" | 16 PCS |
| C | CENTER LEG |  | 1 PC | 3 | LOCK WASHER |  | 5/16" | 20 PCS |
| | | | | 4 | FLAT WASHER |  | 5/16"*19mm | 20 PCS |
| | | | | 5 | ALLEN KEY |  | 5MM | 1 PC |


STEP 1

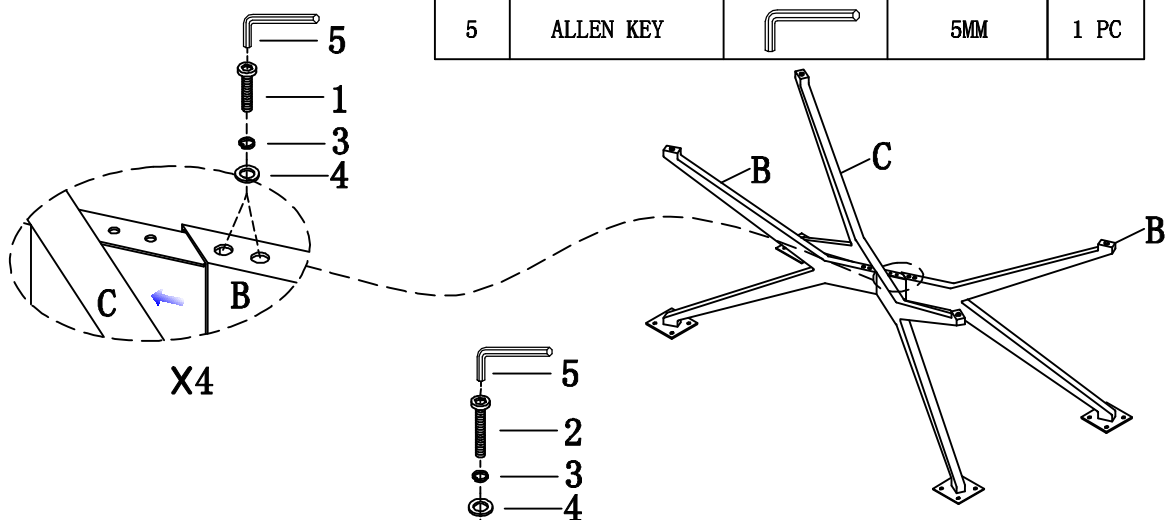

STEP 2

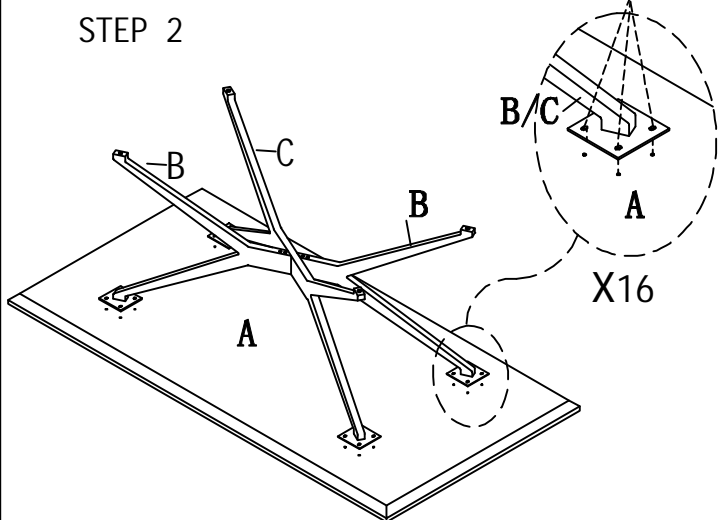

STEP 3

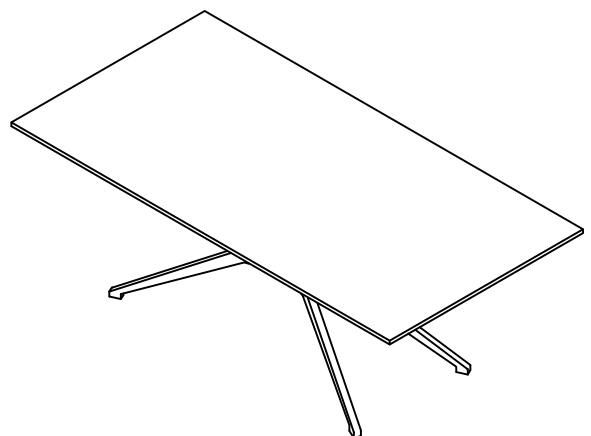

For items use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.