

ASSEMBLY INSTRUCTION

ITEM NO: 5609A ARM CHAIR WITH CASTERS

Do not fully tighten screws & bolts until the entire item is completely assembled


PART LIST					HARDWARE LIST					
No.	Description Q'ty				No.	No. Description			Q'ty	
A	CHAIR BACK		1PC		1	FLAT WASHER	0	Ø5/16"*22mm	11PCS	
В	SEAT CUSHION		1PC		2	SPRING WASHER	@	Ø5/16 "	11PCS	
С	RSF ARM		1PC		3	BOLT		Ø5/16 "* 1-3/4 "	3PCS	
D	LSF ARM		1PC		4	ALLEN KEY		5mm	1PC	
Е	RSF FRONT LEG		1PC		5	BOLT		Ø5/16 ″* 3 ″	4PCS	
F	LSF FRONT LEG		1PC		6	BOLT		Ø5/16 ″* 2 ″	4PCS	
G	FRONT CROSS BAR		1PC		7	BOLT	1000000	Ø1/4 "* 1-1/2"	4PCS	
Н	LSF CROSS BAR	***	1PC		8	FLAT WASHER	0	Ø1/4"*22mm	2PCS	
Ι	RSF CROSS BAR		1PC		9	SPRING WASHER	@	Ø1/4 "	4PCS	
					10	ALLEN KEY		4mm	1PC	
STE	STEP 1 E					WOODEN PLUG	0	12mm	2PCS	
						SCREW	Samana	Ø8*1-5/8"	6PCS	
STEP 2 STEP 2 PAGE 1 OF 2										



ASSEMBLY INSTRUCTION

ITEM NO: 5609A ARM CHAIR WITH CASTERS

Do not fully tighten screws & bolts until the entire item is completely assembled

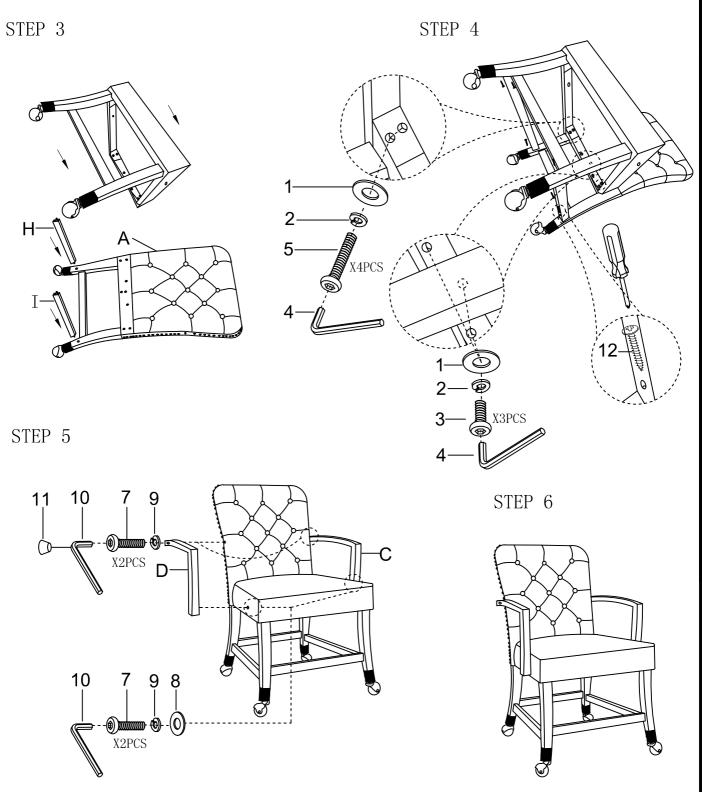



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.