


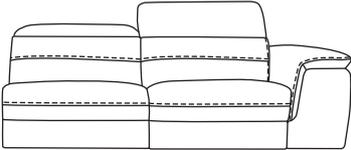

Assembly Instruction
RSF 2-SEATER WITH ONE POWER RECLINER,
USB PORT AND ADJUSTABLE HEADRESTS
ITEM NO.: 8256 / 8256GY / 8256SW / 8256FBR-RPW

NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

COMPONENT LIST (CHAIR)


NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	RSF 2-SEATER

HARDWARE LIST

NO.	DRAWING	QTY	DESCRIPTION
1		2 PCS	METAL LEG
2		8 PCS	BOLT
3		8 PCS	LOCK WASHER
4		1 PC	ALLEN KEY
5		2 PCS	PLASTIC LEG
6		2 PCS	ADJUSTABLE LEG
7		2 PCS	PLASTIC GASKET
8		1 PC	ADAPTOR
9		1 PC	PLUG WITH WIRE


STEP#1

Align and attach legs to chair, insert bolts and washers and tighten with Allen key.

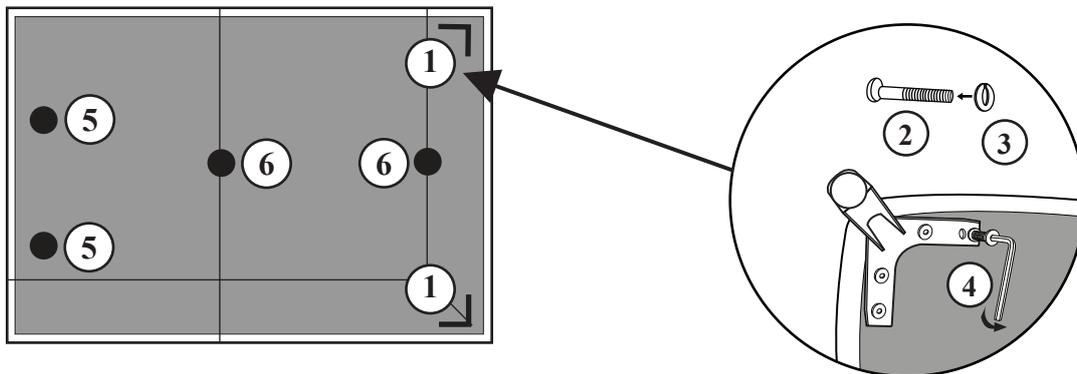


STEP#2


Place the cap screw from the end through the plastic leg, insert the gasket onto the leg. Rotate clockwise to tighten the leg. After that rotate clockwise to tighten the adjustable leg. Turn the leveler at the bottom of support leg to adjust the height to be level with floor.

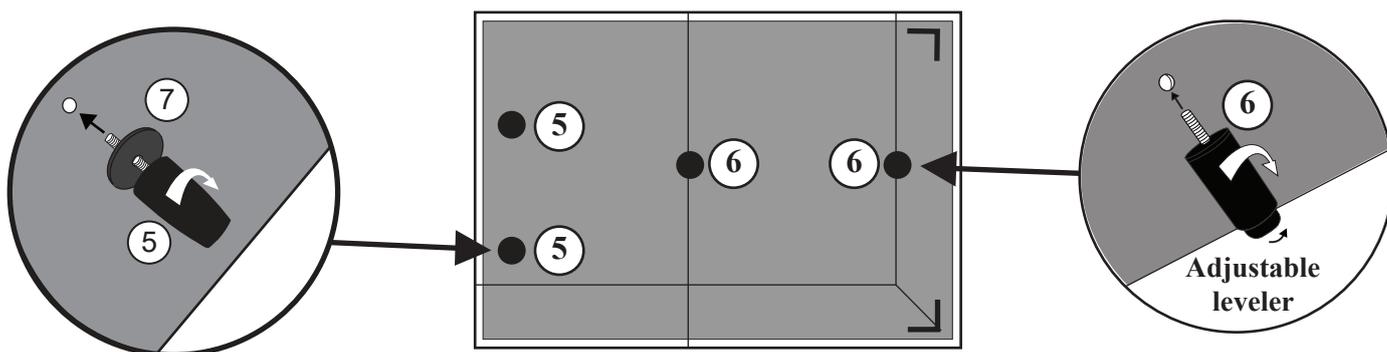

STEP#3

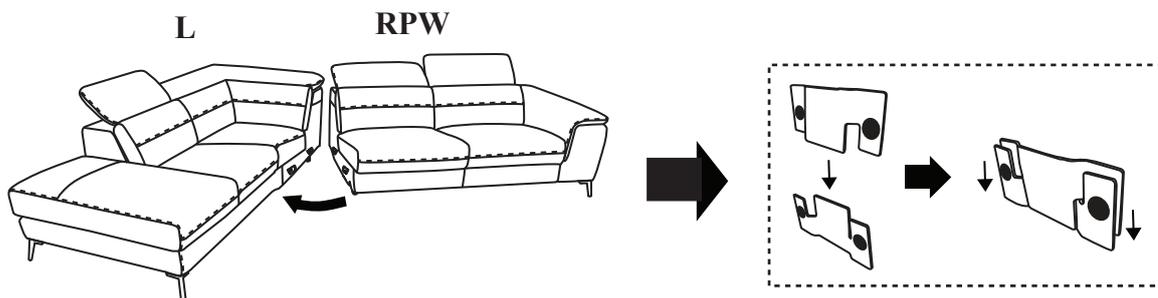

STEP#4

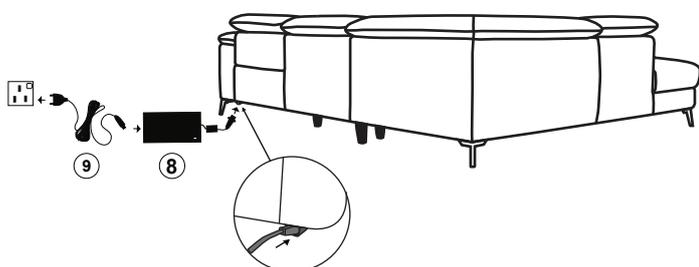

STEP#5

Completed.

**CARE INSTRUCTION FOR GENUINE ALL LEATHER:**

In order to maintain the original appearance of your leather furniture, please follow below simple care procedure :

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage leather.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.


WARNING

- Disconnect the electrical plug from the wall outlet before cleaning, moving, servicing or when not in use for an extended period of time.
- Plug directly into a wall outlet. Do not use an extension cord or adaptor.
- Check the condition of the power transformers, electrical cords, plugs and connectors monthly. Keep the power adaptor and electrical cords away from heat sources. Never operate the unit with a damaged power adaptor, electrical cord, plug or connector.
- Before moving the product, please disconnect the electrical plug from the wall outlet and secure the mechanism to prevent unexpected opening or movement. Never move the product by the mechanism, legrest, handle, or reclining back.
- Do not attempt to disassemble or service the adaptor or motor. No serviceable parts are inside.
- Do not allow electrical cord to be pinched between moving parts or between the frame and the floor. Do not place cord under carpet or in location where it could become worn.
- Unplug the power cord immediately if you detect strange odors or fumes coming from the chair.