






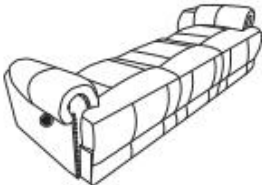


Assembly Instruction

POWER DOUBLE RECLINING SOFA W/ POWER HEADREST, USB PORT ITEM NO.: 9911DBR-3PWH


NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

 COMPONENT LIST (SOFA)

| NO. | DRAWING | QTY | DESCRIPTION |
|-----|---|-----|----------------------|
| A |  | 1 | SEAT |
| B |   LSF RSF | 2 | BACK REST LSF&RSF |
| C |  | 1 | MIDDLE BACK REST |
| D |   | 2 | LSF/RSF EAR |
| E |  | 2 | ADAPTOR |
| F |  | 2 | PLUG WITH WIRE |


STEP# 1

Insert both left and right ear to the back rest.

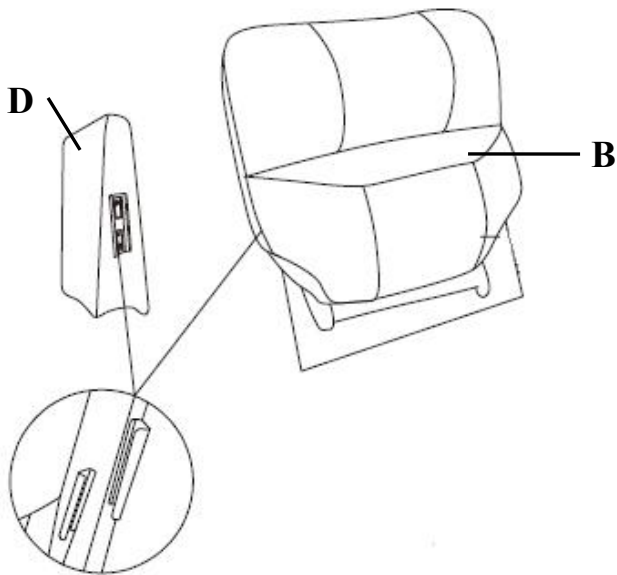

STEP# 2


Align the female brackets at the back onto the male brackets at the seat, insert back rest to the seat and make sure it is fixed in position securely.

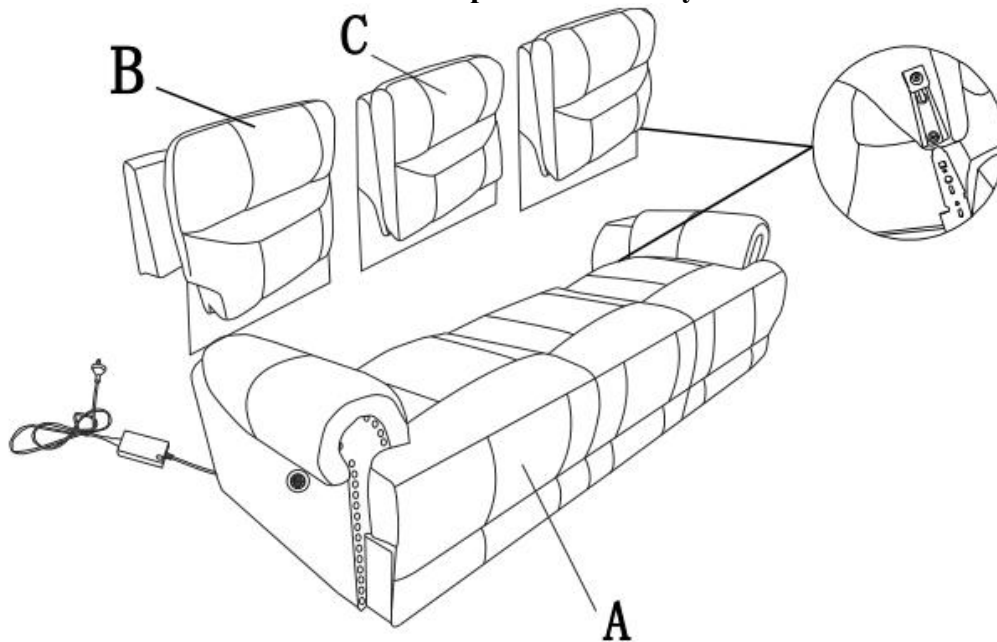


Note: Press down seat back gently until you hear a “click” to make sure it is locked in place.

STEP#3 Attach the adapter and power cord to the position as shown in the drawing properly. Sofa assembly is completed.

Button Seat with USB PORT 5V/2.1A

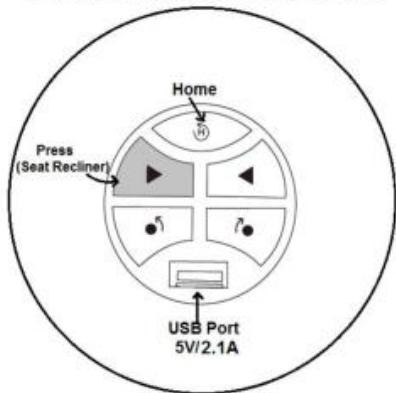


**Press to recline/close the seat
Button Headrest**

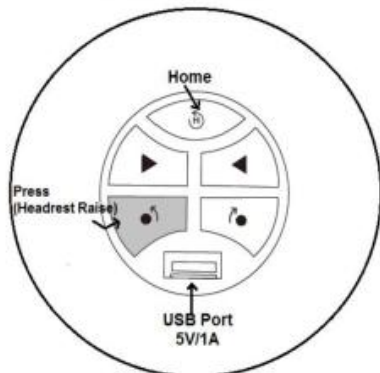

Press to adjust headrest height

**Control Switch with
USB port 5V/ 2.1A**

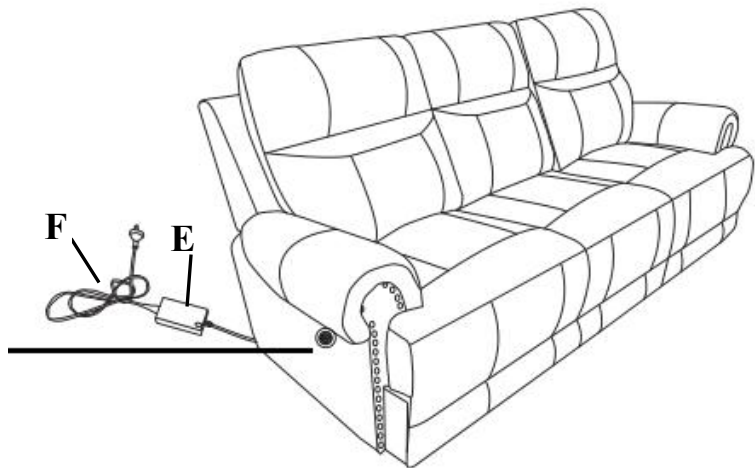

Care Instruction for polyester Furniture.

In order to maintain the original appearance of your polyester furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and/or exposure to heating and air conditioning outlets will fade/damage polyester. Do not place your polyester furniture too close to windows, radiators, or vents.
- Vacuum or wipe with a soft brush to remove dust.
- Clean polyester with professional cleanser.



For items use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.

Warning

Do not allow electrical cord to be pinched between moving parts or between the frame and the floor. Do not place cord under carpet or in location where it could become worn.