



 
 


ASSEMBLY INSTRUCTION


ITEM NO.:9433GY/RN-3 SOFA

 Legs and hardware are stored in box and place on seat, please take out for assembly.


NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.
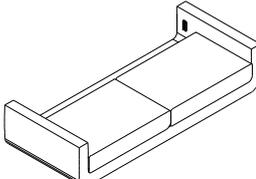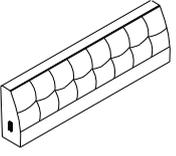
| NO. | DRAWING | QTY | DESCRIPTION |
|-----|---|-----|------------------------------------|
| A |  | 1 | SOFA |
| B |  | 1 | BACK REST |
| C |  | 4 | WOODEN LEG 2.5"*2.5"*7.25" |
| D |  | 1 | CENTER SUPPORT LEG 2.5"*2.5"*7" |
| E |  | 12 | BOLT 5/16"*3/4" |
| F |  | 12 | FLAT WASHER 5/16"*19 |
| G |  | 12 | SPRING WASHER 5/16"*12 |
| H |  | 1 | ALLEN KEY 5/16" |


STEP 1:

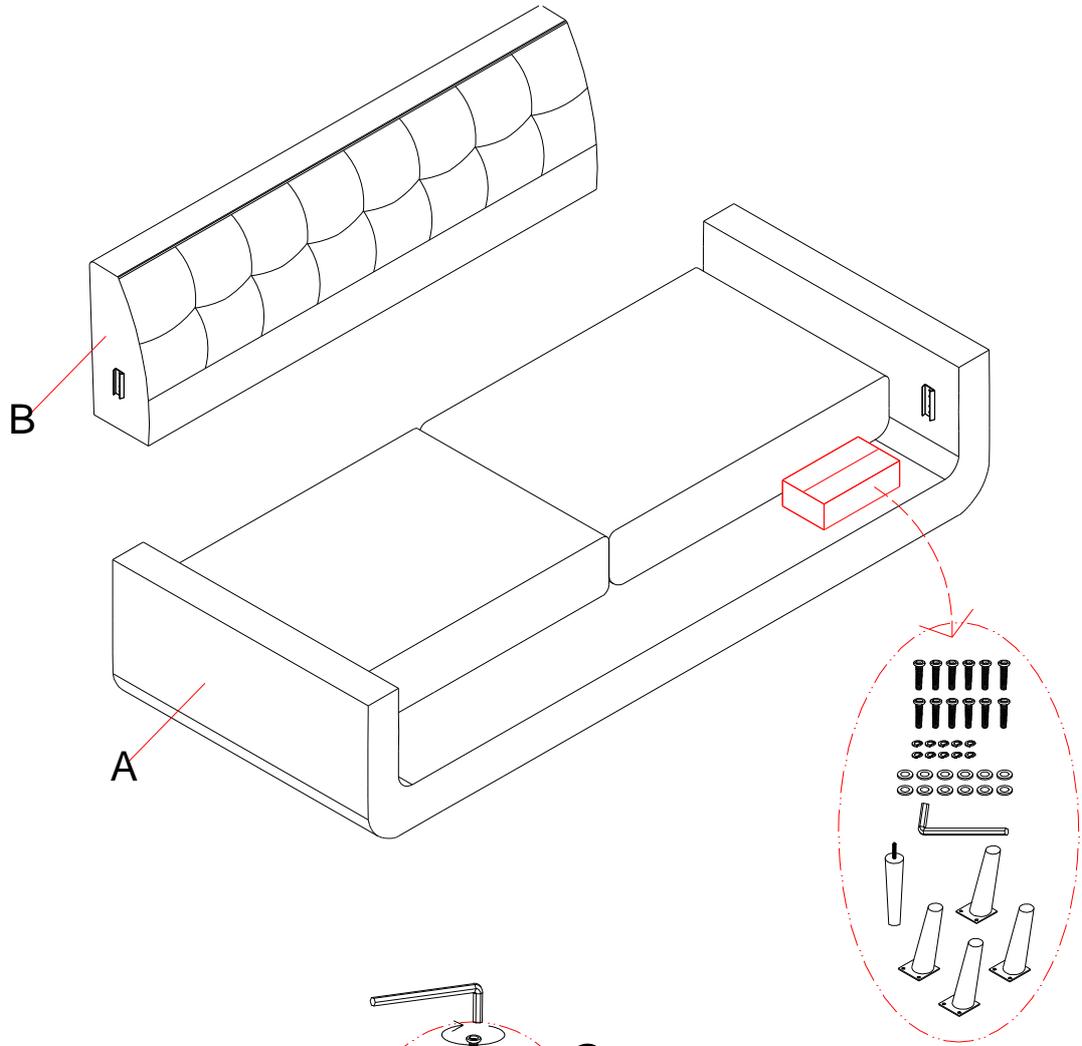


STEP 2:

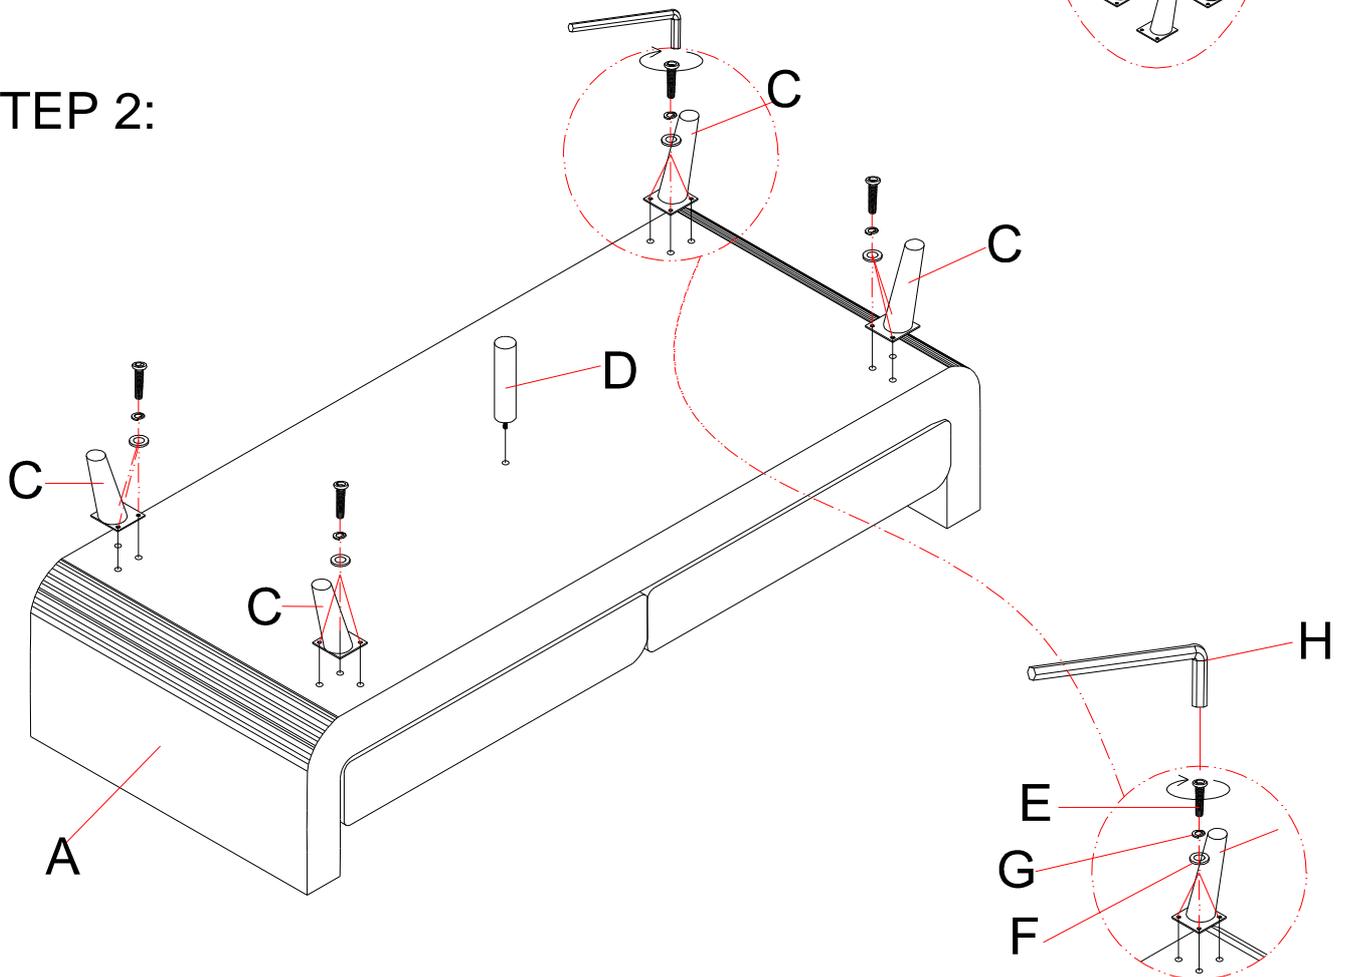

STEP 3:

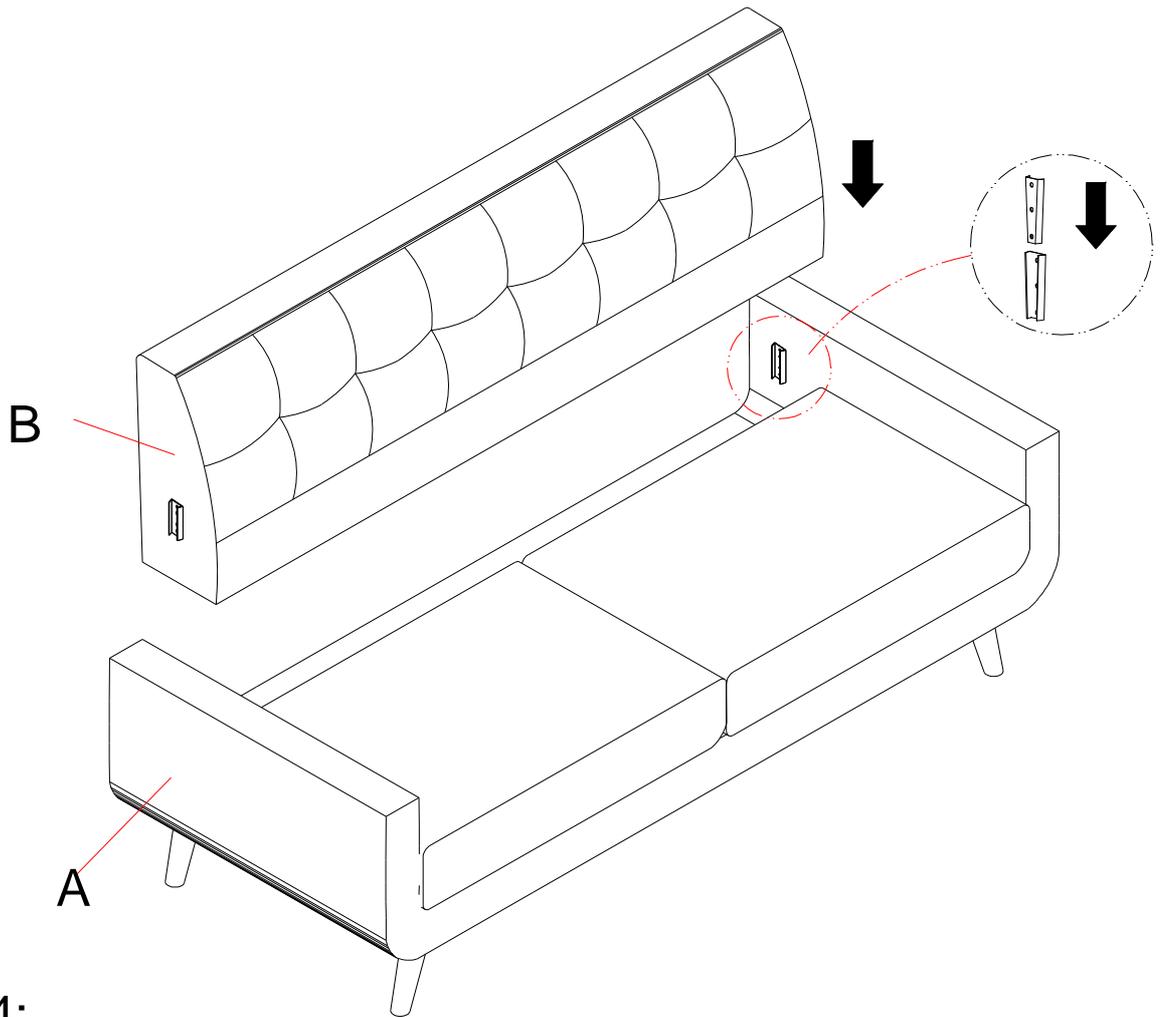

STEP 4:

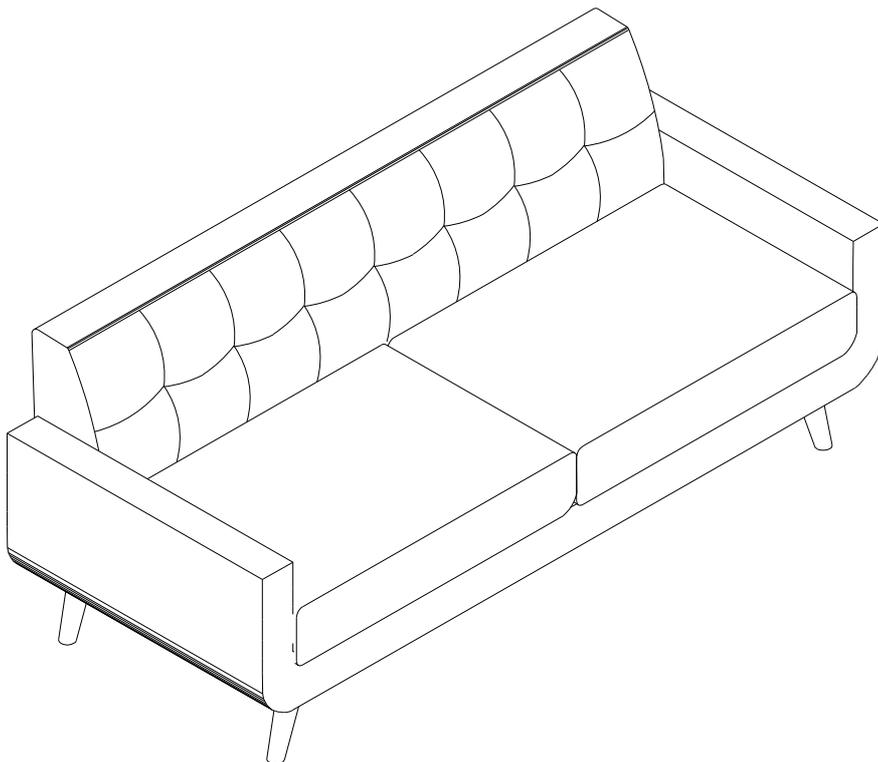

Care instruction for 100% polyester furniture.

In order to maintain the original appearance of your 100% polyester furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and air conditioning outlets will fade/damage fabric.
- Do not place your upholstered furniture too close to windows, radiators, or vents, and be sure to use windows, radiators, or vents.
- Vacuum or wipe with a cloth regularly to remove dust.



For items used on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches discoloration.