



STEP 1:

ASSEMBLY INSTRUCTIONS

ITEM NO:8557GY-4 Ottoman



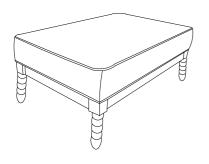




It is recommended to install protective pads under all legs and support to avoid damage or scratches when placing furniture on a wood floor or orther hard surface, and to limit Indentation and prevent discoloration if placing on carpet.

PARTS LIST				
NO.	DESCRIPTION	DRAWING	QTY	
A	SEAT CUSHION		1 PC	
В	WOODEN LEG 11.5"×2.3"×2.3"		4 PCS	

HARDWARE LIST					
No.	SKETCH	SIZE	QTY		
1		BOLT (Ø5/16"-32 *1-30/32"L)	8 PCS		
2	©	SPRING WASHER (Ø5/16 ×1.2mmL)	8 PCS		
3		FLAT WASHER (Ø5/16×19mmL)	8 PCS		
4		ALLEN KEY (M4×60mmL)	1 PCS		

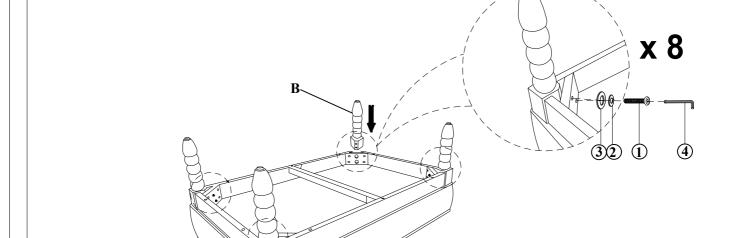


MADE IN VIETNAM
PAGE 1 OF 2

HOMEUEGANCE

ASSEMBLY INSTRUCTIONS

ITEM NO:8557GY-4 Ottoman

STEP 2:

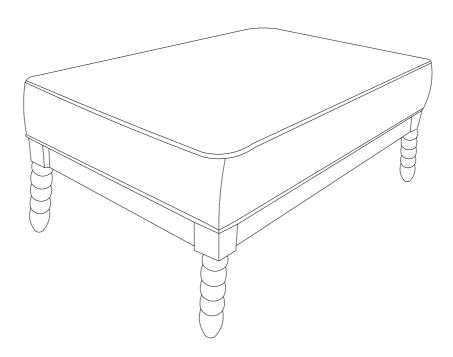

Care Instruction for Textured Furniture:

In order to maintain the original appearance of your Textured Furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and air conditioning outlets will fade/damage Textured.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connection are tight, Re-tighten if necessary.



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.

MADE IN VIETNAM

PAGE 2 OF 2