HOMELEGANCE

Assembly Instructions

ITEM NO: 1082BE-1 ACCENT CHAIR, BEIGE CHENILLE FABRIC




Hardware are stored in the box, please take out for assembly.


Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to spliting or cracking the wood.

| PART | DRAWING | DESCRIPTION | QTY |
|------|---------|--------------|------|
| А | | SEAT | 1 PC |
| В | | CHAIR BACK | 1 PC |
| С | | RSF ARM | 1 PC |
| D | | LSF ARM | 1 PC |
| E | | SEAT CUSHION | 1 PC |
| F | | BACK CUSHION | 1 PC |


| PART | DRAWING | DESCRIPTION | QTY |
|------|------------|---------------------------|--------|
| 1 | | BOLT (Ø5/16" *1-1/2") | 10 PCS |
| 2 | | SPRING WASHER (Ø5/16") | 10 PCS |
| 3 | 0 | FLAT WASHER (Ø5/16") | 10 PCS |
| 4 | | ALLEN KEY (M4) | 1 PC |
| 5 | \bigcirc | WOOD PLUG Ø3/5" *2/5" | 2 PCS |



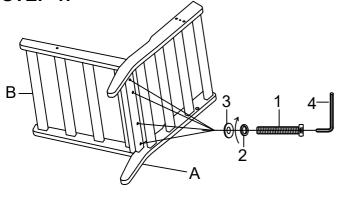


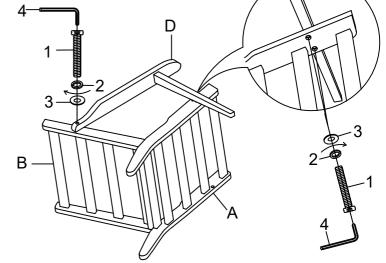

MADE IN VIETNAM Page: 1/2

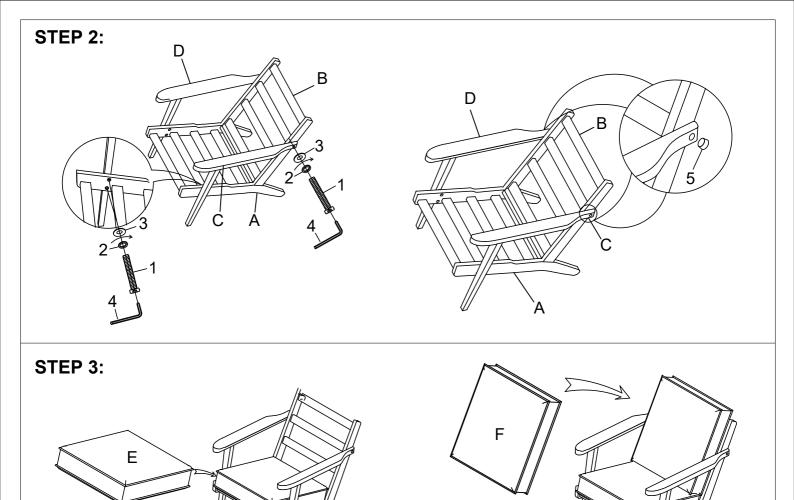



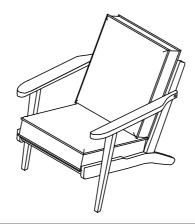

Care Instruction for Chenille Furniture:

In order to maintain the original appearance of your Chenille Furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and air conditioning outlets will fade/damage Chenille.
- · Vacuum or wipe with a soft cloth to remove dust.



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.

MADE IN VIETNAM Page: 2/2