

ASSEMBLY INSTRUCTION


ITEM NO:1255F1S

ACCENT CHAIR




STEP 1:


No	DESCRIPTION	Q'TY
A	CHAIR BACK	1pc
B	SEAT	1pc
C	FRONT LEG	2pcs
D	LOCK WASHER Ø 5/16	10pcs
E	FLAT WASHER Ø 5/16"	10pcs
F	BOLT Ø 5/16x3-1/4"	4pcs
G	BOLT Ø 5/16x2"	2pcs
H	BOLT Ø 5/16x2-1/2"	4pcs
I	ALLEN WRENCH Ø 5/16"	1pc

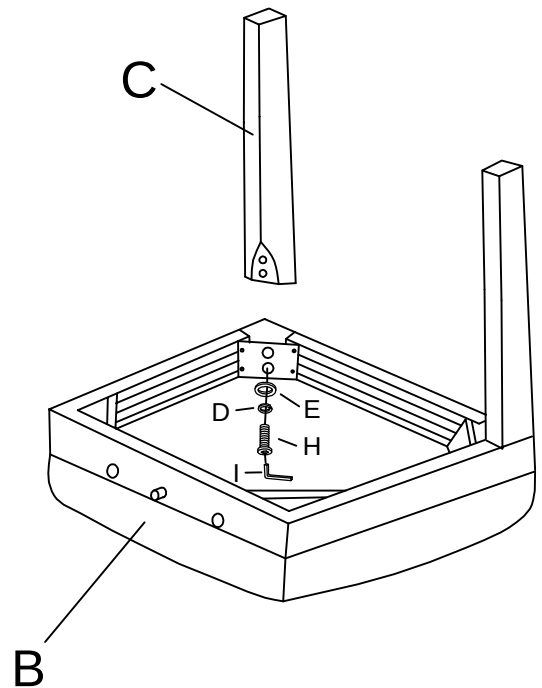


STEP 2:

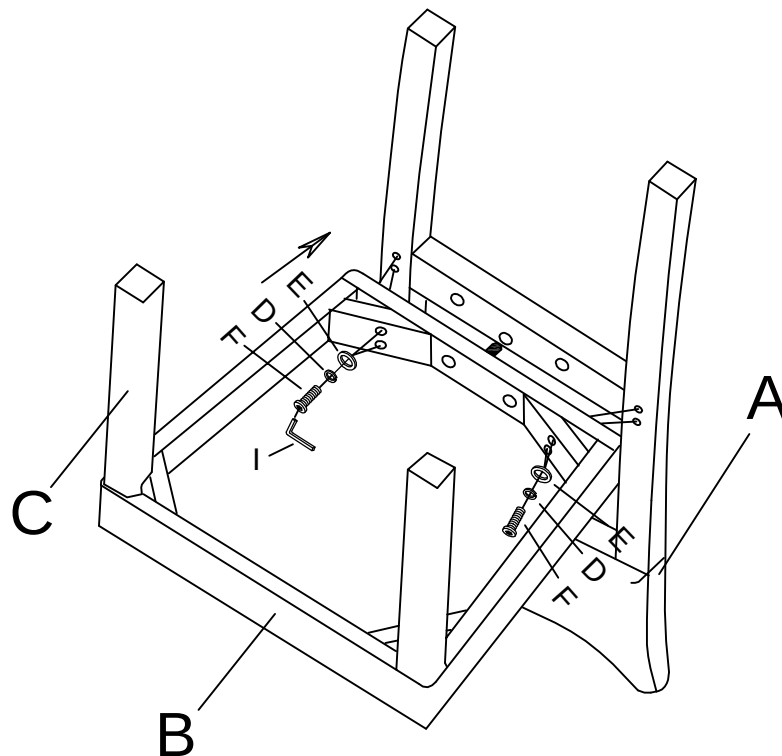

STEP 3:

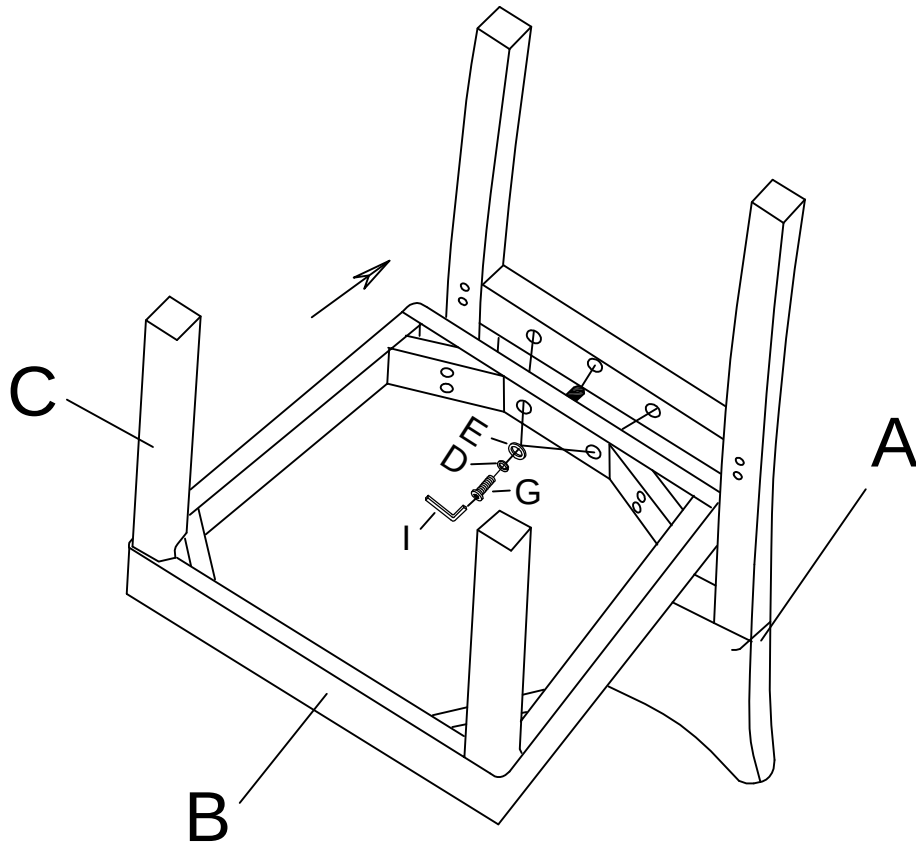

STEP 4: Completed

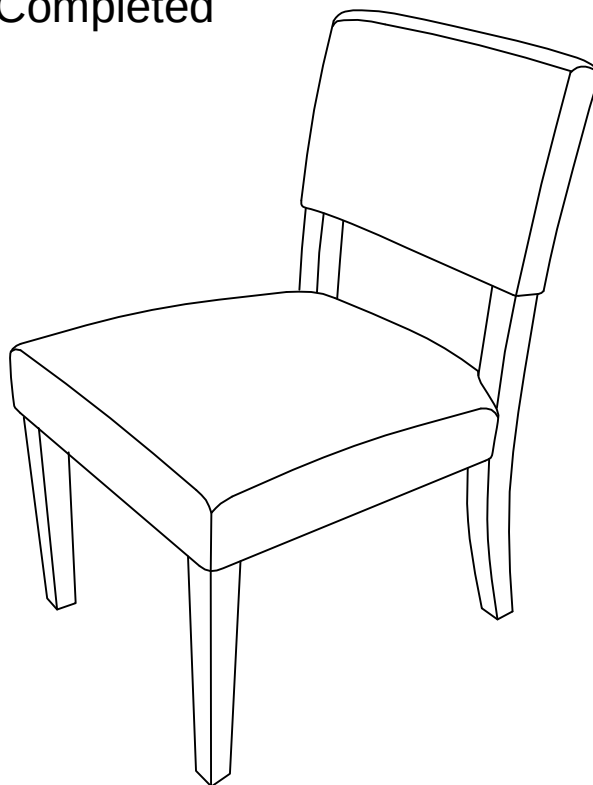

DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED