

# ASSEMBLY INSTRUCTIONS

ITEM: 2505BK-36











3PC COUNTER HEIGHT TABLE SET







This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

**cleaning & care** Treat surface with care. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

# TABLE PARTS & HARDWARE LIST

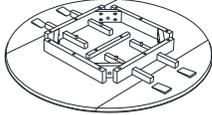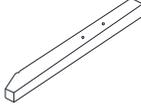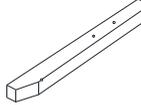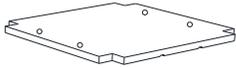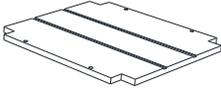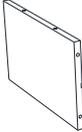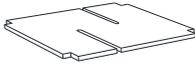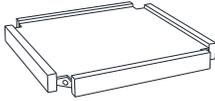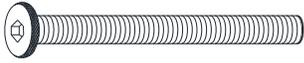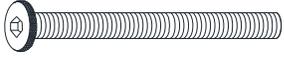A. TABLE TOP	B. TABLE LEG	C. TABLE LEG
	 (LEFT FRONT / RIGHT BACK)	 (RIGHT FRONT / LEFT BACK)
QTY: 1 PC	QTY: 2 PCS	QTY: 2 PCS
D. BOTTOM PANEL	E. TOP PANEL	F. SIDE PANEL
		
QTY: 1 PC	QTY: 1 PC	QTY: 2 PCS
G. MIDDLE PANEL	H. DIVIDER PANEL	I. BASE SHELF
		
QTY: 1 PC	QTY: 2 PCS	QTY: 1 PC
1. BOLT 5/16" Dia x 2-1/2"L	2. SPRING WASHER	3. FLAT WASHER
		
QTY: 8 PCS	QTY: 8 PCS	QTY: 8 PCS
4. BOLT 1/4" Dia x 2"L	5. CAM LOCK	6. METAL DOWEL SCREW
		
QTY: 4 PCS	QTY: 4 PCS	QTY: 4 PCS
7. "T" NUT	8. WOOD DOWEL	9. ALLEN KEY
		
QTY: 4 PCS	QTY: 8 PCS	QTY: 1 PC

# CHAIR PARTS & HARDWARE LIST

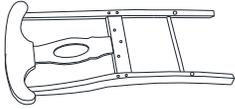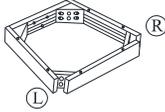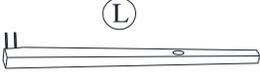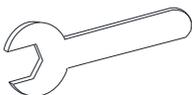J. CHAIR BACK FRAME	K. SEAT BOARD	L. SEAT FRAME
		
QTY: 2 PCS	QTY: 2 PCS	QTY: 2 PCS
M. CHAIR FRONT LEFT LEG	N. CHAIR FRONT RIGHT LEG	O. FRONT CROSSBAR
		
QTY: 2 PCS	QTY: 2 PCS	QTY: 2 PCS
P. SIDE CROSSBAR	10. LONG BOLT 1/4" Dia x 3"L	2. SPRING WASHER
		
QTY: 4 PCS	QTY: 8 PCS	QTY: 22 PCS
3. FLAT WASHER	11. SHORT BOLT 1/4" Dia x 1-3/4"L	12. HEX NUT
		
QTY: 22 PCS	QTY: 6 PCS	QTY: 8 PCS
13. WOOD SCREW	14. OPEN END WRENCH	
		
QTY: 24 PCS	QTY: 1 PC	

# TABLE ASSEMBLY INSTRUCTIONS

REQUIRED HARDWARE IN THIS STEP			
NO.	DESCRIPTION	SKETCH	QTY
5	CAM LOCK		4
6	METAL DOWEL SCREW		4

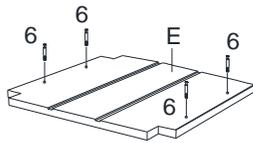


Diagram #1

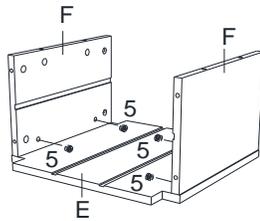


Diagram #2

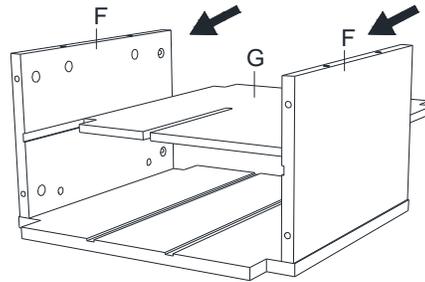


Diagram #3

REQUIRED HARDWARE IN THIS STEP			
NO.	DESCRIPTION	SKETCH	QTY
4	BOLT		4
7	NUT		4
9	ALLEN KEY		1


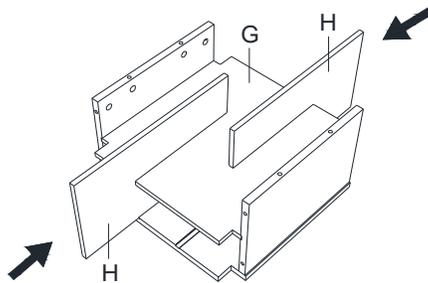


Diagram #4

Diagram #5

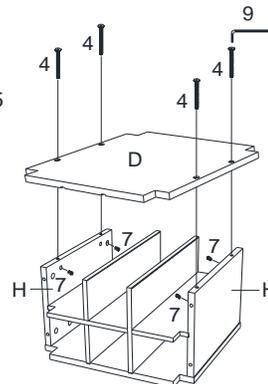

1. Screw the 4 metal dowel screw (6) into the pre drilled plastic hole. Attach side panels (F) to the top panel (E) using 4 cam locks (5) and 4 metal dowel screws (6) as shown.
2. Attach the middle panel (G) to the assembled from diagram #3 as shown.
3. Attach the divider panels (H) into the groove on the middle panel (G) as shown.
4. Attach bottom panel (D) to the assembled from diagram #5 using 4 "T" nut (7) and 4 bolts (4) as shown. Tightly fasten the bolts using Allen key (9).

# TABLE ASSEMBLY INSTRUCTIONS

REQUIRED HARDWARE IN THIS STEP			
NO.	DESCRIPTION	SKETCH	QTY
8	WOOD DOWEL		4

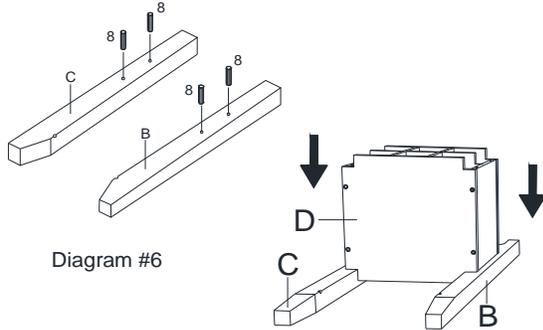


Diagram #6

Diagram #7

REQUIRED HARDWARE IN THIS STEP			
NO.	DESCRIPTION	SKETCH	QTY
1	BOLT		2
2	SPRING WASHER		2
3	FLAT WASHER		2
9	ALLEN KEY		1

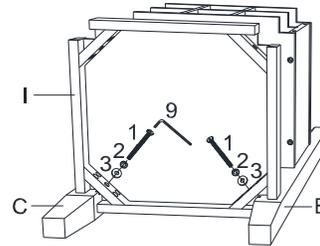


Diagram #8

REQUIRED HARDWARE IN THIS STEP			
NO.	DESCRIPTION	SKETCH	QTY
1	BOLT		2
2	SPRING WASHER		2
3	FLAT WASHER		2
8	WOOD DOWEL		4
9	ALLEN KEY		1


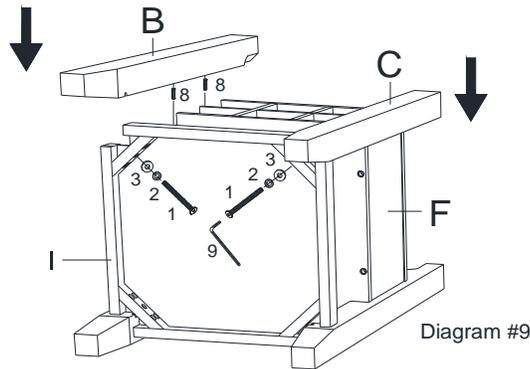


Diagram #9


- Attach bottom panel (D) to the assembled from diagram #7 using wood dowel (8) as shown.
- Attach base panel (I) to table legs (B&C) using 2 spring washers (2), 2 flat washers (3), 2 bolts (1) as shown. Tightly fasten the bolts using Allen key (9).
- Attach table legs (B&C) to base panel (I) and side panel (F) using 4 wood dowel (8), 2 spring washers (2), 2 flat washers (3) and 2 bolts (1) as shown. Tightly fasten the bolts using Allen key (9).

# TABLE ASSEMBLY INSTRUCTIONS

Diagram #10

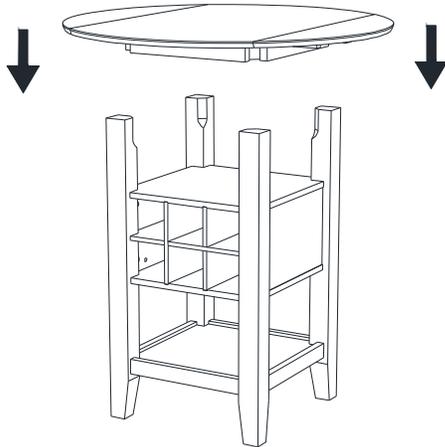

REQUIRED HARDWARE IN THIS STEP			
NO.	DESCRIPTION	SKETCH	QTY
1	BOLT		2
2	SPRING WASHER		2
3	FLAT WASHER		2
9	ALLEN KEY		1

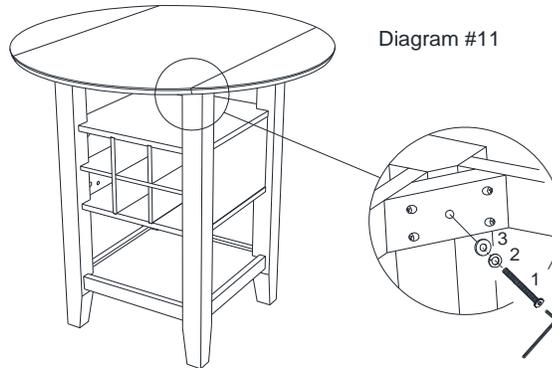

8. turn the table base upright. Place the table top (A) on the table legs as shown.
9. secure the table top (A) to the table base using 4 bolts (1), 4 spring washers (2) and 4 flat washers (3) as shown. Tightly fasten the bolts using Allen key (9).



Diagram #12

10. The table is now ready for use.

# CHAIR ASSEMBLY INSTRUCTIONS

REQUIRED HARDWARE IN THIS STEP			
NO.	DESCRIPTION	SKETCH	QTY
2	SPRING WASHER	⊗	7
3	FLAT WASHER	⊙	7
10	LONG BOLT		4
11	SHORT BOLT		3

REQUIRED HARDWARE IN THIS STEP			
NO.	DESCRIPTION	SKETCH	QTY
13	WOOD SCREW		6

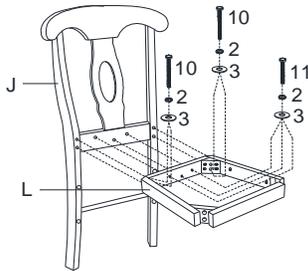


Diagram #1

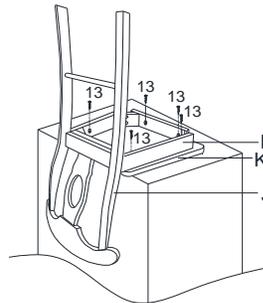


Diagram #2

REQUIRED HARDWARE IN THIS STEP			
NO.	DESCRIPTION	SKETCH	QTY
2	SPRING WASHER	⊗	4
3	FLAT WASHER	⊙	4
12	HEX NUT		4
14	OPEN END WRENCH		1

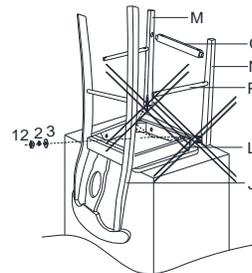


Diagram #3

1. Attach seat frame (L) to back frame (J) using 7 spring washers (2), 7 flat washers (3), 3 short bolts (11) and 4 long bolts (10) as shown. Do not tighten at this point.

Note: Use the 3 short bolts (11) in the 3 holes near the center of the back of the seat frame (L) and the 4 long bolts (10) in the back corners of the seat frame (L).

2. Place seat board (K) upside down on a non-abrasive table surface. The rear (tapered end) of the seat board (K) should be near the table edge.

Hint: Protect the non-abrasive table surface and seat board (K) by laying a towel in-between the chair seat and table.

3. Place the assembled chair frame on the seat board (K) as shown. Attach with 6 wood screws (13).
4. Attach the left and right front legs (M&N) to seat frame (L) using 4 spring washers (2), 4 flat washers (3), and 4 hex nuts (12) as shown. Do not tighten at this point.
5. Insert the front crossbar (O) into the oval holes of left and right front legs (M&N) as shown. The small holes on the edge of the crossbar need to face towards the bottom of the leg.
6. Insert side crossbars (P) into the round holes of left and right front legs (M&N) and back frame (J). The small holes on the bottom of the crossbars must face the bottom of the chair.

# CHAIR ASSEMBLY INSTRUCTIONS

REQUIRED HARDWARE IN THIS STEP			
NO.	DESCRIPTION	SKETCH	QTY
13	WOOD SCREW		6

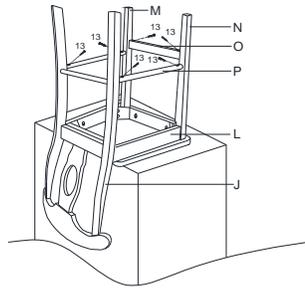


Diagram #4

7. Turn the chair upright. Make sure the assembled chair unit is level and square. Tightly fasten all bolts with the open-end wrench (4).
8. Secure the front and side crossbars (P) to their chair legs with 6 wood screws (13).

Note: Screwing the wood screws (13) to secure the front crossbar (O) by first. Then make sure the small holes on the bottom of side crossbars (P) are partial inside, screwing the wood screws (13) to secure the side crossbars (P).

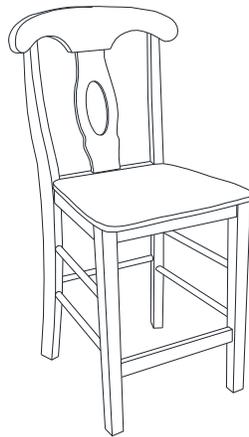


Diagram #5

9. The Chair is now ready for use.
10. Repeat steps 1 to 8 to assemble the other chair.

Printed in Vietnam