



ASSEMBLY INSTRUCTION INSTRUCTIONS DE MONTAGE

1719-6 MIRROR / MIROIR

Thank you for purchasing this product. Please take time to read and follow the instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in the packing materials. If you do not have all the parts listed, have your dealer contact us and they will be sent to you immediately.



It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.

Merci d'avoir acheté ce produit de qualité. Vérifiez avant le montage que vous avez toutes les pièces et fixations. Les pièces qui semblent manquer se trouvent souvent dans les matériaux d'emballage. Si vous n'avez pas toutes les pièces de la liste, demandez à votre détaillant et nous vous les enverrons immédiatement.




Il est recommandé de placer des coussins protecteurs sous tous les pieds et toutes les bases des meubles pour éviter d'endommager ou d'égratigner les planchers en bois ou autres surfaces dures, et pour limiter l'empreinte et empêcher la décoloration quand les meubles reposent sur la moquette.

PART LIST /LISTE DE PIECES			
A		MIRROR / MIROIR	1PC
B		DRESSER / BUREAU	1PC
C		MIRROR SUPPORT/ SUPPORT	2PCS

HARDWARE LIST /LISTE DE QUINCAILLERIE			
1		Allen Key / Clé Allen 57mmLx4mm	1PC
2		Bolt / Boulon Ø1/4"x1-1/2"	8PCS
3		Lock Washer / Rondelle D' Arret Ø1/4"x13mmWx1.2mmT	8PCS
4		Flat Washer / Rondelle Plate Ø1/4"xØ19mmWx1.8mmT	8PCS


* HARDWARE SETS IS IN 1719-6 FOR ASSEMBLY

Step 1/ Étape 1

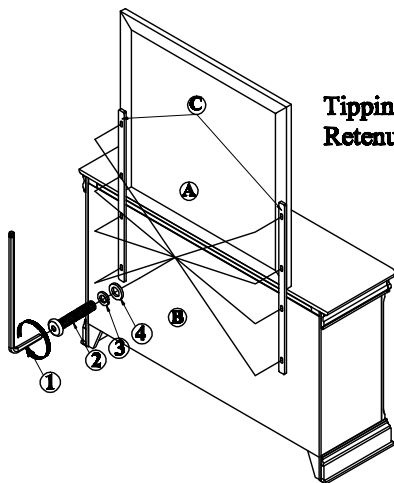


Step 2/ Étape 2

Tipping Restraint/
Retenue de basculement

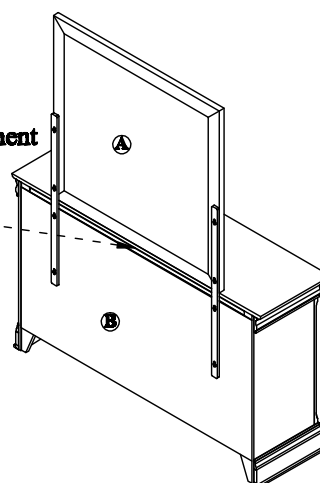

Completed

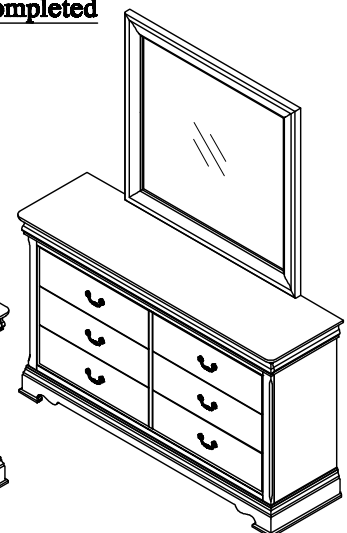

NOTE

Tipping Restraint hardware kit is included with this product .Refer to installation instruction in the hardware pack.

*Anti-tipping hardware pack is at the back panel .

MADE IN VIETNAM /FABRIQUER AU VIETNAM