



Autodesk Assembly Instruction

ITEM#: 1788 - 5 DRESSER
1788 - 6 MIRROR

PART LIST

1	DRESSER	1PC
2	MIDDLE SUPPORT LEG	1PC
3	MIRROR	1PC
4	MIRROR SUPPORT	2PCS


ANTI-TIPPING HARDWARE PACK

A		BRACKET	2PCS
B		TIE WRAP	1PC
C		SCREW #8x2"L	1PC
D		SCREW #8x5/8"L	1PC


HARDWARE LIST IN -6

E		BOLT Ø1/4"x1 3/8"L	8PCS
F		SPRING WASHER Ø1/2"xØ1/4"	8PCS
G		FLAT WASHER Ø3/4"xØ1/4"	8PCS
H		ALLEN KEY 1/4"	1PC


STEP 1

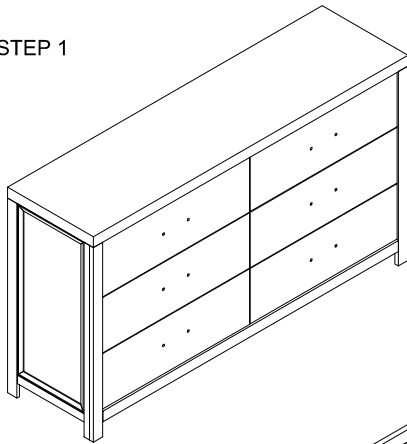


STEP 2

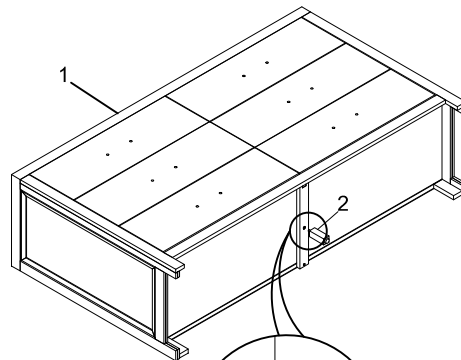


STEP 3

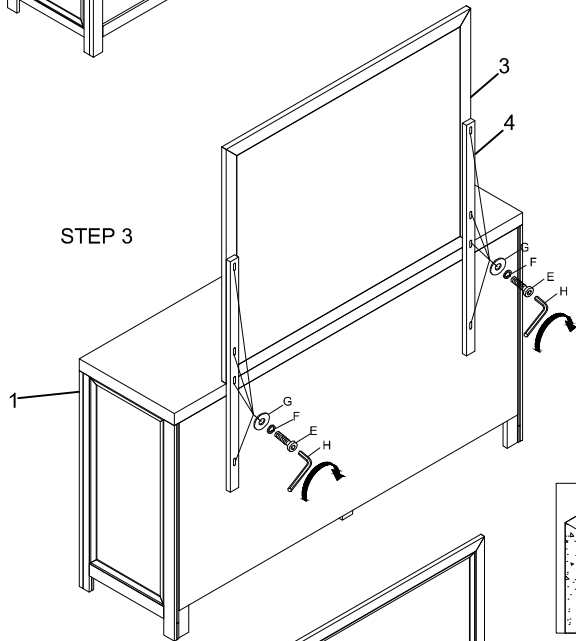

STEP 5

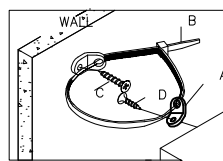

STEP 4

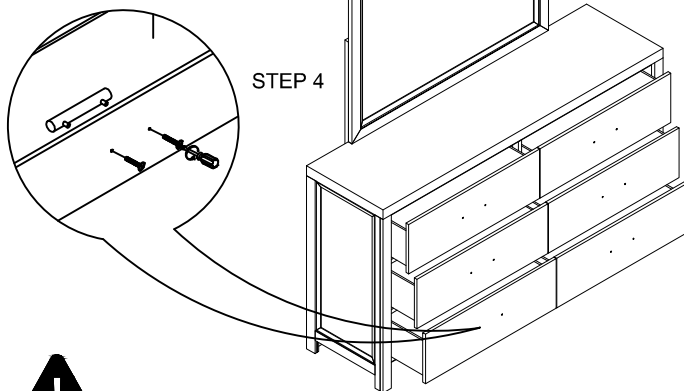

Assembly completed



**For items use on wooden floor hard surfaces or carpets
It is recommended to install protective pads under all legs and supports
to avoid/prevent from damages/scratches and discoloration**

MADE IN VIETNAM

Autodesk

Autodesk

Autodesk