


ASSEMBLING INSTRUCTIONS


ITEM NO: 9169DGY-3 SOFA



LEGS AND HARDWARE ARE STORED IN THE BOTTOM OF THE SEAT, PLEASE TAKE OUT FOR ASSEMBLY.

NO.	DRAWING	DESCRIPTION	QTY	NO.	DRAWING	DESCRIPTION	QTY
A		Seat Frame	1 PC	F		Wooden Support Leg	1 PC
B		Back Frame	1 PC	G		Allen Bolt ØM8*30mm	12 PCS
C		Seat Cushion	3 PCS	H		Lock Washer M8	12 PCS
D		Back Cushion	3 PCS	I		Flat Washer M8*Ø16*1.5mm	12 PCS
E		Wooden Leg	4 PCS	J		Allen Key M5*100*38mm	1 PC


STEP 1: Location of KD parts
Take out legs from the zippered pocket.

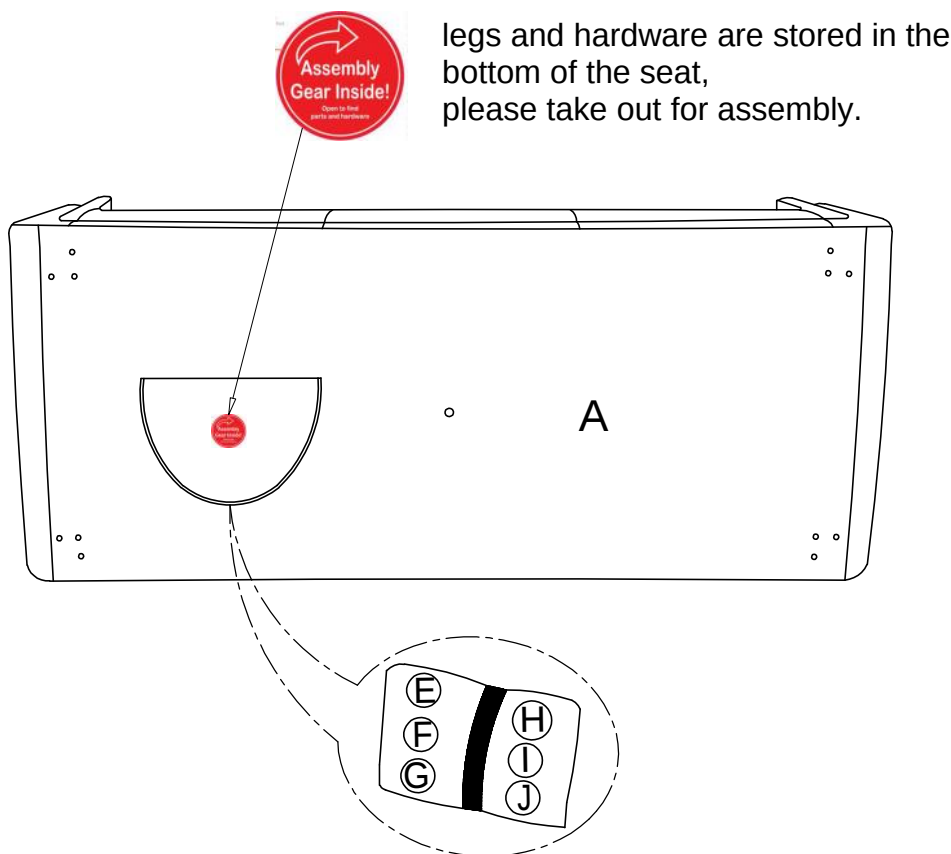


ASSEMBLING INSTRUCTIONS

ITEM NO: 9169DGY-3 SOFA

STEP 2: Use Allen Bolt (G), Lock Washer (H), Flat Washer (I) and Allen Key (J) to fix Wooden Leg (E) on Seat Frame (A). Wooden Support Leg (F) tightly by hand.

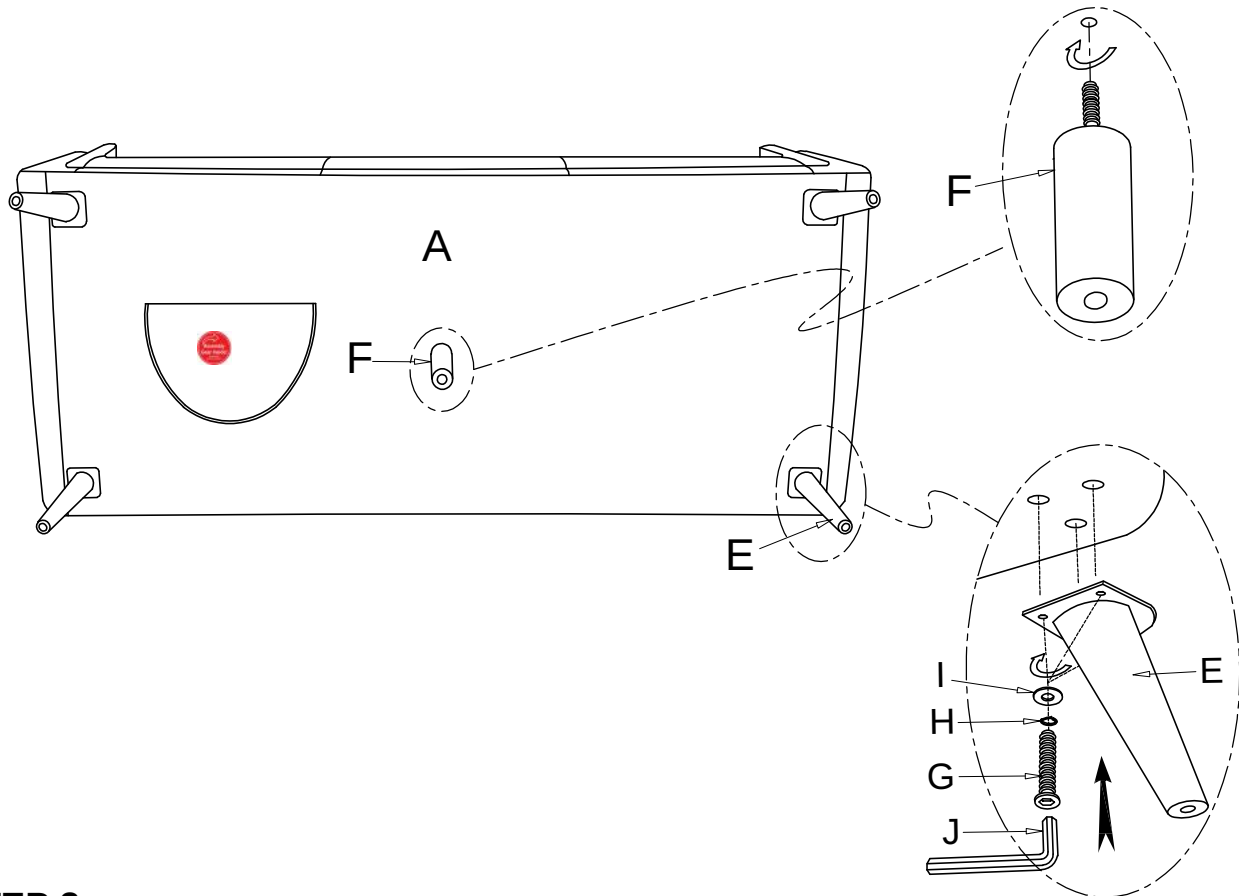


STEP 3: Attach Back (B) to Seat Frame (A).

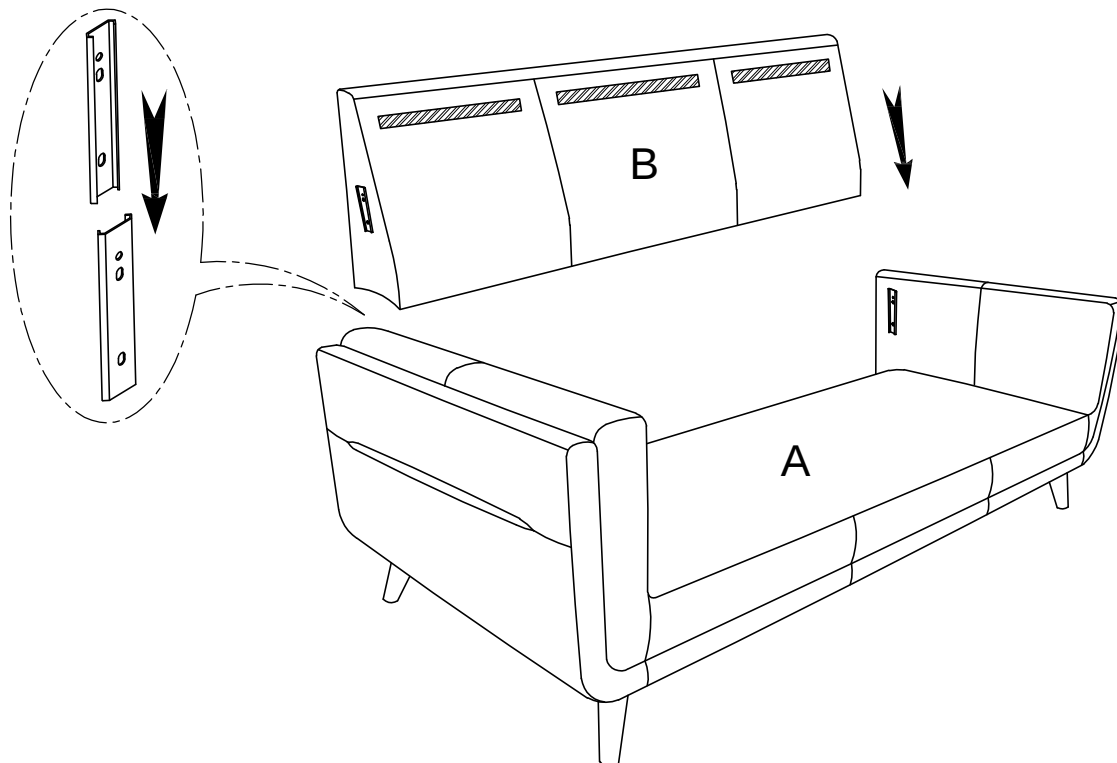


ASSEMBLING INSTRUCTIONS

ITEM NO: 9169DGY-3 SOFA

STEP 4: Attach Seat Cushion (C) and Back Cushion (D) to Seat Frame (A).

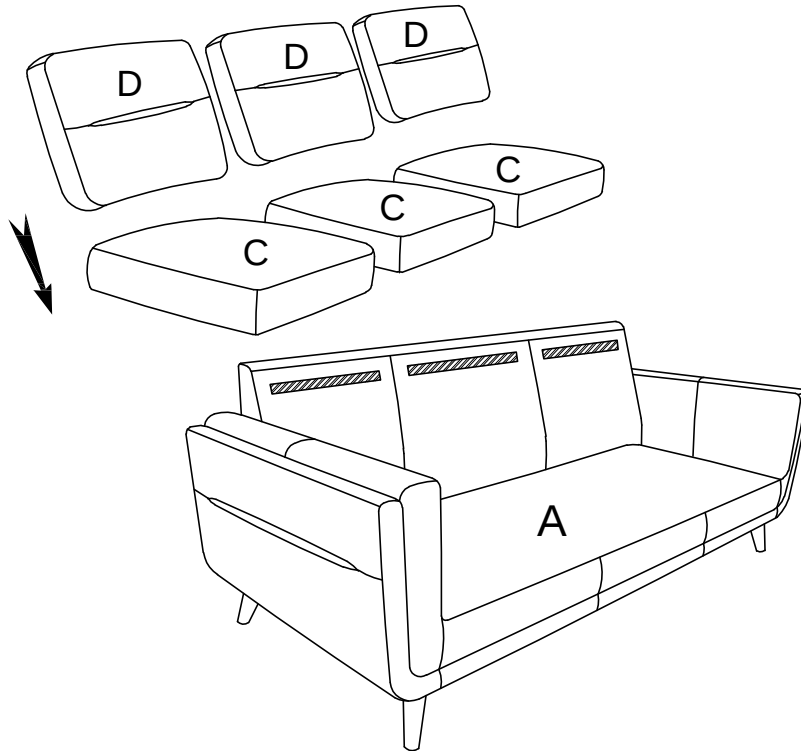

STEP 5: Completed.

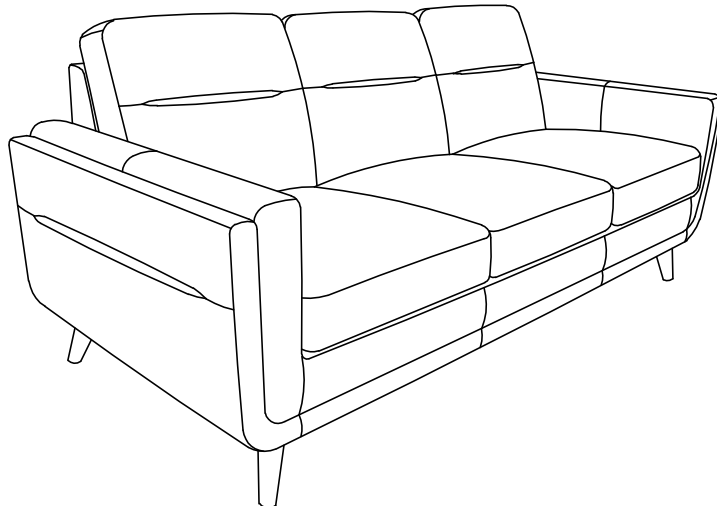

CARE INSTRUCTION FOR LEATHER FURNITURE

In order to maintain the original appearance of your furniture, please follow below care procedures.

°Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. sunlight and/ or exposure to heating and air conditioning outlets will fade/damage leather. Do not place your upholstered furniture too close to windows, radiators, vents and be sure to use window treatments to block the sun's rays

°Wipe with a soft brush to remove dust

*Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.

*For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and Supports to avoid/prevent from damages/scratches and discoloration.