





ASSEMBLY INSTRUCTION



ITEM NO: 1600-1 QUEEN HB
1600-2 QUEEN FB & SLATS
1600-3 QUEEN/E KING RAILS

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


PART LIST			
NO.	Description	Sketch	Q'ty
A	HEADBOARD		1PC
B-1	HEADBOARD LEG(LSF)		1PC
B-2	HEADBOARD LEG(RSF)		1PC
C	FOOTBOARD		1PC
D	FOOTBOARD LEG		2PCS
E-1	SIDE RAILS(LSF)		1PC
E-2	SIDE RAILS(RSF)		1PC
F	SUPPORT BAR		1PC
G	SUPPORT LEGS		6PCS
H	SLAT ROLL(13 PCS)		1 SET

HARDWARE LIST (PUT IN 1600-1 CARTON)				
NO.	Description	Sketch	Size	Q'ty
1	BOLT		Ø5/16"*18*2 1/2"	6PCS
2	SPRING WASHER		Ø5/16"*12*1/23"	6PCS
3	FLAT WASHER		Ø5/16"*19*3/38"	6PCS
4	ALLEN KEY		1/6"	1PCS


HARDWARE LIST (PUT IN 1600-2 CARTON)				
5	BOLT		5/16"*18*2 "	16PCS
6	SPRING WASHER		Ø5/16"*12D*1/23"	16PCS
7	FLAT WASHER		Ø5/16"*19D*3/38"	16PCS
8	ALLEN KEY		1/6"	1PCS
9	SCREW		5/32"*1 1/4"	26PCS
10	SCREW		5/32"*2"	4PCS

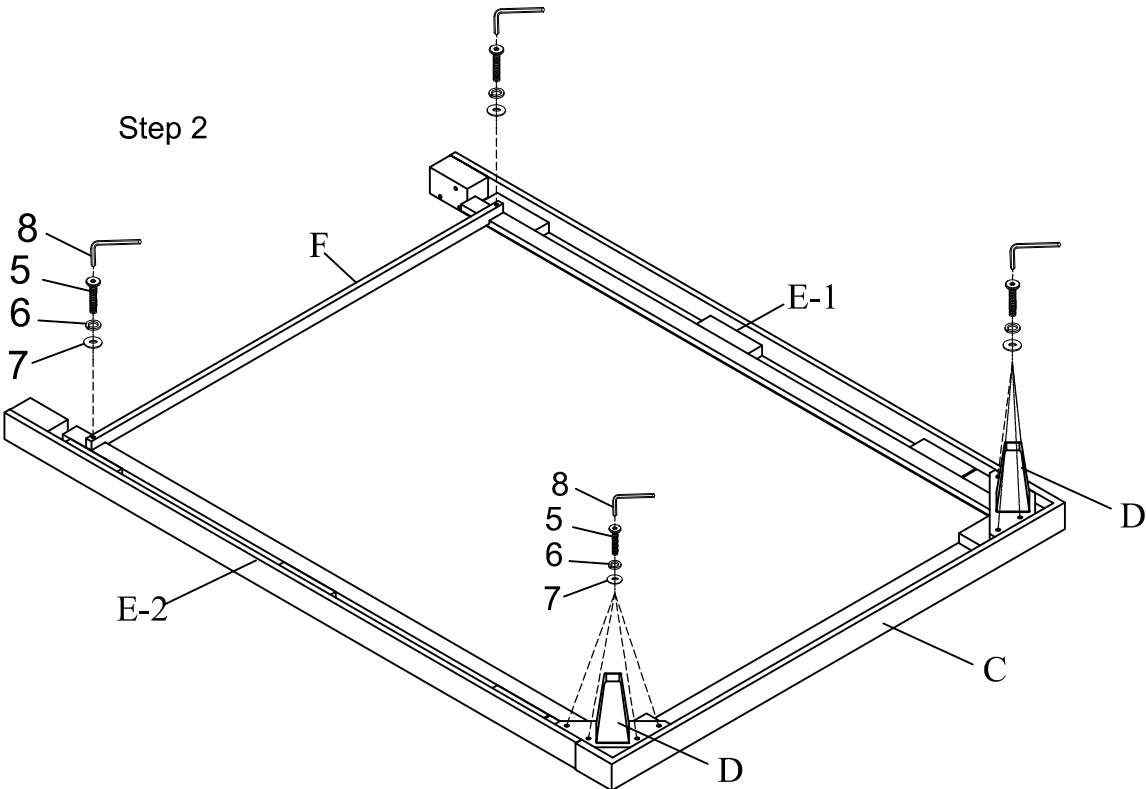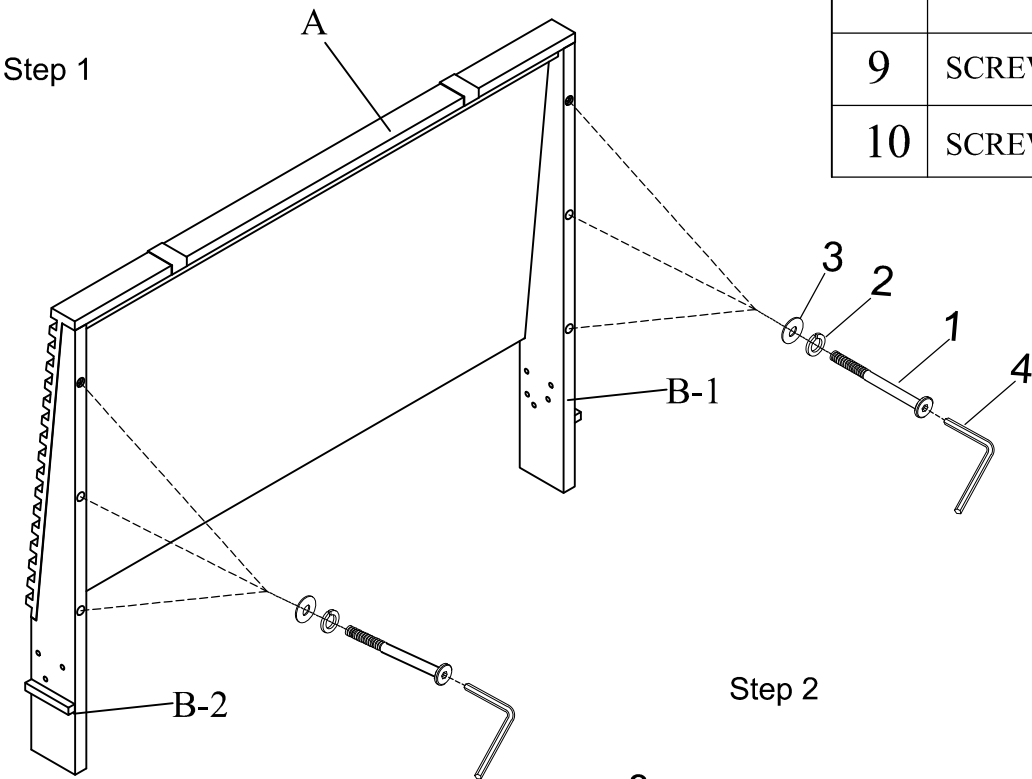


Step 3

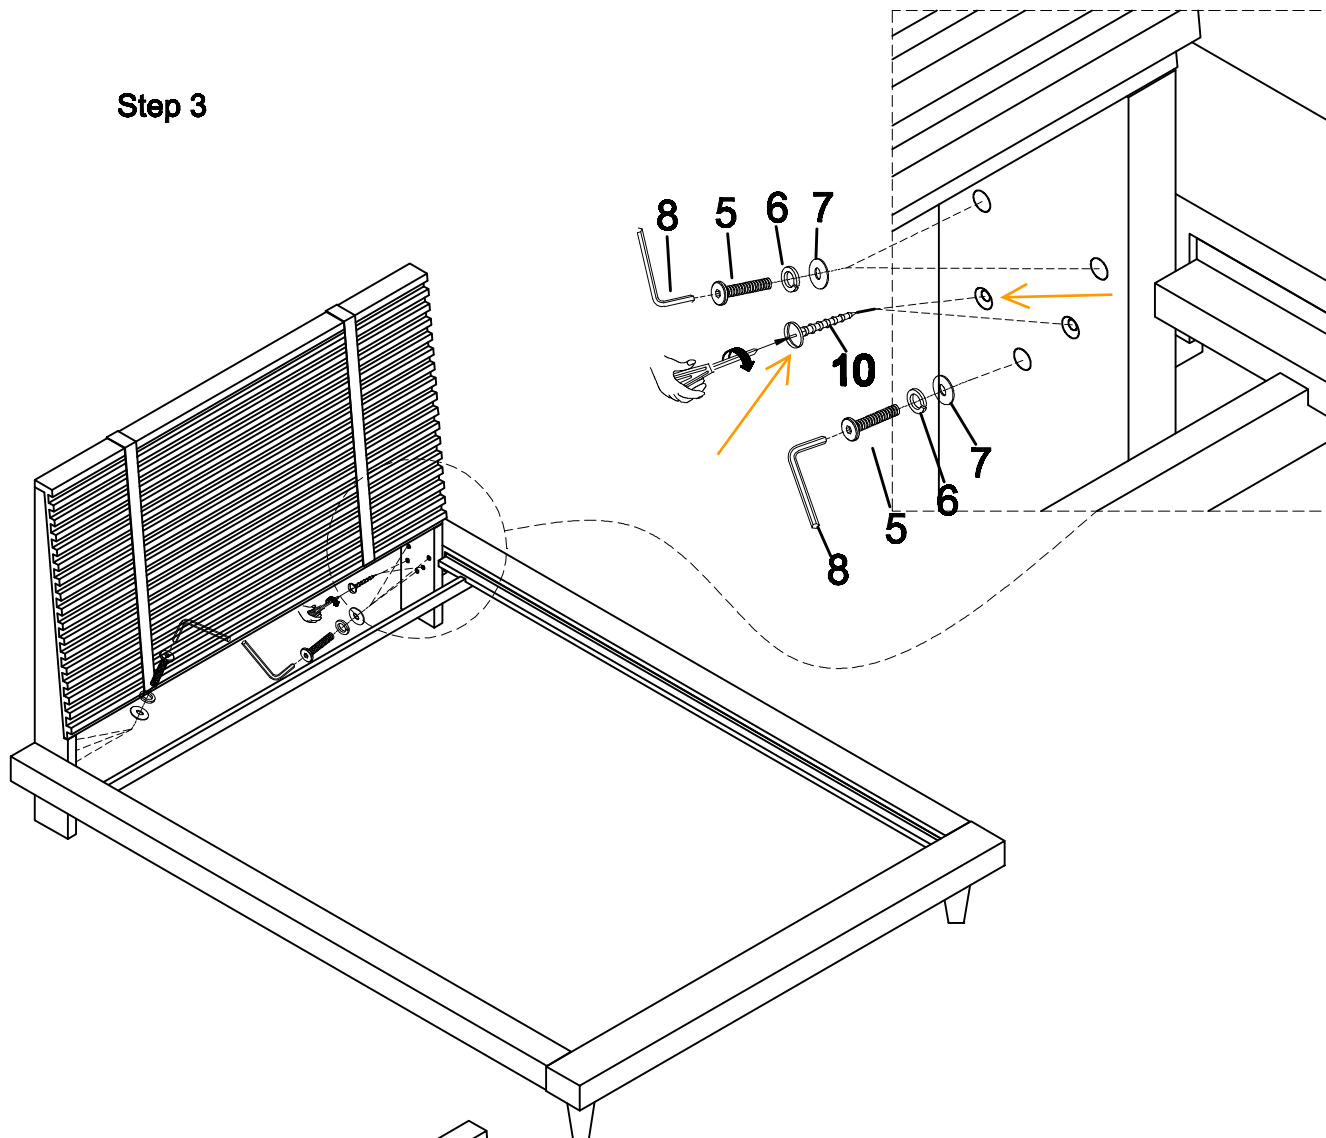


Step 5
NOT PROVIDED

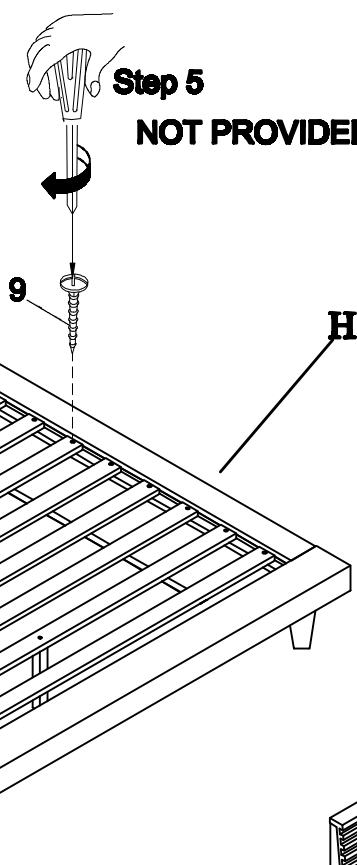

Step 4

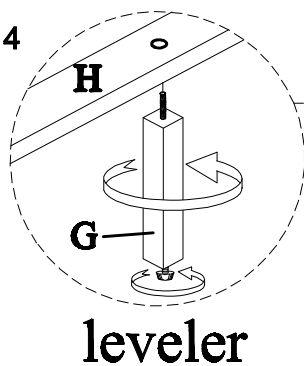

COMPLETED

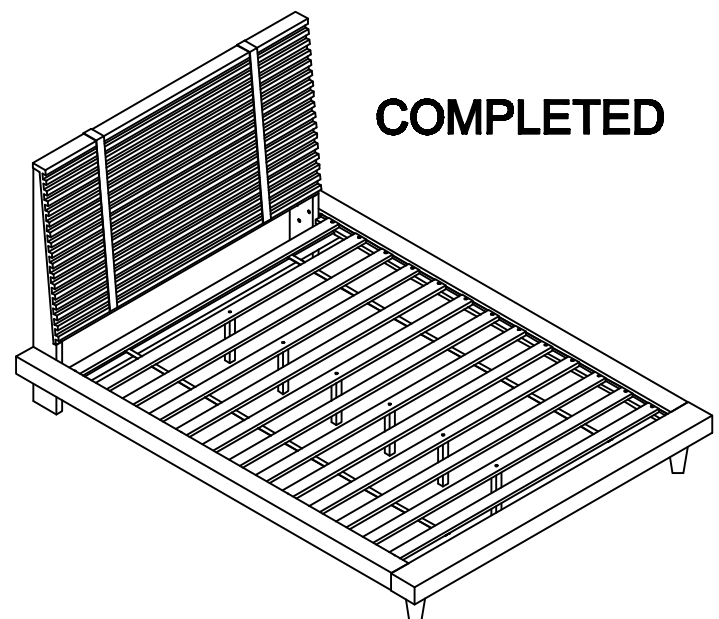

It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.



Il est recommandé de placer des coussins protecteurs sous tous les pieds et toutes les bases des meubles pour éviter d'endommager ou d'égratigner les planchers en bois ou autres surfaces dures, et pour limiter l'empreinte et empêcher la décoloration quand les meubles reposent sur la moquette.

MADE IN VIETNAM