

ASSEMBLY INSTRUCTION


ITEM NO.: 1606-5 DRESSER

1606-6 MIRROR

	PART LIST				
1	DRESSER		1PC		
2	MIRROR		1PC		
3	MIRROR SUPPORT	()	2PCS		
4	BUN FOOT	\$	4PCS		
5	SUPPORT LEG		1PC		


	ANTI-TIPPING HARDWARE PACK IN-5				
Α	@	BRACKET	2PCS		
В		TIE WRAP	1PC		
С	<i></i> Ø22222233>>	SCREW (#8 x 2")	1PC		
D	Ømm>	SCREW (#8 x 5/8")	1PC		
HARDWARE LIST IN-6					
E	0	BOLT (Ø1/4" x 1-1/2")	8PCS		
F	0	SPRING WASHER (Ø1/4")	8PCS		
G		FLAT WASHER (Ø1/4")	8PCS		
Н		ALLEN KEY (4mm)	1PC		


STEP 1

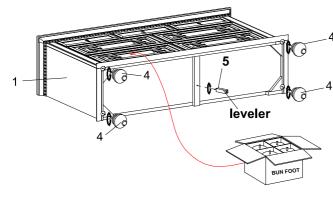

STEP 2

Autodesk

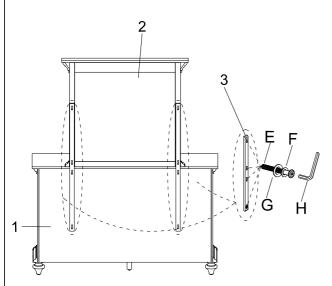

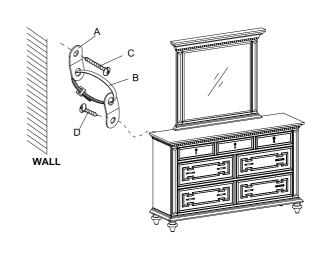

STEP 3

MADE IN VIETNAM



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.