

ASSEMBLY INSTRUCTIONS

ITEM NO: 1615-5 DRESSER / COMMODE &
1615-6 MIRROR / MIROIR

Thank you for purchasing this product. Please take time to read and follow the instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in the packing materials. If you do not have all the parts listed, have your dealer contact us and they will be sent to you immediately.

⚠ It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.

Merci d'avoir acheté ce produit. Veuillez lire et suivre les instructions ci-dessous. Vérifiez avant le montage que vous avez toutes les pièces et fixations. Les pièces qui semblent manquer se trouvent souvent dans les matériaux d'emballage. Si vous n'avez pas toutes les pièces de la liste, demandez à votre détaillant et nous vous les enverrons immédiatement.

⚠ Il est recommandé de placer des coussins protecteurs sous tous les pieds et toutes les bases des meubles pour éviter d'endommager ou d'égratigner les planchers en bois ou autres surfaces dures, et pour limiter l'empreinte et empêcher la décoloration quand les meubles reposent sur la moquette.

PARTS LIST LISTE DE PIÈCES			
NO.	Description	Sketch	Q'ty
A	DRESSER		1PC
B	LEG		4PCS
C	SUPPORTS LEG		1PC
D	MIRROR		1PC
E	MIRROR SUPPORTS		2PCS

HARDWARE LIST LISTE DE QUINCAILLERIE				
NO.	Description	Sketch	Size	Q'ty
1	BOLT		5/16"x57mm	8PCS
2	SPRING WASHER		5/16"x12x2mm	8PCS
3	FLAT WASHER		5/16"x19x2mm	8PCS
4	ALLEN KEY		5x 58mm	1PC
5	Tipping restraint			1SET

**ABOVE HARDWARE ARE PACKED IN 1615-5 FOR ASSEMBLY


6	BOLT		1/4"x38mm	8PCS
7	SPRING WASHER		1/4"x12x2mm	8PCS
8	FLAT WASHER		1/4"x19x2mm	8PCS
9	ALLEN KEY		4x58mm	1PC

**ABOVE HARDWARE ARE PACKED IN 1615-6 FOR ASSEMBLY


STEP 1

** DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED /
NE PAS SERRER LES BOULONS JUSQU'À CE QUE LE MONTAGE
SOIT COMPLETMENT TERMINE.

TAKE OUT THE BUN FOOT FROM
BOTTOM DRAWER FOR ASSEMBLY.

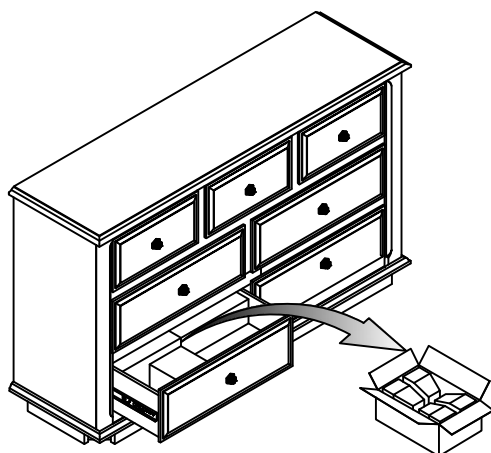

STEP 2

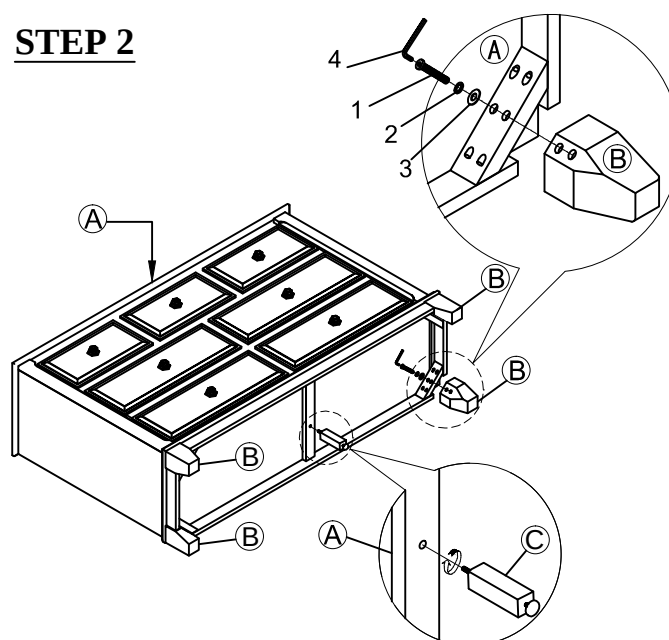

MADE IN VIETNAM / FABRIQUÉ AU VIETNAM



ASSEMBLY INSTRUCTIONS

ITEM NO: 1615-5 DRESSER / COMMODE &
1615-6 MIRROR / MIROIR


Thank you for purchasing this product. Please take time to read and follow the instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in the packing materials. If you do not have all the parts listed, have your dealer contact us and they will be sent to you immediately.

⚠ It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.


Merci d'avoir acheté ce produit. Veuillez lire et suivre les instructions ci-dessous. Vérifiez avant le montage que vous avez toutes les pièces et fixations. Les pièces qui semblent manquer se trouvent souvent dans les matériaux d'emballage. Si vous n'avez pas toutes les pièces de la liste, demandez à votre détaillant et nous vous les enverrons immédiatement.

⚠ Il est recommandé de placer des coussins protecteurs sous tous les pieds et toutes les bases des meubles pour éviter d'endommager ou d'égratigner les planchers en bois ou autres surfaces dures, et pour limiter l'empreinte et empêcher la décoloration quand les meubles reposent sur la moquette.


STEP 3

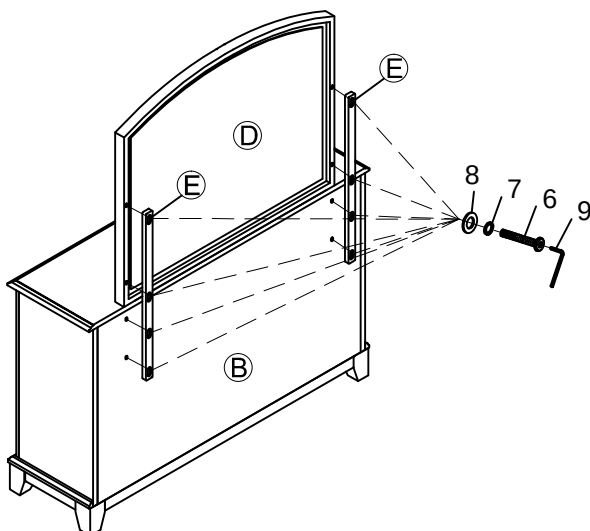

STEP 4

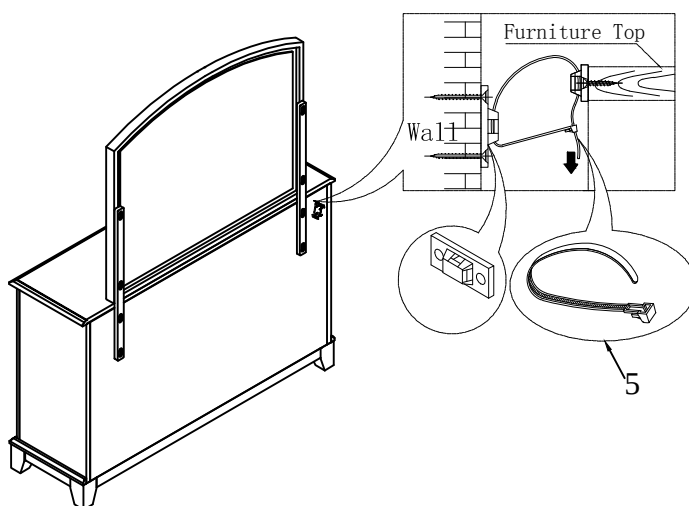

Completed

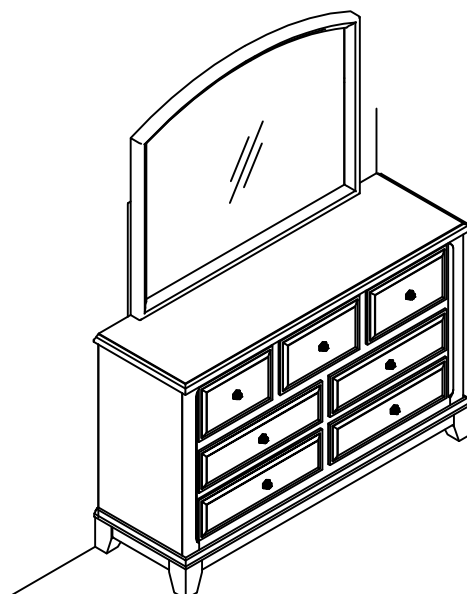

MADE IN VIETNAM / FABRIQUÉ AU VIETNAM