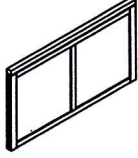


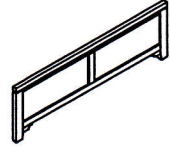
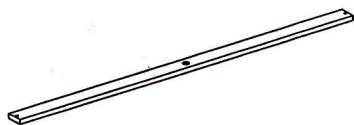


ASSEMBLY INSTRUCTION

ITEM NO: 1756-1: (1/3) QUEEN HEADBOARD
 1756-2: (2/3) QUEEN FOOTBOARD & SLATS
 1756-3: (3/3) EK/QUEEN RAILS

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

PART LISTS


NO.	Description	Sketch	Q'ty
A	HEADBOARD		1PC
B-1	RSF HEADBOARD LEG		1PC
B-2	LSF HEADBOARD LEG		1PC
C	FOOTBOARD PANEL		1PC
D	SIDE RAIL		2PCS
E	SLAT SUPPORT LEG		4PCS
F	SLAT		4PCS

ASSEMBLY INSTRUCTION

ITEM NO: 1756-1: (1/3) QUEEN HEADBOARD
 1756-2: (2/3) QUEEN FOOTBOARD & SLATS
 1756-3: (3/3) EK/QUEEN RAILS

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

HARDWARE PACK(PUT IN 1756-1 CARTON)

NO.	Description	Sketch	SIZE	Q'ty
1	BOLT		5/16"-18x2-1/4"	6PCS
2	SPRING WASHER		5/16"IDx15/32"ODx0.0078"TK	6PCS
3	FLAT WASHER		1 1/32"IDx1 1/16"ODx0.0078"TK	6PCS
4	ALLEN KEY		1/6"	1PC

HARDWARE PACK(PUT IN 1756-3 CARTON)

NO.	Description	Sketch	SIZE	Q'ty
5	THREAD BOLT		5/16"-18x3-1/2"	8PCS
6	HEX NUT		5/16"IDx*1-1/2"x5/8"x5/8"	8PCS
7	WRENCH		1/2"	1PC
8	WOOD SCREW		#8X1-1/4	8PCS


ASSEMBLY INSTRUCTION

ITEM NO: 1756-1: (1/3) QUEEN HEADBOARD

1756-2: (2/3) QUEEN FOOTBOARD & SLATS

1756-3: (3/3) EK/QUEEN RAILS

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

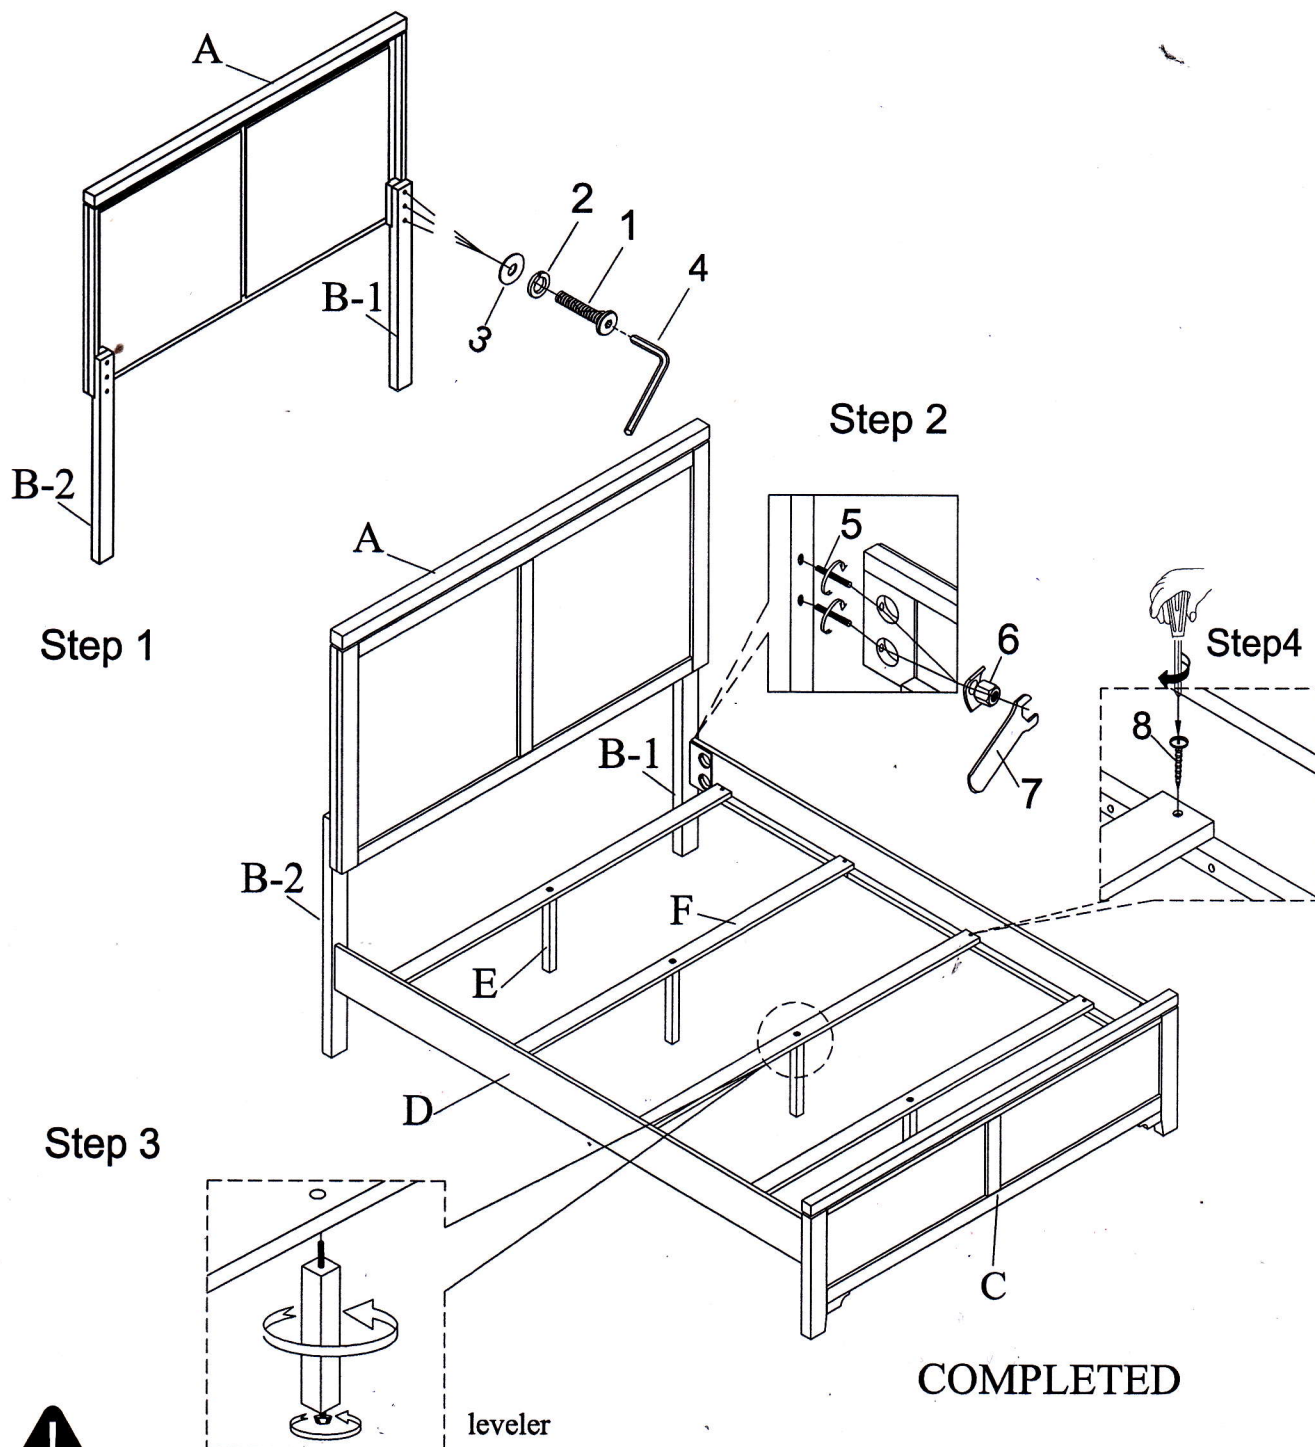

It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.



Il est recommandé de placer des coussins protecteurs sous tous les pieds et toutes les bases des meubles pour éviter d'endommager ou d'égratigner les planchers en bois ou autres surfaces dures, et pour limiter l'empreinte et empêcher la décoloration quand les meubles reposent sur la moquette.

MADE IN VIETNAM