

# Assembly Instruction CALKING BED ITEM NO.:

# 1860K-1CK (1/2) CK HEADBOARD 1860K-3CK (2/2) CK FB & RAILS & SLATS

NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

#### **COMPONENT LIST**


NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	HEADBOARD
В		1 PC	FOOTBOARD
C		2 PCS	SIDE RAIL
D		1 ROLL	13PCS SLAT/ROLL

#### HARDWARE LIST (PACK IN -3)

	LIST (PACK IN -3)	OFFX	PECCHIPTION
NO.	DRAWING	QTY	DESCRIPTION
1		4 PCS	METAL LEG
2		10 PCS	CENTER SUPPORT LEG WITH LEVELER
3		2 PCS	METAL BRACKET
4		4 PCS	BOLT 5/8-18-1"
5		4 PCS	NUT
6		<b>26 PCS</b>	SCREW 35MM
7		1 PC	ALLEN KEY
8		1 PC	WRENCH


## STEP#1

Release bolts locate on headboard bottom, align legs to pre-drilled holes, insert bolts and tighten with Allen key.

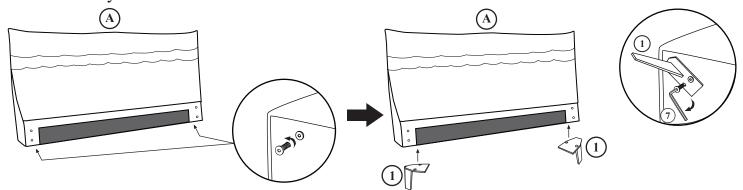


# STEP#2

Turn counterclockwise to untighten bolts on headboard and footboard for side rails assembly.

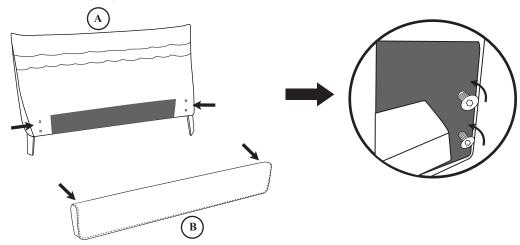


# STEP#3

Align and hook on the side rails to the headboard and footboard, tighten bolts with Allen Key.

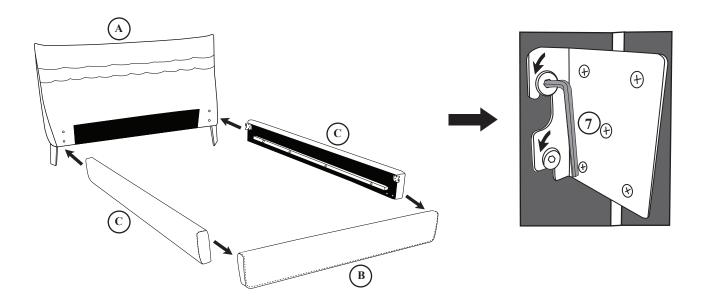


## STEP#4

Attach metal legs to metal brackets, insert bolts and nuts and tighten with wrench. Release bolts on footboard and rails, attach metal brackets to the pre-drilled holes, insert bolts and tighten with Allen key.

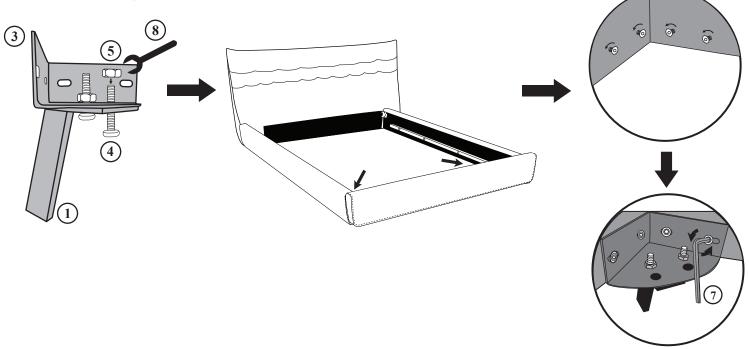


#### STEP#5

Rotate to tighten slat support legs.

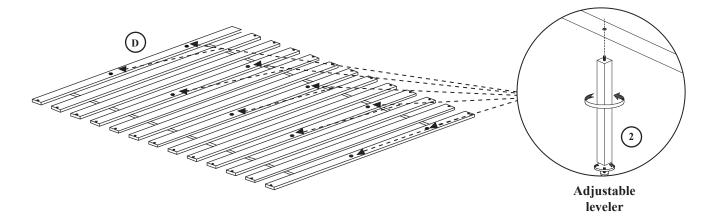

## STEP#6

Align and place slat roll onto the bed frame, insert screws to tighten it.

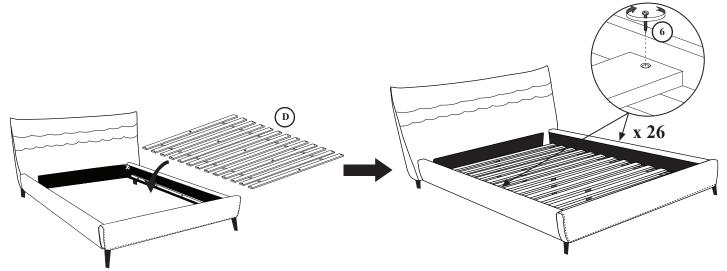

#### STEP#7

# Assembly completed.



#### CARE INSTRUCTION FOR POLYESTER:

In order to maintain the original appearance of your polyester furniture, please follow below simple care procedure:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.