



















Item#1867K-1/1867K-2/1867K-3CK: CAL-KING UPH BED

<p><b>(A)</b> Headboard</p>  <p>1pc</p>	<p><b>(B)</b> Footboard</p>  <p>1pc</p>	<p><b>(C)</b> Side rail</p>  <p>2pcs</p>	<p><b>(D)</b> Slats</p>  <p>4pcs</p>	<p><b>(E)</b> Post - Leg</p>  <p>2pcs</p>	<p><b>(F)</b> Center post</p>  <p>2pcs</p>
<p><b>(G)</b> Head board slat</p>  <p>1pc</p>	<p><b>(H)</b> Support legs</p>  <p>8pcs</p>	<p><b>(I)</b> Bolt Φ5/16"x1-3/4"</p>  <p>12pcs</p>	<p><b>(J)</b> Threaded Bolt (Ø5/16"x3-1/2")</p>  <p>8pcs</p>	<p><b>(K)</b> Flat washer (Ø5/16"xØ19mm)</p>  <p>20pcs</p>	
<p><b>(L)</b> Spring washer (Ø5/16")</p>  <p>20pcs</p>	<p><b>(M)</b> Hex Nut (Ø5/16")</p>  <p>8pcs</p>	<p><b>(N)</b> Allen key (5mm)</p>  <p>1pc</p>	<p><b>(O)</b> Wrench (12mm)</p>  <p>1pc</p>	<p><b>(P)</b> Screwdriver Ø8 x 1-1/4</p>  <p>8pcs</p>	<p><b>(Q)</b> Allen wrench (NOT INCLUDED)</p>  <p>1pc</p>


Note: Hardware pack is in 1867K-1

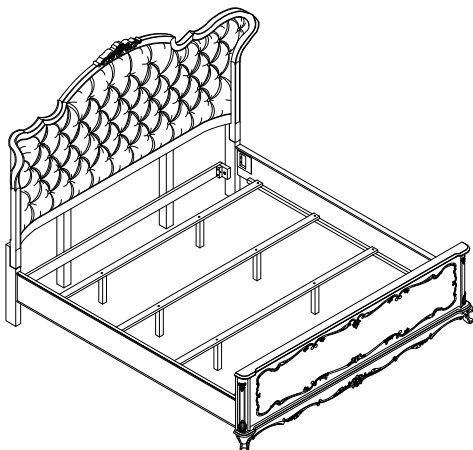

This page lists all the contents included in the box. Please take time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


1

Attach the post leg (E) to the headboard (A) with 12 pcs bolt (I), 12 pcs flat washer (K), 12 pcs spring washer (L) tighten using allen key (N).

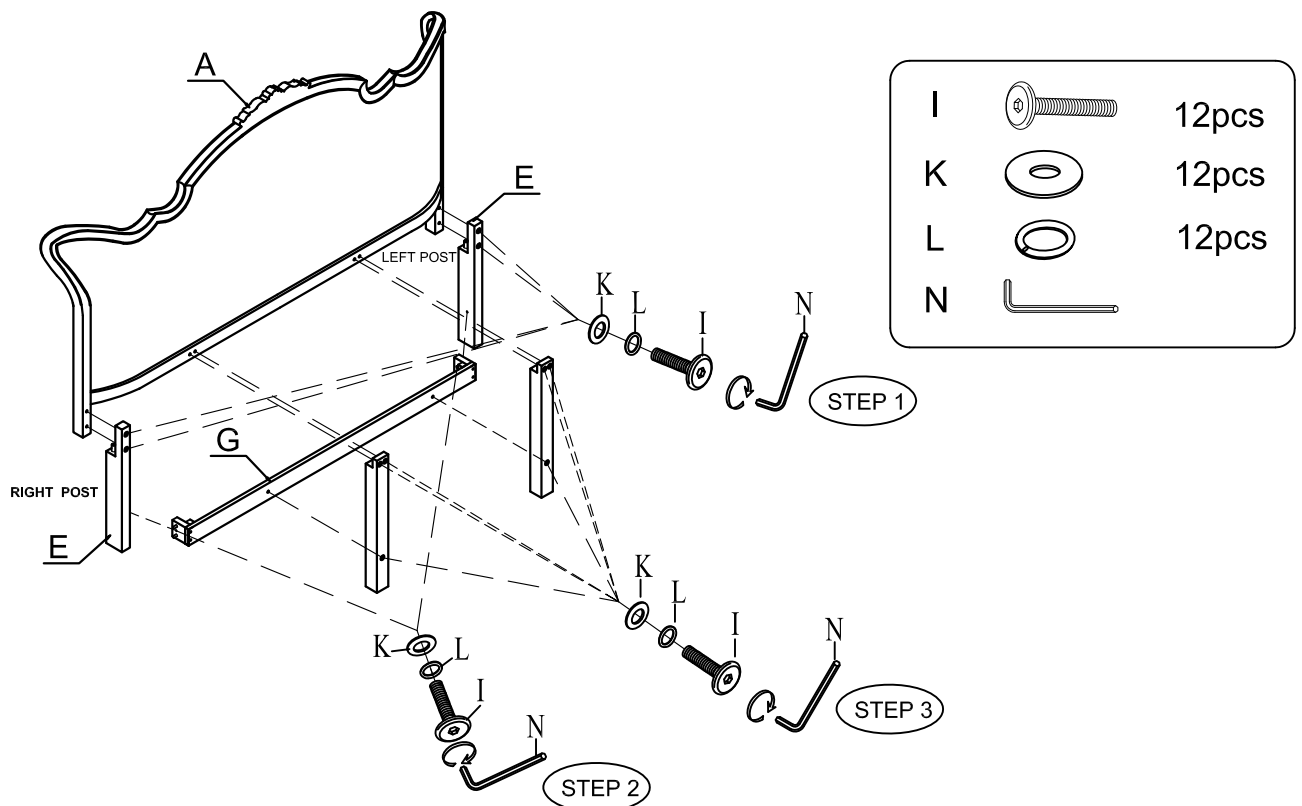


2

Attach the rails (C) to the headboard (A) and footboard (B) with 8 pcs threaded bolt (J), 8 pcs flat washer (K), 8 pcs spring washer (L) and 8 pcs hex nut (M) tighten using wrench (O).

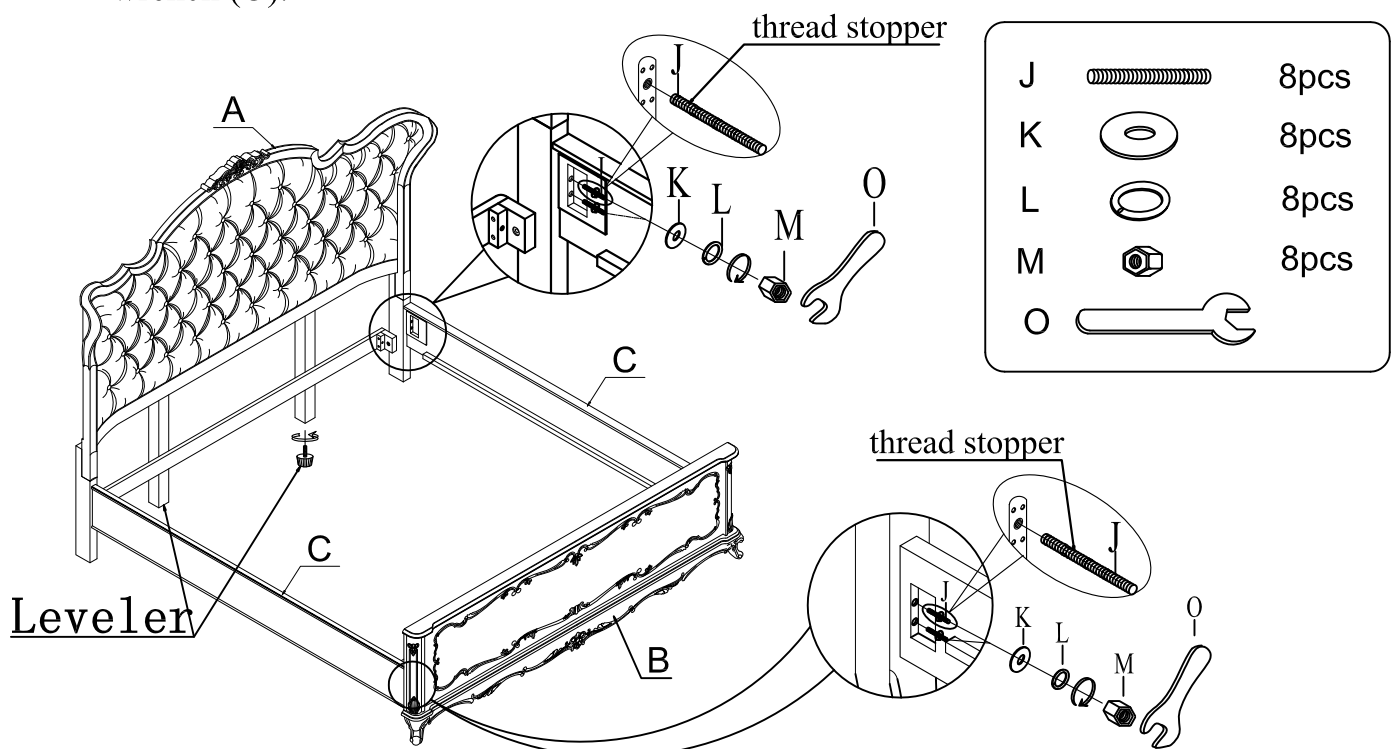


Made in VietNam

- 
- 3** Attach the Wooden Support legs (H) by inserting them into the holes in the Slats (D). You may adjust the floor leveler on the bottom as needed.

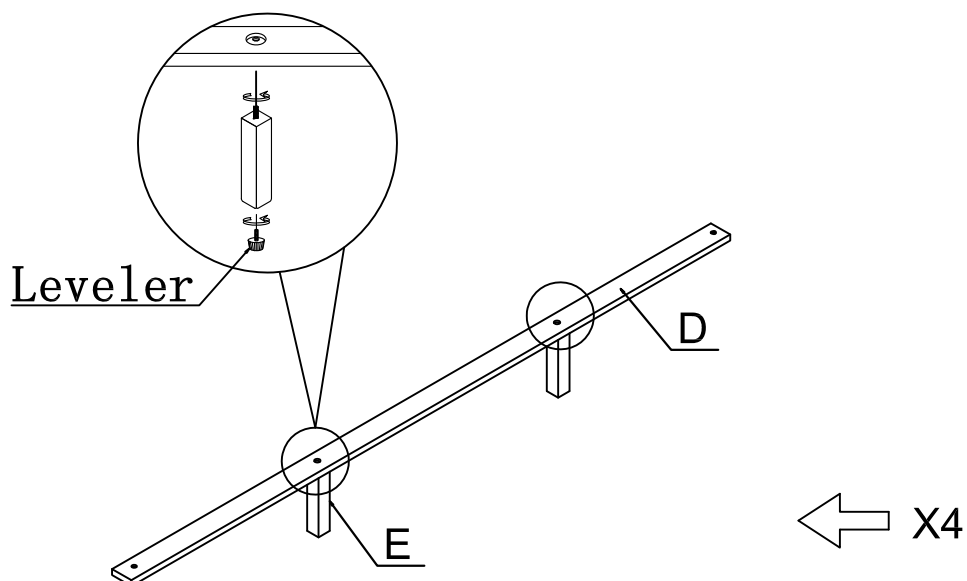

- 
- 4** Attach the Slats(D) to the Bed Rails using the Wood Screws(P) provided as shown.

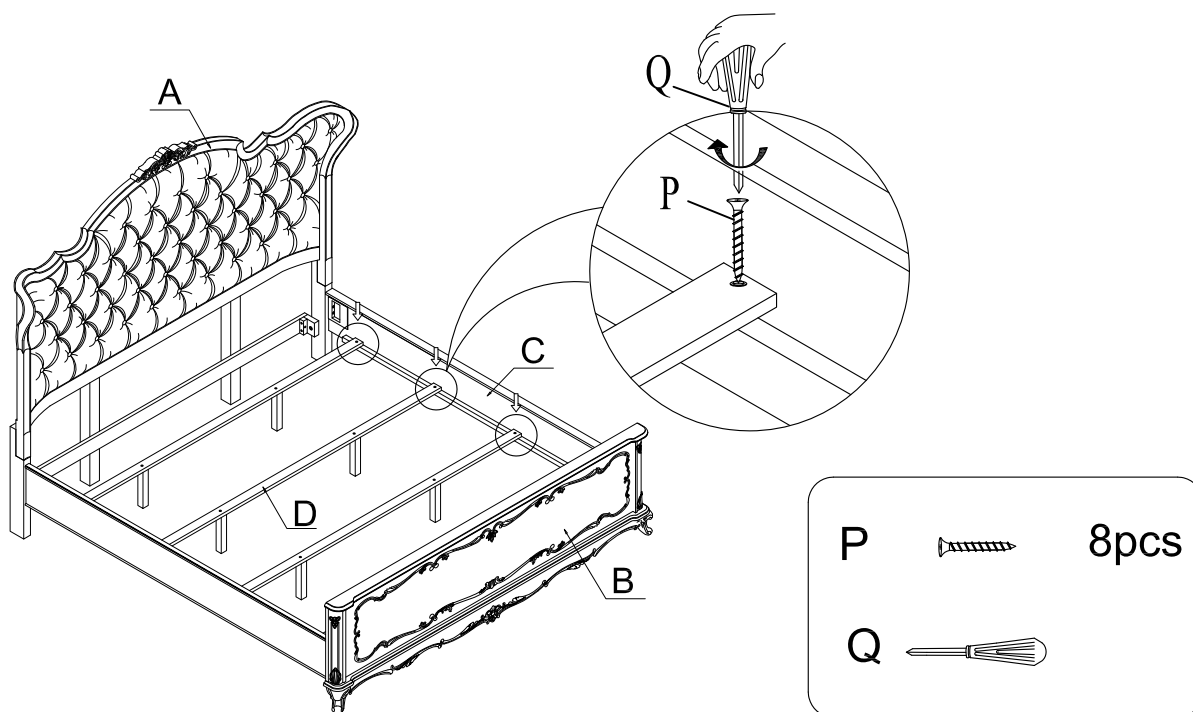

#### Cleaning & Care

Treat surface with care. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

Made in VietNam