

## ASSEMBLY INSTRUCTION

1885N-1 QUEEN BED HEADBOARD

1885N-2 QUEEN BED FOOTBOARD

1885N-3 QUEEN BED RAILS & SLATS

HEADBOARD LIST: ( NOTE: HARDWARE PACK INSIDE THE CARTON OF 1885N-1 )









A: Headboard 1PC



C: Spring Washer D: Flat Washer 4PCS

4PCS



E: Bolt M8\*30mm 4PCS

F: Allen Key 5mm 1PC

G: Screw 4.0\*60mm 4PCS

FOOTBOARD AND RAILS LIST: (NOTE: HARDWARE PACK INSIDE THE CARTON OF 1885N-3)











B: Leg 2PCS C: Spring Washer D: Flat Washer E: Bolt M8\*30mm G: Screw 4.0\*60mm 4PCS

4PCS

4PCS

4PCS











H: Rail 2PCS

I: Footboard 1PC

J: Slat 3PCS

K: Center Suport L: Allen Key 4mm Rail 1PC 1PC

(9)

(MIIIII)

6PCS

M: Nut 1/4 N: Bolt 1/4\*15mm O: Bolt M6\*30mm P: Support Leg Q: Bolt 1/4\*48mm 3PCS

4PCS

3PCS

6PCS


R: Wrench 1/4\*35mm

1PC

Page: 1/2

ASSEMBLY INSTRUCTION FOR REGULAR BED SET.

NOTE: PLEASE DO NOT TIGHTEN ALL BOLTS UNTIL THE BED IS ASSEMBLED COMPLETELY.

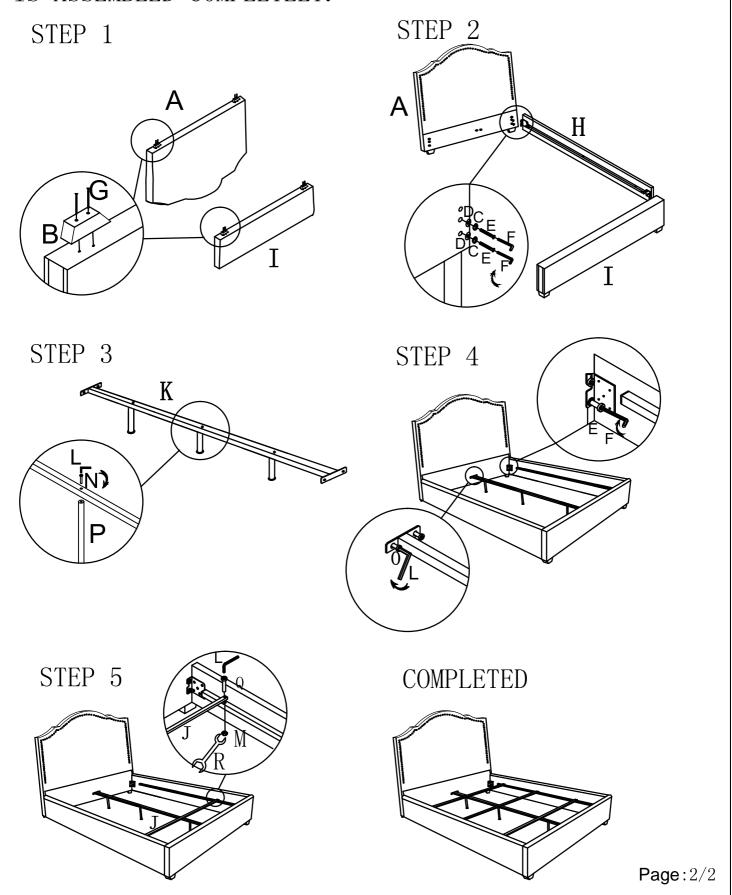

## ASSEMBLY INSTRUCTION

HOMELEGANCE 1885N-1 QUEEN HEADBOARD

HEADBOARD LIST: ( NOTE: HARDWARE PACK INSIDE THE CARTON OF 1885N-1 )









E: Bolt M8\*30mm



B: Leg 2PCS



C: Spring Washer D: Flat Washer 4PCS



4PCS


4PCS

1PC

F: Allen Key 5mm G: Screw 4.0\*60mm 4PCS

ASSEMBLY INSTRUCTION FOR 1885N-1 QUEEN HEADBOARD ONLY. NOTE: PLEASE DO NOT TIGHTEN ALL BOLTS UNTIL THE BED IS ASSEMBLED COMPLETELY.



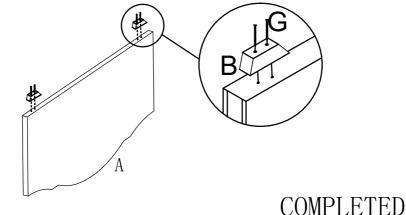

STEP 2

