



H O M E E L E G A N C E

ASSEMBLY INSTRUCTION INSTRUCTIONS D'ASSEMBLAGE


ITEM NO : 1908K NEW EASTERN KING BED / GRAN LIT

1908K-1 NEW EASTERN KING HEADBOARD, FOOTBOARD,
W/4 SLATS & 8 SUPPORT LEG

1908-3 NEW QUEEN & EK SIDE RAILS

Thank you for purchasing the product. Please take time to read and follow the instruction below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in the packing materials. If you do not have all the parts listed, have your dealer contact us and they will be sent to you immediately.

Merci d'avoir acheté ce produit. Veuillez lire et suivre les instructions ci-dessous. Vérifiez avant le montage que vous avez toutes les pièces et fixations. Les pièces qui semblent manquer se trouvent souvent dans les matériaux d'emballage. Si vous n'avez pas toutes les pièces de la liste, demandez à votre détaillant et nous vous les enverrons immédiatement.

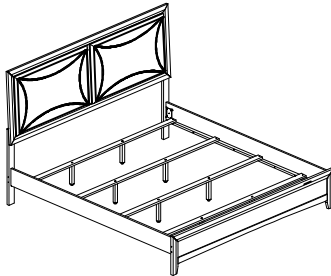

! It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.

! Il est recommandé de placer des coussins protecteurs sous tous les pieds et toutes les bases des meubles pour éviter l'endommager ou d'égratigner les planchers en bois ou autres surfaces dures, et pour limiter l'empreinte et empêcher la décoloration quand les meubles reposent sur la moquette.

HEADBOARD, FOOTBOARD & SIDE RAIL TETE DE LIT, PIED DE LIT & LONGERON

PART LIST LISTE DE PIÈCES		
NO	DESCRIPTION	QTY/PCS
1	HEADBOARD / TETE DE LIT	1 PC
2	HEADBOARD LEG - LEFT / PIED GAUCHE	1 PC
3	HEADBOARD LEG - RIGHT / PIED DROITE	1 PC
4	FOOTBOARD / PIED DE LIT	1 PC
5	SIDE RAIL / LONGERON	2 PCS
6	SLAT / LATTES	4 PCS
7	CENTER LEG / SUPPORT POUR TRANSVERSE	8 PCS


HEADBOARD, FOOTBOARD & SIDE RAIL TETE DE LIT, PIED DE LIT & LONGERON

HARDWARE LIST LISTE DE QUINCAILLERIE		
NO	DESCRIPTION	QTY/PCS
A	JCBC SCREW / BOULON M6 x 1.0 x 35mm	6 PCS
B	JCBC SCREW / BOULON M6 x 1.0 x 45mm	8 PCS
C	SPRING WASHER / RONDELLE D'ARRET 1/4" x 9/32" x 15/32" x 0.04"	6 PCS
D	FLAT WASHER / RONDELLE PLATE 1/4" x 9/32" x 33/64" x 0.04"	6 PCS
E	ALLEN KEY / CLE' ALLEN M4 x 65mm	1 PC
F	CSK SCREW / VIS M4 x 32mm	8 PCS


*HARDWARE SET IS IN 1908K-1 NEW FOR ASSEMBLY

NOTE : YOU WILL ALSO NEED A PHILIP SCREWDRIVER (NOT PROVIDED)


STEP 1 ETAPE 1

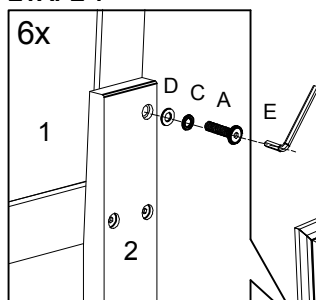



STEP 2 ETAPE 2

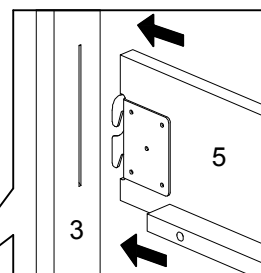

STEP 3 ETAPE 3

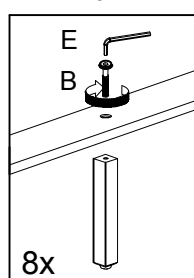

STEP 4 ETAPE 4

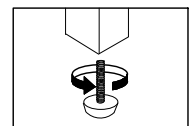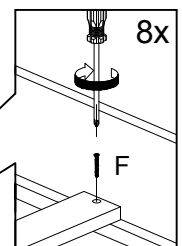

Note : Adjust leveler to stabilize

DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.

NE PAS SERRER LES BOULONS JUSQU'À CE QUE LE MONTAGE SOIT COMPLETMENT.