







# ASSEMBLY INSTRUCTION

ITEM#: 1912-5 DRESSER  
1912-6 MIRROR





## PART LIST


<b>A</b>	<b>DRESSER</b>	<b>1PC</b>
<b>B</b>	<b>MIRROR</b>	<b>1PC</b>
<b>C</b>	<b>WOOD SUPPORT</b>	<b>2PCS</b>

## ANTI-TIPPING HARDWARE PACK



<b>1</b>		<b>TIE WRAP</b>	<b>1PC</b>
<b>2</b>		<b>BRACKET</b>	<b>2PCS</b>
<b>3</b>		<b>SCREW 6#x1-1/2"L</b>	<b>2PCS</b>
<b>4</b>		<b>SCREW 6#x3/4"L</b>	<b>2PCS</b>

## HARDWARE LIST IN MIRROR CARTON

<b>5</b>		<b>BOLT <math>\Phi 5/16"</math>x1-3/4"L</b>	<b>8PCS</b>
<b>6</b>		<b>FLAT WASHER <math>\Phi 5/16"</math>X19MM</b>	<b>8PCS</b>
<b>7</b>		<b>SPRING WASHER <math>\Phi 5/16"</math></b>	<b>8PCS</b>
<b>8</b>		<b>ALLEN KEY 5/16"</b>	<b>1PC</b>

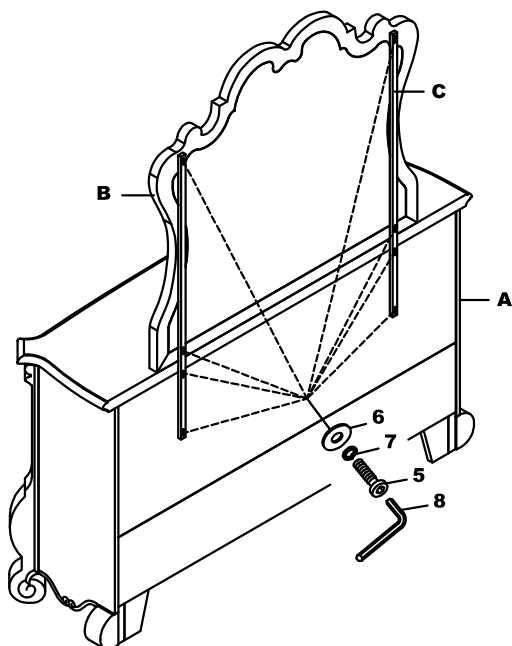

- REMOVE ANTI-TIPPING PACK FROM BACK PANEL, ASSEMBLE IT TO AVOID TIPPING.

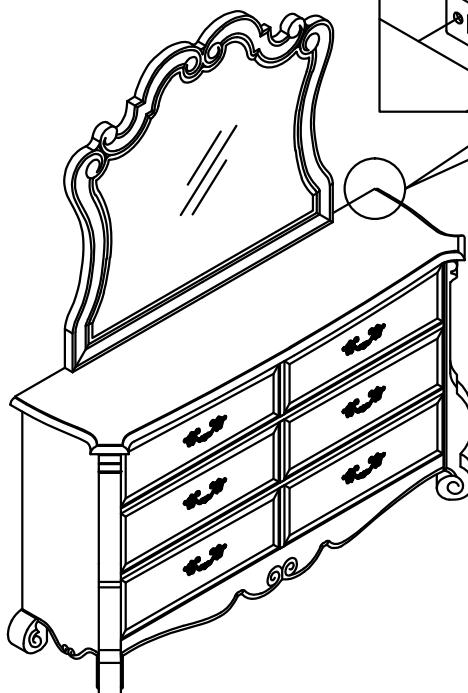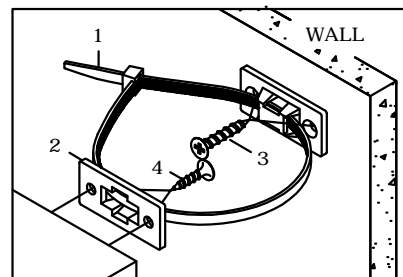

For items use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.