

# **ASSEMBLY INSTRUCTION**

ITEM#: 1946-5 DRESSER 1946-6 MIRROR

#### **PART LIST**

| A | DRESSER            | 1PC  |
|---|--------------------|------|
| В | BUN FOOT           | 4PCS |
| С | CENTER SUPPORT LEG | 1PC  |
| D | MIRROR             | 1PC  |
| E | MIRROR SUPPORT     | 2PCS |

### ANTI-TIPPING HARDWARE PACK

| 1 | b          | TIE WRAP         | 1PC  |
|---|------------|------------------|------|
| 2 | <b>E</b>   | BRACKET          | 2PCS |
| 3 | <b>Emm</b> | SCREW 6#x1-1/2"L | 2PCS |
| 4 | Øata.      | SCREW 6#x3/4"L   | 2PCS |

#### HARDWARE LIST IN MIRROR CARTON


| 5 | <u> </u> | BOLT Φ5/16"x1-3/4"L     | 8PCS |
|---|----------|-------------------------|------|
| 6 | 0        | FLAT WASHER Φ5/16"X19MM | 8PCS |
| 7 | 0        | SPRING WASHER Ф5/16"    | 8PCS |
| 8 |          | ALLEN KEY 5/16"         | 1PC  |

Note:

\* Bun foot box and center support leg is in the left bottom drawer.

\* Remove bun feet from inner box and secure bun feet as shown above

## REMOVE ANTI-TIPPING PACK FROM BACK PANEL, ASSEMBLE IT TO AVOID TIPPING.

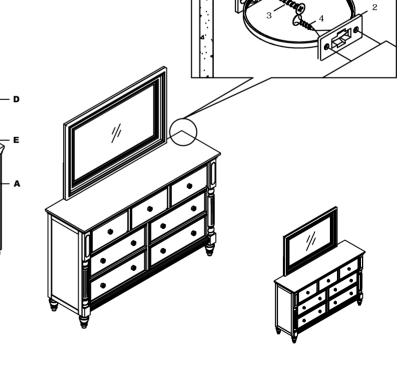



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.