

# ASSEMBLY INSTRUCTIONS

**GROUP NO.: 5880 BED**

**ITEM NO .: 5880FDB-1 Full Bed**

**5880DB-1 Queen Bed**

**5880KDB-1EK EK Bed**



Thank you for purchasing this product. Please take time to read and follow the instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in the packing materials. If you do not have all the parts listed, have your dealer contact us and they be sent to you immediately.

**▲** It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.


## HARDWARE LIST:

| No. | Description      | Sketch                                                                              | Size          | Quantity |
|-----|------------------|-------------------------------------------------------------------------------------|---------------|----------|
| 1   | Allen Bolt       |    | Ø5/16" x 55mm | 8 PCS    |
| 2   | Spring washer    |    | Ø5/16"        | 10 PCS   |
| 3   | Flat washer      |    | Ø5/16" x 19mm | 10 PCS   |
| 4   | Allen Key        |    | 4mm           | 1 PC     |
| 5   | Allen Bolt       |    | Ø1/4" x 20mm  | 12 PCS   |
| 6   | Full-thread Bolt |    | Ø5/16" x 80mm | 8 PCS    |
| 7   | Curve washer     |  |               | 8 PCS    |
| 8   | Hex nut          |  | Ø5/16"        | 8 PCS    |
| 9   | Open wrench      |  |               | 1 PC     |
| 10  | Patt Side rails  |  |               | 2 PCS    |
| 11  | Spring washer    |  | Ø1/4"         | 12 PCS   |
| 12  | Flat washer      |  | Ø1/4" x 19mm  | 12 PCS   |
| 13  | Allen Bolt       |  | Ø5/16" x 65mm | 2 PCS    |

## PARTS LIST:

| No. | Description      | Sketch                                                                                | Quantity |
|-----|------------------|---------------------------------------------------------------------------------------|----------|
| A   | Headboard        |    | 1PC      |
| B   | HB Legs L/R      |    | 2 PCS    |
| C   | FB Bun Foot L/R  |    | 2 PCS    |
| D   | Footboard        |    | 1 PC     |
| E   | Side Rail - L    |   | 2 PCS    |
| F   | Side Rail - R    |  | 2 PCS    |
| G   | Slat             |  | 4 PCS    |
| H   | Slat Support Leg |  | 8 PCS    |

**STEP 1 :** Attach Leg L/R (B) to Headboard (A) by using allen bolt (1), Spring Washer (2), Flat Washer (3) and Allen Key (4).

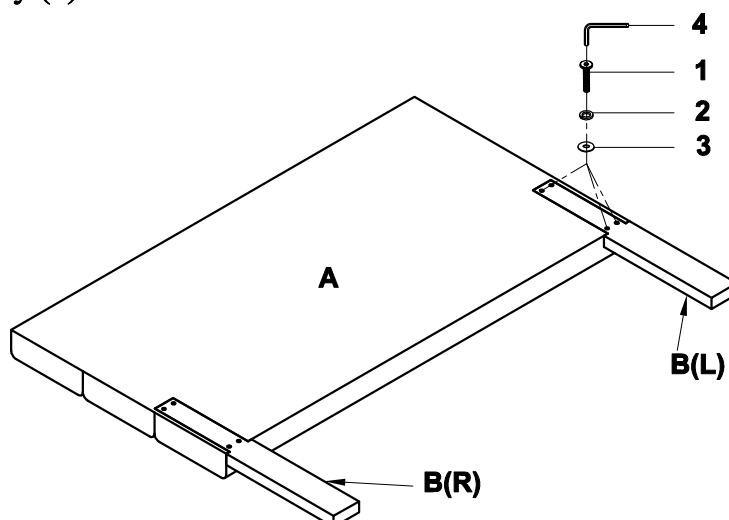


## ASSEMBLY INSTRUCTIONS


**GROUP NO.: 5880 BED**

**ITEM NO .: 5880FDB-1 Full Bed**  
**5880DB-1 Queen Bed**  
**5880KDB-1EK EK Bed**


**STEP 2 :** Attach Bun Foot L/R (C) to Footboard (D) by using Allen Bolt (13), Spring Washer (2), Flat Washer (3) and Allen Key (4).

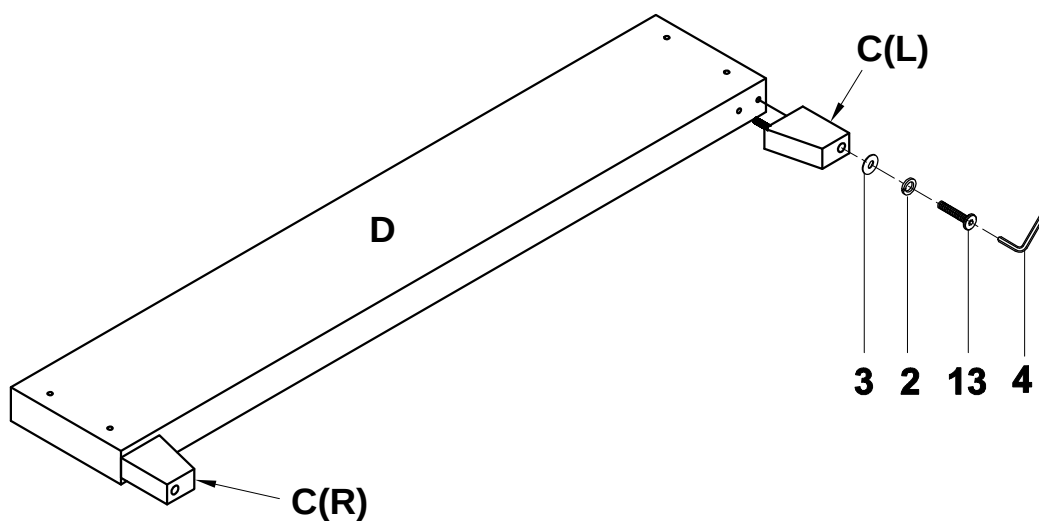


**STEP 3 :** Attach Metal Plate(10) to Side Rail L&R (E),(F) by using Allen Bolt (5),Spring Washer (11), Flat Washer (12) and Allen Key (4).

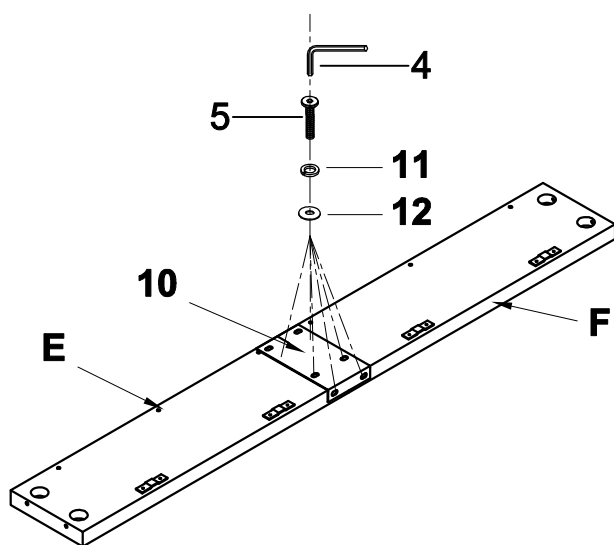

**STEP 4 :** Attach Slat Support Leg (H) to Slat (G).

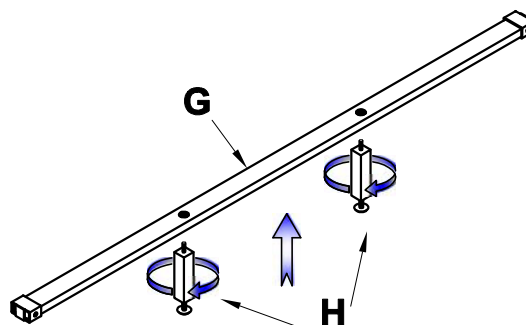

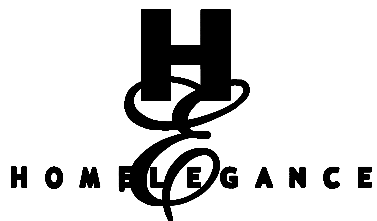

## ASSEMBLY INSTRUCTIONS


**GROUP NO.: 5880 BED**

**ITEM NO .: 5880FDB-1 Full Bed**

**5880DB-1 Queen Bed**

**5880KDB-1EK EK Bed**

**STEP 5 :** Attach bed Side Rail (E) & (F) to Headboard (A) and Footboard (D) by using Full-Thread Bolt (6), Curve Washer (7), Hex Nut (8) and Open Wrench (9).

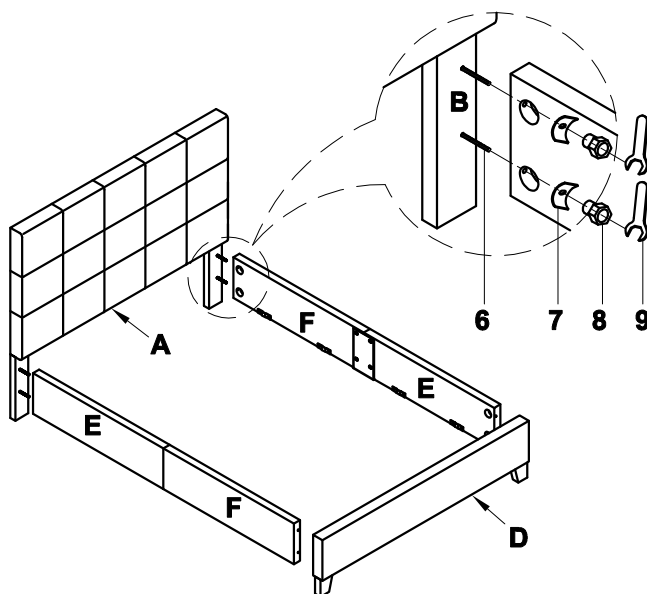

**STEP 6 :** Insert Slat (F) to bed Side Rail's (E) metal support, see as below drawing.

