



ASSEMBLING INSTRUCTIONS

ITEM NO: 8310NBE-CR



CORNER SEAT

⚠ The legs and Hardware are stored in the bottom of the seat, please take out for assembly.
Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

COMPONENT LIST			
PART	DRAWING	DESCRIPTION	QTY
A		Seat	1 PC
B		Plastic Leg 4-1/8" x 4-1/8" x 2-1/3"	4 PCS
C		Seat Cushion	1 PC
D		Big Back Cushion	1 PC
E		Small Back Cushion	1 PC
F		Pillow 20" x 20"	1 PC

HARDWARE LIST			
PART	DRAWING	DESCRIPTION	QTY
1		Bolt Ø5/16" x 2 - 1/2"	4 PCS
2		Spring Washer Ø5/16"	4 PCS
3		Flat Washer Ø5/16" x 3/4"	4 PCS
4		Allen Key M4 2-1/3"	1 PC
5		U Shape Metal Connector Ø3/16" x 8-2/3" x 3-5/32"	2 PCS

STEP 1:

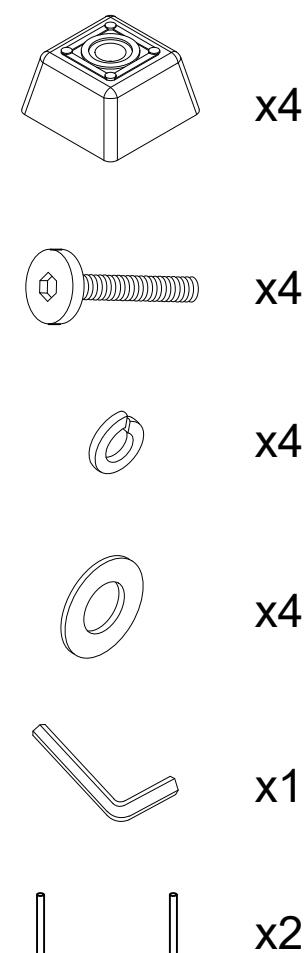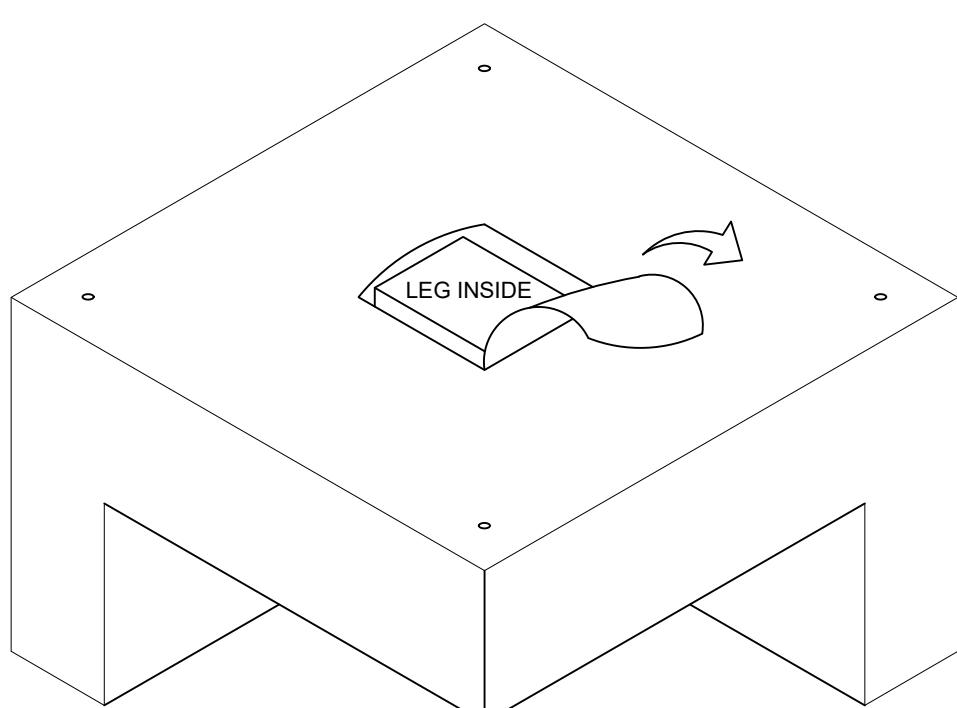




ASSEMBLING INSTRUCTIONS


ITEM NO: 8310NBE-CR

CORNER SEAT

STEP 2:

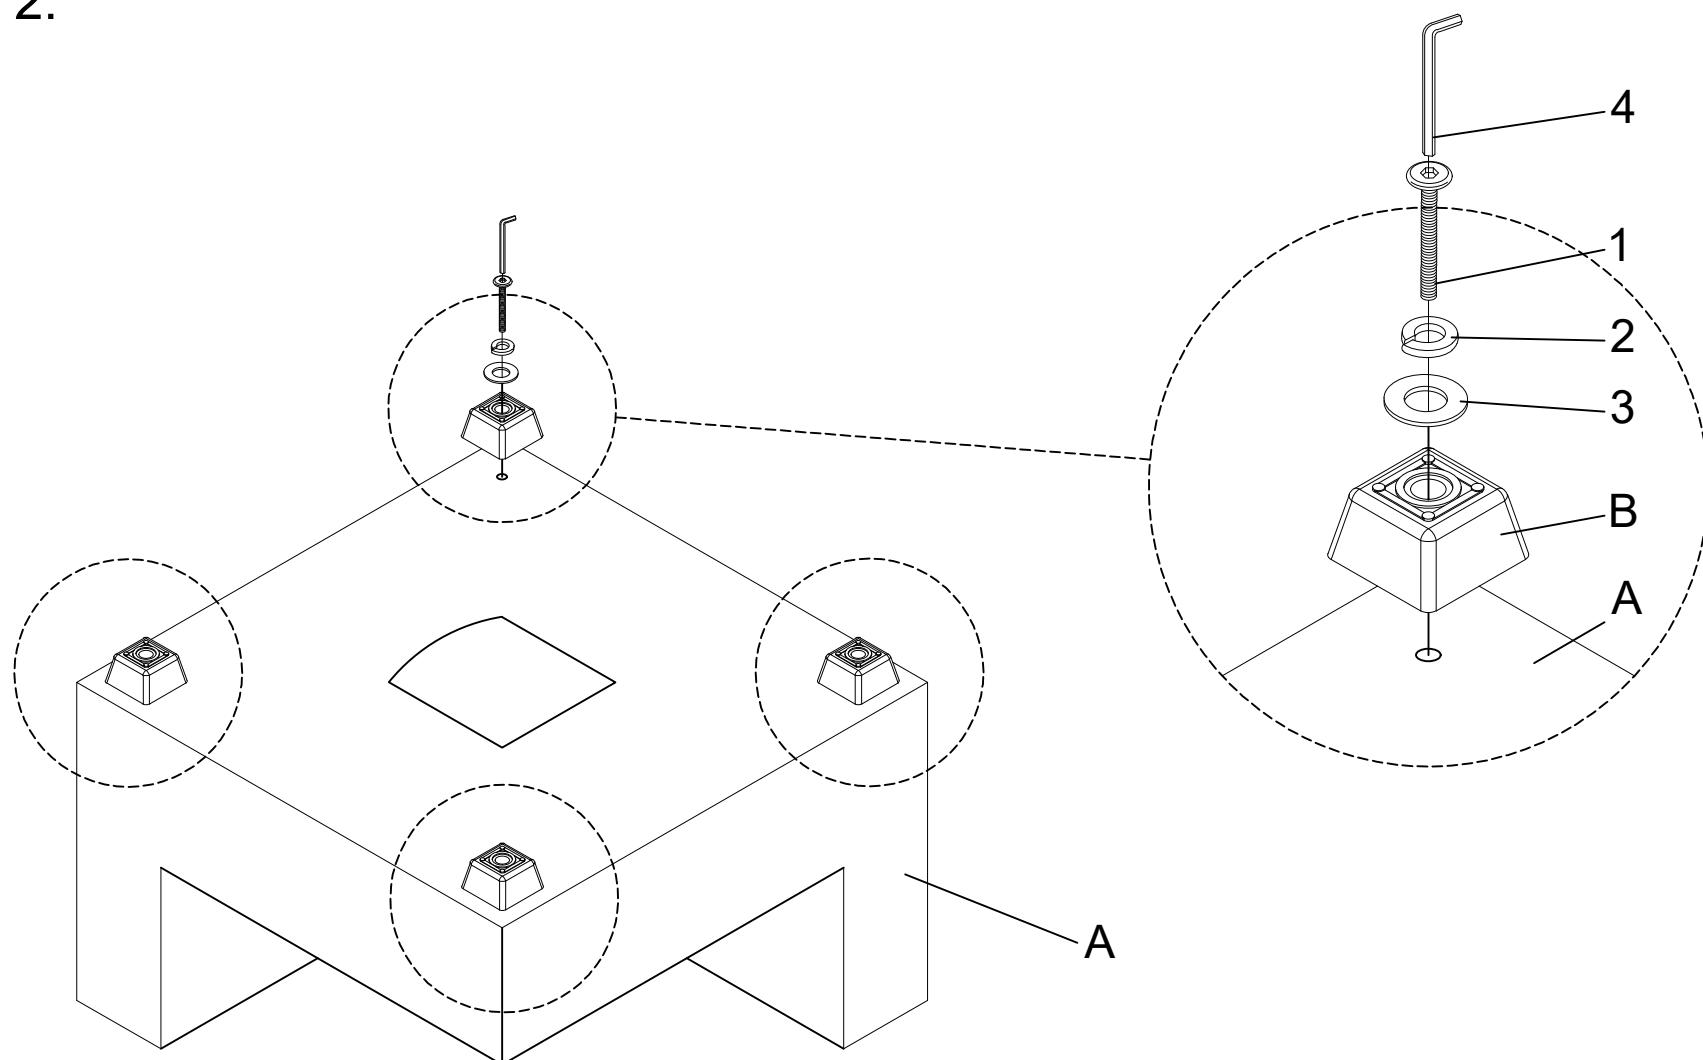

STEP 3:

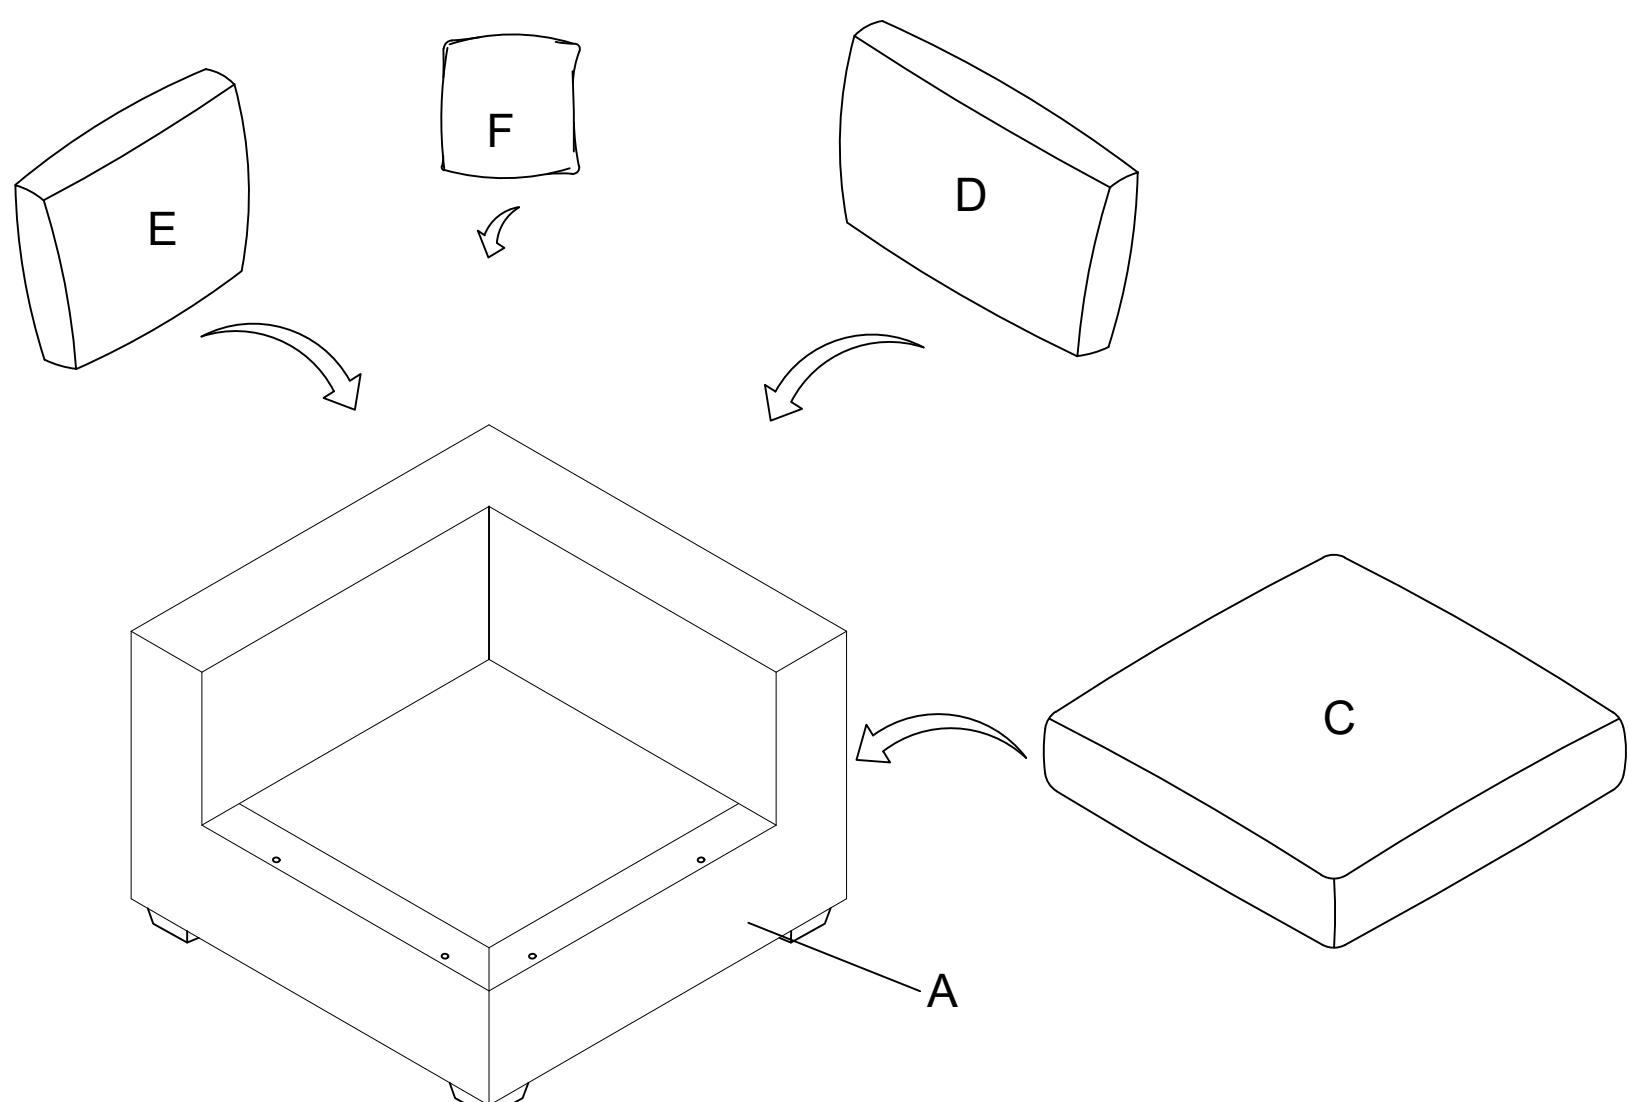




ASSEMBLING INSTRUCTIONS

ITEM NO: 8310NBE-CR

CORNER SEAT

COMPLETED.

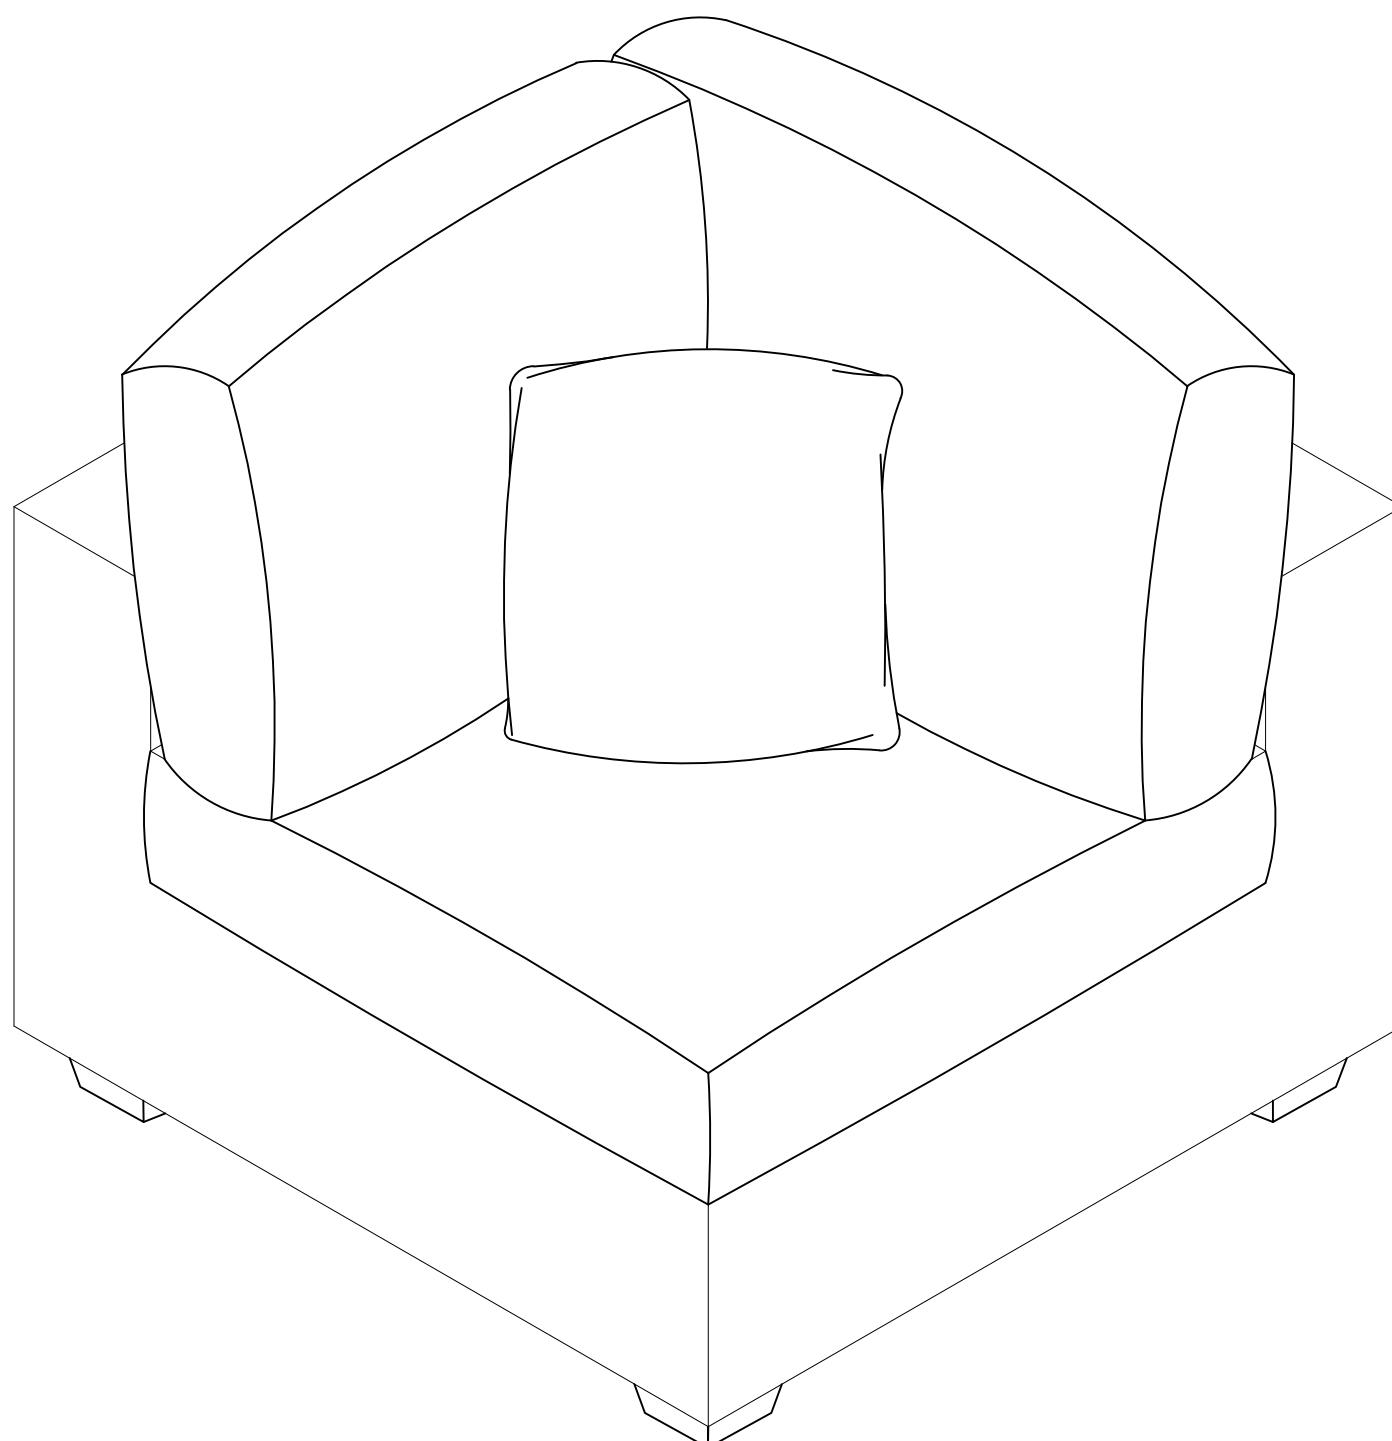




ASSEMBLING INSTRUCTIONS


ITEM NO: 8310NBE

SECTIONAL ASSEMBLY

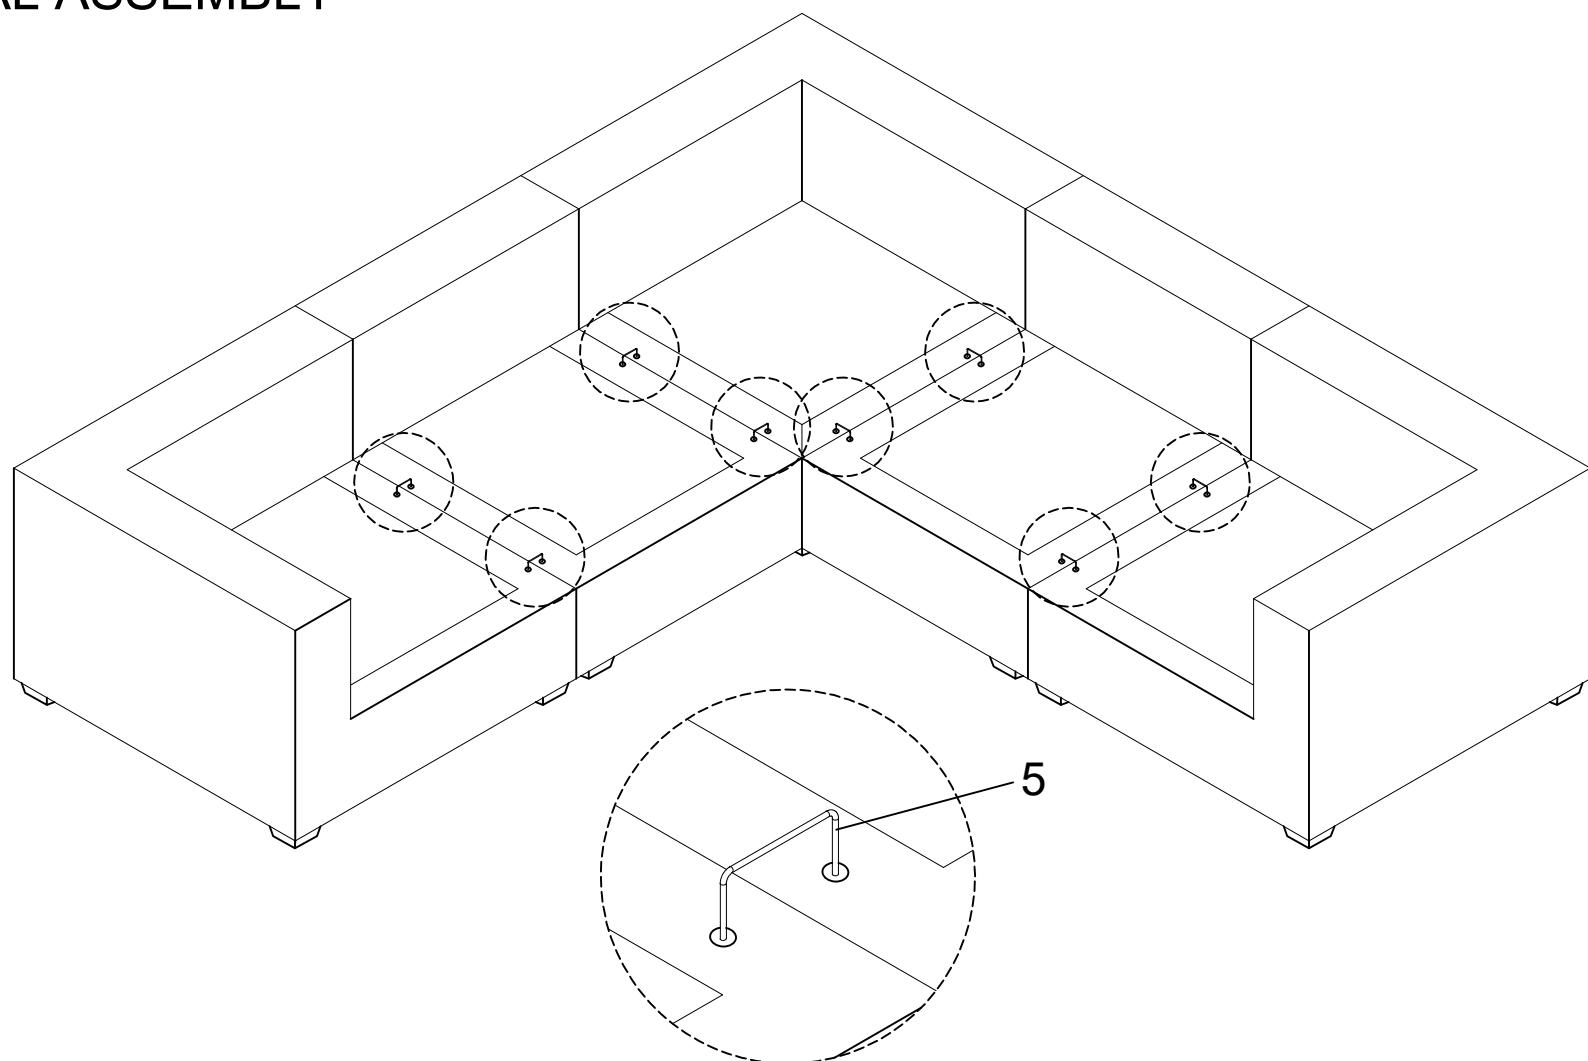

COMPLETED.

8310NBE-CR

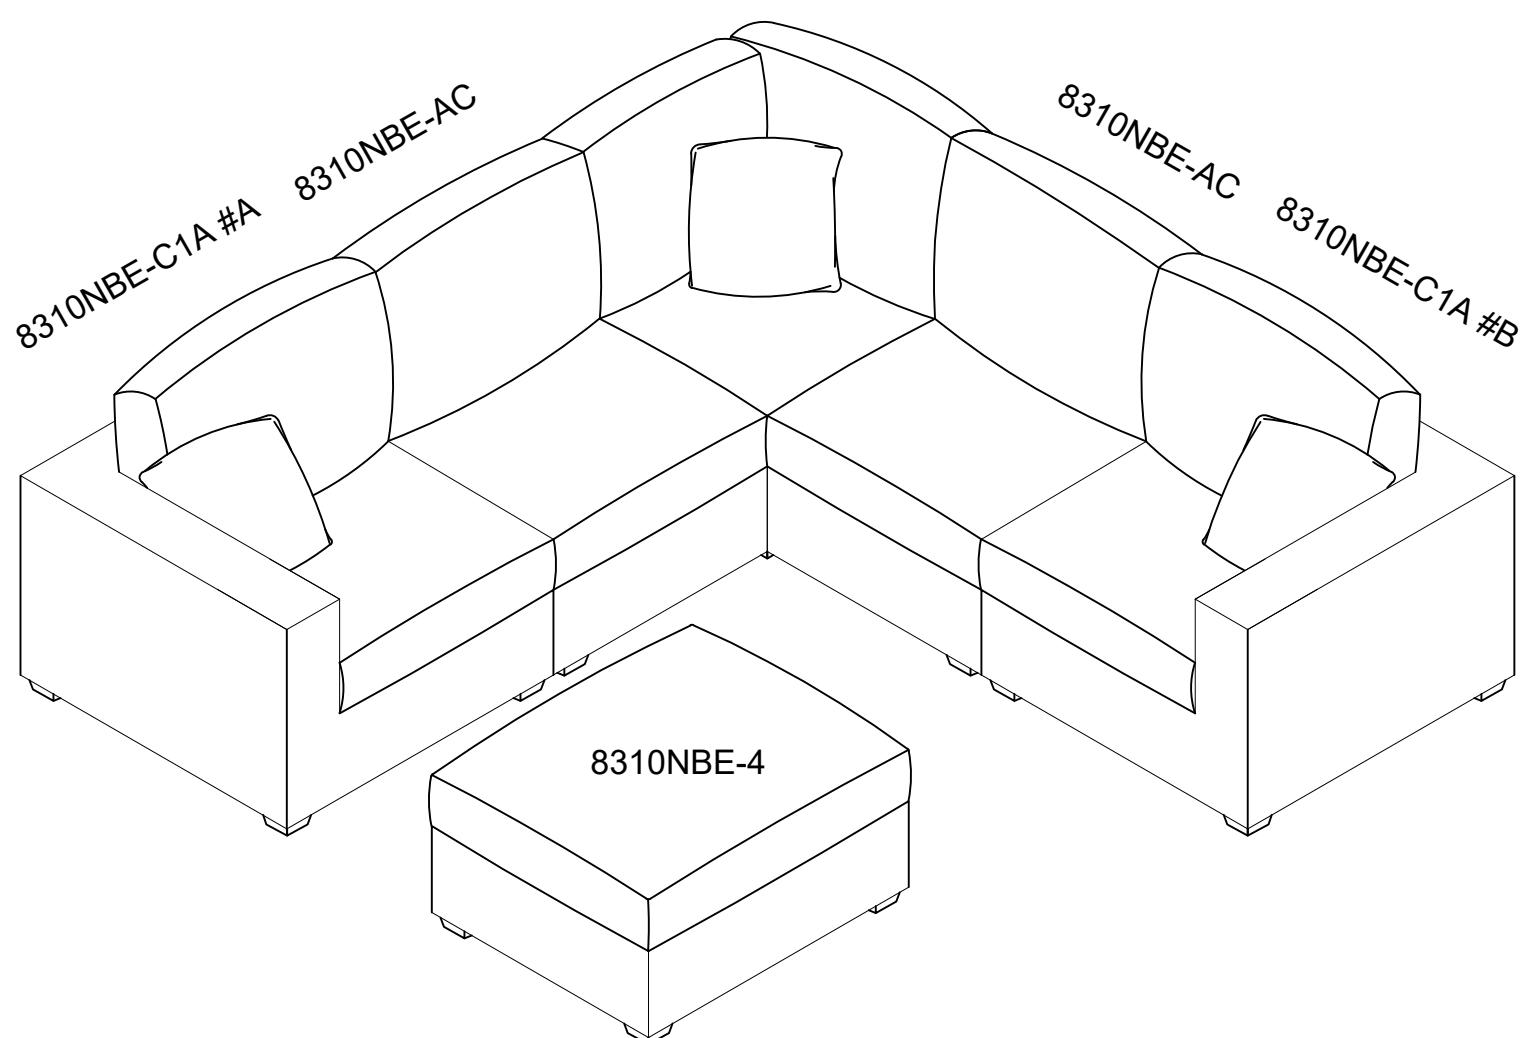

Care Instruction for Chenille Furniture:

In order to maintain the original appearance of your Chenille furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and air conditioning outlets will fade/damage Chenille.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connections are tight, Re-tighten if necessary

⚠ For item use on wooden floor,hard surfaces or carpets,it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.