

# ASSEMBLY INSTRUCTION

ITEM NO: 9278BRW-1/9278GRY-1/9278BGY-1


9278-3601/9278-5902/9278-7135/9278-9145/9278-7027/9278-2055






9278-1206/9278-7804/9278-7833 /9278-3701 /9278-3405 /9278-1207

/9278-5950/9278-7335/9278-1352/9278-1330/9278-7255 ACCENT CHAIR

LEGS AND HARDWARE ARE STORED IN THE BOTTOM OF THE SEAT, PLEASE TAKE OUT FOR ASSEMBLY.

Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.
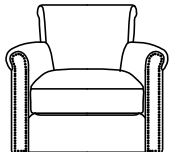
| NO. | PARTS LIST  | QTY | DESCRIPTION  |
|-----|---|-----|--------------|
| A   |  | 1   | ACCENT CHAIR |

| NO. | HARDWARE LIST  | QTY | DESCRIPTION       |
|-----|--|-----|-------------------|
| B   | <br>80mm*80mm*120mmH | 2   | WOODEN FRONT LEGS |
| C   | <br>77mm*50mm*120mmH | 2   | WOODEN REAR LEGS  |
| D   | <br>M8*90mm          | 4   | BOLT              |
| E   | <br>Ø8.5*Ø16*1.5mm | 4   | FLAT WASHER       |
| F   | <br>M5*100*38mm    | 1   | ALLEN KEY         |

# ASSEMBLY INSTRUCTION

ITEM NO: 9278BRW-1/9278GRY-1/9278BGY-1


9278-3601/9278-5902/9278-7135/9278-9145/9278-7027/9278-2055

9278-1206/9278-7804/9278-7833/9278-3701/9278-5950/9278-7335


/9278-1352/9278-1330/9278-7255 ACCENT CHAIR

## STEP # 1

PARTS INSIDE

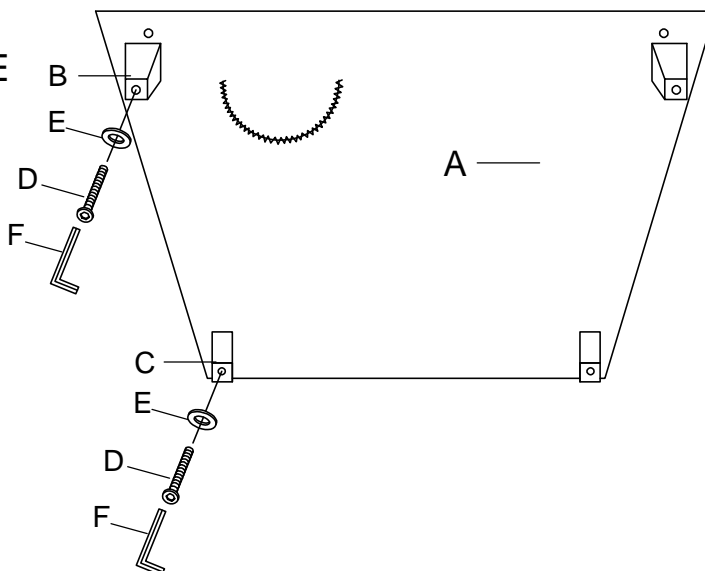

## STEP # 2

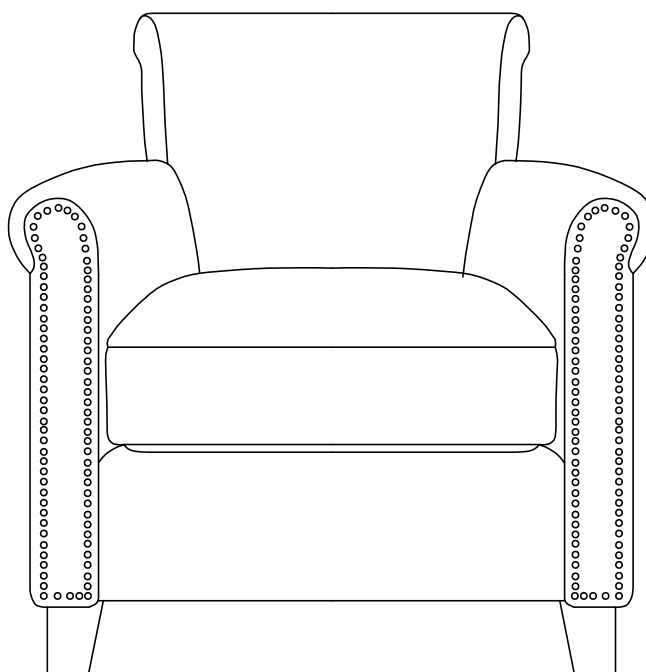

### CARE INSTRUCTION FOR LEATHER FURNITURE

In order to maintain the original appearance of your furniture, please follow below care procedures.

°Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. sunlight and/ or exposure to heating and air conditioning outlets will fade/damage leather. Do not place your upholstered furniture too close to windows, radiators, vents and be sure to use window treatments to block the sun's rays

°Wipe with a soft brush to remove dust

\*Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.

\*For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and Supports to avoid/prevent from damages/scratches and discoloration.