

















# ASSEMBLY INSTRUCTION

ITEM NO: 9340GY/BU/TP-3
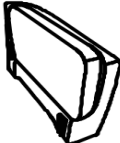
## SOFA

**NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.**


### COMPONENT LIST

NO.	DRAWING	QTY	DESCRIPTION	NO.	DRAWING	QTY	DESCRIPTION
A		1	SEAT	H		1	WASHER
B		1	BACK REST	I		4	BOLT (M8*20)
C		1	LSF ARM REST	J		2	BOLT
D		1	RSF ARM REST	K		1	SUPPORT BAR
E		2	BACK COUSHION	L		2	WASHER
F		4	WOODEN LEG (H5.25")	M		1	ALLEN KEY
G		1	MIDDLE LEG (H5")	N		16	BOLT (M6*20)


**Please follow the drawings below to assemble the item.**

**Wooden legs are stored in the box on the seat, please take out for assembly.**


**Step 1.**

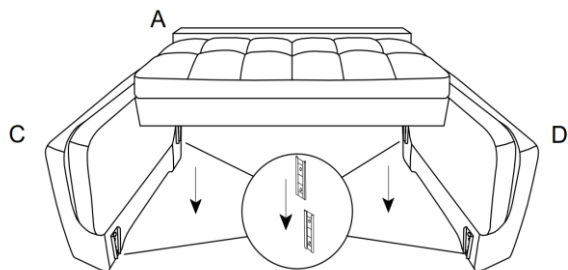


**Step 2.**

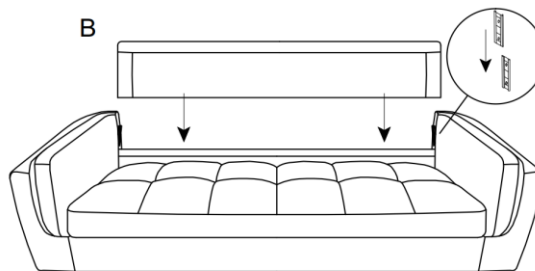


**Step 3.**

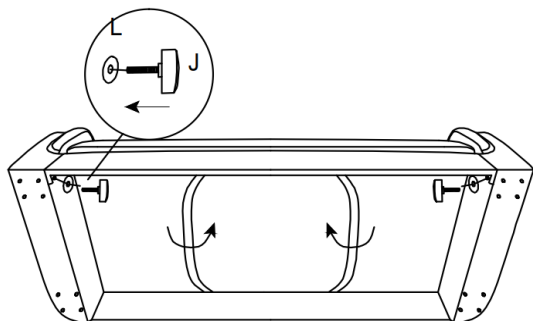


**Step 4.**

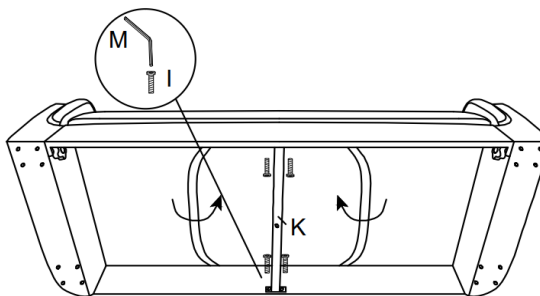


**Step 5.**

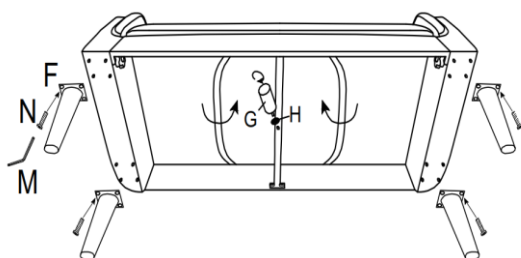

**Step 6.**

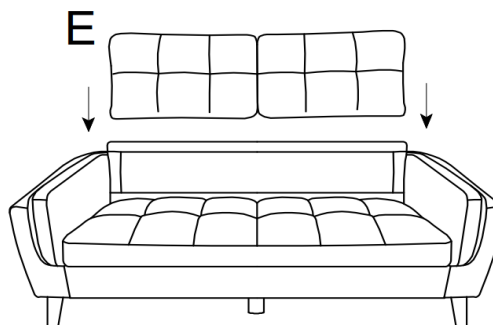

**Step 7.**

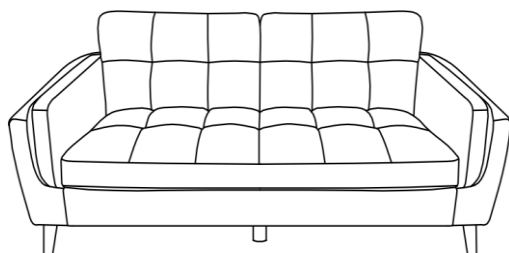

**CARE INSTRUCTION FOR 100% POLYESTER FURNITURE**

**In order to maintain the original appearance of your 100% polyester furniture, Please follow below care procedures:**

- **Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/ damage 100% polyester. Do not place your upholstered furniture too close to windows, radiators, or vents, and be sure to use window treatments to block the sun's rays.**
- **Wipe with a soft brush to remove dust.**



**For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration**