



# ASSEMBLY INSTRUCTION





ITEM NO. 9924DBR/GRY-4

## NOTE:

Legs and hardware are stored in the bottom of the unit. Please take out for assembly


Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

## COMPONENT LIST

NO.	DRAWING	QTY	DESC
A	 M8	1	ALLEN KEY
B	 M8	4	BOLT
C		4	FLAT WASHER
D		4	LEG


## Step#1

Unzip the bottom of ottoman, take out the legs and hardware. Align the legs and insert the bolts to the pre-drilled holes, tighten with Allen Key.

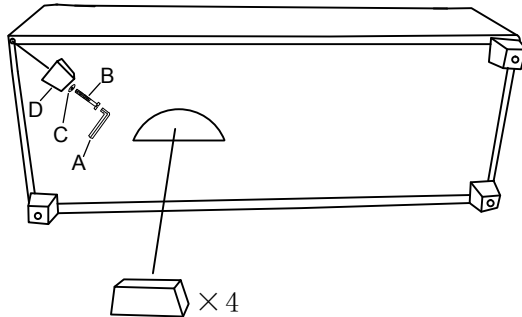

## Step#2

Ottoman assembly is completed.

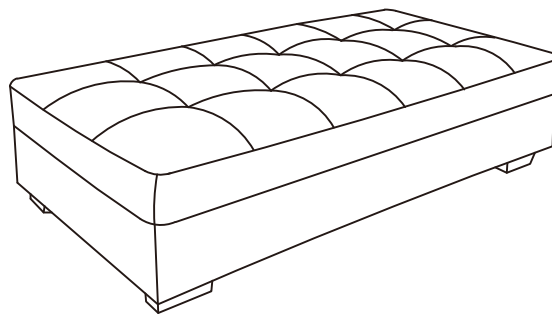

## Care Instruction for airehyde match.

In order to maintain the original appearance of your airehyde match, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and/or exposure to heating and air conditioning outlets will fade/damage airehyde match.
- Vacuum or wipe with a soft cloth to remove dust.
- Clean airehyde match with professional cleanser.