







# Headboard Bracket Installation Guide

Item:BF-1HBADP-U  
Headboard Adaptors for Upholstered Bed Base (BF-1UP)

HEADBOARD BRACKET COMPONENTS					
1	2	3	4	5	6
(2) T-Brackets	(2) Headboard Brackets	(4) Short Bolts (5/16 in x 20mm)	(12) Nuts	(8) Long Bolts (5/16 in x 45mm)	(2) Wrenches
					


## STEP 1

Attach T-bracket to metal bed frame, insert long bolt and nut to secure the position. Please do not fully tighten it.



## STEP 2

Align and attach headboard bracket onto T-bracket, insert long bolt and nut to secure the position. Please do not fully tighten it.

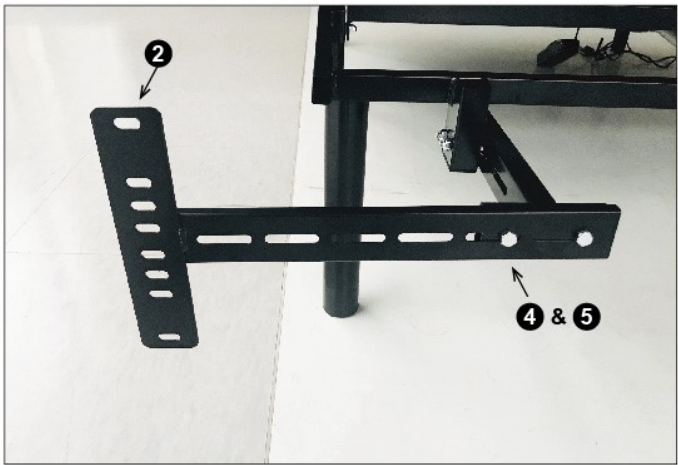

## STEP 3

Align and attach headboard bracket to your headboard, adjust the height to fit to holes on headboard, insert short bolt and nut from inside headboard bracket.

Make sure all bolts and nuts are in proper position, and fully tighten all bolts and nuts on brackets and headboard.