

ASSEMBLY INSTRUCTION

ITEM NO : 1444-9 CHEST

Thank you for purchasing this product. Please take time to read and follow the instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in the packing materials. If you do not have all the parts listed, have your dealer contact us and they will be sent to you immediately.



It is recommended to install protective pads under all legs and support to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.





Hardware may loosen over time. Periodically check to make sure all connections are tight. Retighten if necessary.

No Sketch Description Quantity A Image: Chest 1 Chest 1 Connection Bolt Image: Chest Chest 1	PART LIST				HARDWARE LIST				
A Chest 1 Connection Bolt -JCBC Bolt -JCBC Bolt M6-1.0 x 20mm Ø1/4" x 7/32" x 7/16" x 0.06" 0 - - - - - - - 0 </td <td>No</td> <td>Sketch</td> <td>Description</td> <td>Quantity</td> <td>No</td> <td>Description</td> <td>Size</td> <td>Sketch</td> <td>Quantity</td>	No	Sketch	Description	Quantity	No	Description	Size	Sketch	Quantity
-JCBC Bolt -JCBC Bolt -JCBC Bolt -Spring Washer -Flat Washer -Flat Washer -Stat Washer -JCBC Bolt -JCBC Bolt -Spring Washer -JCBC Bolt -JCBC Bolt -JCBC Bolt -JCBC Bolt -JCBC Bolt -Spring Washer -JCBC Bolt -Spring Washer -JCBC Bolt -Spring Washer -JCBC Bolt -Spring Washer -Spring Washer -Spr					1	Allen Key	M4 x 60mm	L	1
_ Still	A	and the second	Chest	1	-JCBC Bolt 2 -Spring Washer	-JCBC Bolt	M6-1.0 x 20mm		
	в	<u>H</u>	Leg	4		Ø1/4" x 7/32" x 7/16" x 0.06" Ø1/4" x 1/4" x 3/4" x 0.04"	()))))))))))))))))))))))))))))))))))))	12	

STEP 1

STEP 2

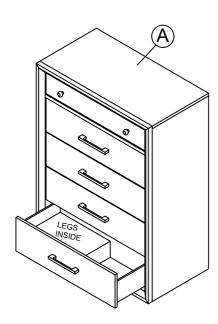

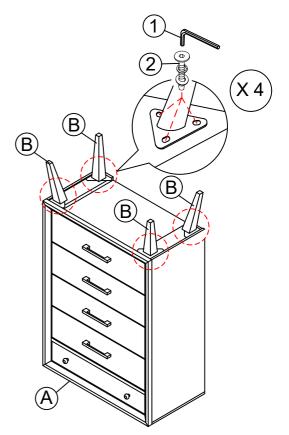



ASSEMBLY INSTRUCTION

ITEM NO : 1444-9 CHEST

Thank you for purchasing this product. Please take time to read and follow the instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in the packing materials. If you do not have all the parts listed, have your dealer contact us and they will be sent to you immediately.



It is recommended to install protective pads under all legs and support to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.




Hardware may loosen over time. Periodically check to make sure all connections are tight. Retighten if necessary.

PART LIST									
No	Sketch	Description	Quantity						
Α	A MARKET	Chest	1						


HARDWARE LIST FOR ANTI - TIPPING KIT									
No	Description	Size	Sketch	Quantity					
1	Screw	M4 x 16mm		1					
2	Screw	M4 x 50mm		1					
3	Strap			1					
4	L Bracket			2					


* ABOVE HARDWARE ARE PACKED IN 1444-9 FOR ASSEMBLY

STEP 1

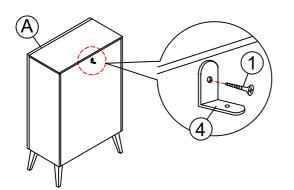

STEP 3

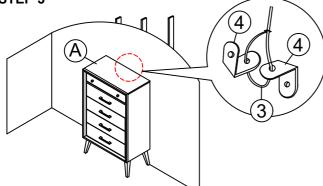

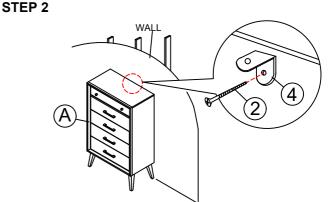



* ANTI-TIPPING HARDWARE PACK IS AT THE BACK PANEL

MADE IN MALAYSIA