ASSEMBLY INSTRUCTION

ITEM NO: 9914-2LCN/9914CH-2LCN

LSF RECLINING LOVE SEAT WITH CONSOLE


NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.


COMPONENT LIST

| NO. | DRAWING | QTY | DESCRIPTION |
|-----|---------|-----|-------------------|
| А | | 1 | LSF EAR |
| В | | 1 | LSF BACK REST |
| С | | 1 | RSF BACK REST |
| D | | 1 | CONSOLE BACK REST |
| E | | 1 | SEAT |


Please follow the drawings below to assemble the item.

Step 1. Console back rest is stored in plastic bag at the bottom of the console. Please take out for assembly.




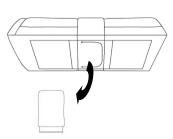


Step 3. Insert the LSF ear to the back rest and make sure it is secured in position.

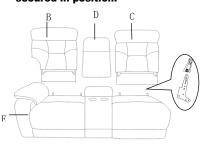

Step 4. Completed!

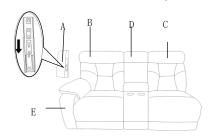




Step 5. Pull the handle to recline the chair.



Step 6. Please connect and hook each piece together as shown in drawing.

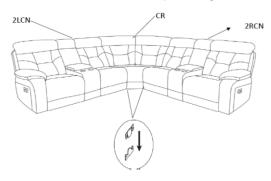

CARE INSTRUCTION FOR 100% POLYESTER FURNITURE

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/ damage 100% polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime buildup.
- Wipe 100% polyester with professional cleanser



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration



ASSEMBLY INSTRUCTION

ITEM NO: 9914-CR

CORNER SEAT


NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

COMPONENT LIST


| NO. | DRAWING | QTY | DESCRIPTION |
|-----|---------|-----|---------------|
| A | | 1 | LSF BACK REST |
| В | | 1 | RSF BACK REST |
| С | | 1 | SEAT |

Please follow the drawings below to assemble the item.


Step 1. Align the female brackets at the back rest onto the male brackets at the seat, insert and push to the end, make sure the brackets are secured in position.

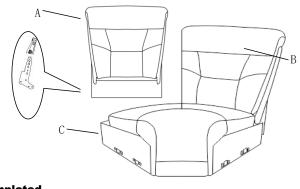

Step 2. Completed

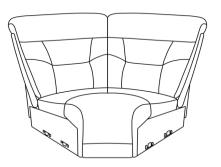

Step 3. Please connect and hook each piece together as shown in drawing.

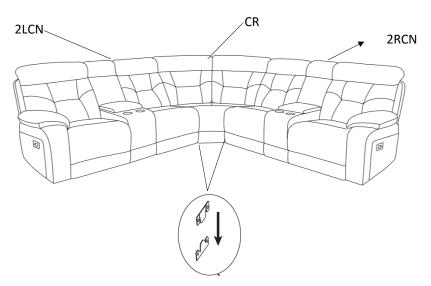

CARE INSTRUCTION FOR 100% POLYESTER FURNITURE

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/ damage 100% polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime buildup.
- Wipe 100% polyester with professional cleanser



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration



ASSEMBLY INSTRUCTION

ITEM NO: 9914-2RCN/9914CH-2RCN

RSF RECLINING LOVE SEAT WITH CONSOLE

NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.


COMPONENT LIST


| NO. | DRAWING | QTY | DESCRIPTION |
|-----|---------|-----|-------------------|
| А | | 1 | RSF EAR |
| В | | 1 | RSF BACK REST |
| С | | 1 | LSF BACK REST |
| D | | 1 | CONSOLE BACK REST |
| E | | 1 | SEAT |

Please follow the drawings below to assemble the item.


Step 1. Console back rest is stored in plastic bag at the bottom of the console. Please take out for assembly.

Step 2. Align the female brackets at the back rest onto the male brackets at the seat, insert and push to the end, make sure the brackets are secured in position.

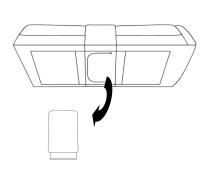


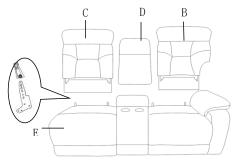

Step 3. Insert the RSF ear to the back rest and make sure it is secured in position.

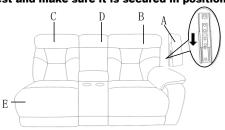


Step 4. Completed

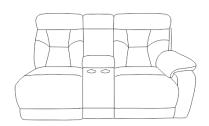

Step 5. Pull the handle to recline the chair



Step 6. Please connect and hook each piece together as shown in drawing.

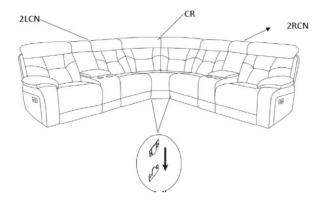

CARE INSTRUCTION FOR 100% POLYESTER FURNITURE

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/ damage 100% polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime buildup.
- Wipe 100% polyester with professional cleanser



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration