




ASSEMBLY INSTRUCTION

1885FN-1 FULL BED HEADBOARD

1885FN-2 FULL BED FOOTBOARD

1885FN-3 FULL BED RAILS & SLATS

HEADBOARD LIST: (NOTE:HARDWARE PACK INSIDE THE CARTON OF 1885FN-1)



A: Headboard
1PC




B: Leg
2PCS




C: Spring Washer
4PCS



D: Flat Washer
4PCS



E: Bolt M8*30mm
4PCS



F: Allen Key 5mm
1PC



G: Screw 4.0*60mm
4PCS

FOOTBOARD AND RAILS LIST:(NOTE:HARDWARE PACK INSIDE THE CARTON OF 1885FN-3)




B: Leg
2PCS



C: Spring Washer
4PCS



D: Flat Washer
4PCS




E: Bolt M8*30mm
4PCS



G: Screw 4.0*60mm
4PCS




H: Rail
2PCS




I: Footboard
1PC



J: Slat
3PCS



K: Center Support
Rail 1PC




L: Allen Key 4mm
1PC




M: Nut 1/4
6PCS




N: Bolt 1/4*15mm
3PCS




O: Bolt M6*30mm
4PCS



P: Support Leg
3PCS



Q: Bolt 1/4*48mm
6PCS




R: Wrench 1/4*35mm
1PC


ASSEMBLY INSTRUCTION FOR REGULAR BED SET.

NOTE: PLEASE DO NOT TIGHTEN ALL BOLTS UNTIL THE BED IS ASSEMBLED COMPLETELY.


STEP 1

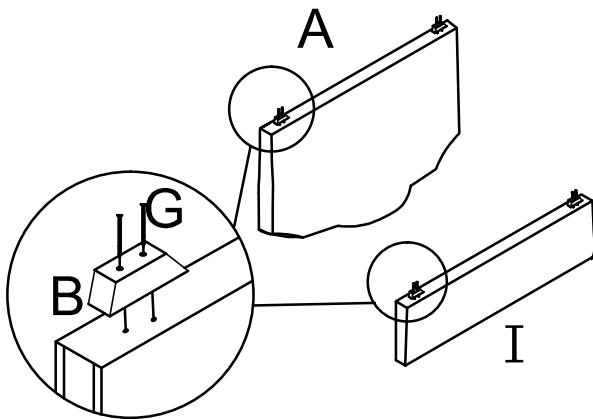


STEP 2

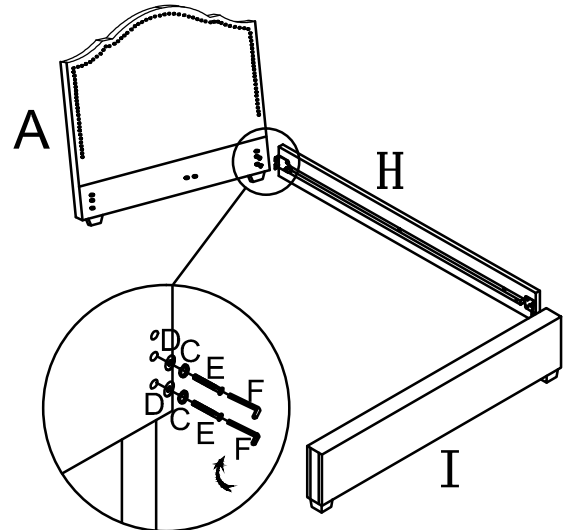


STEP 3

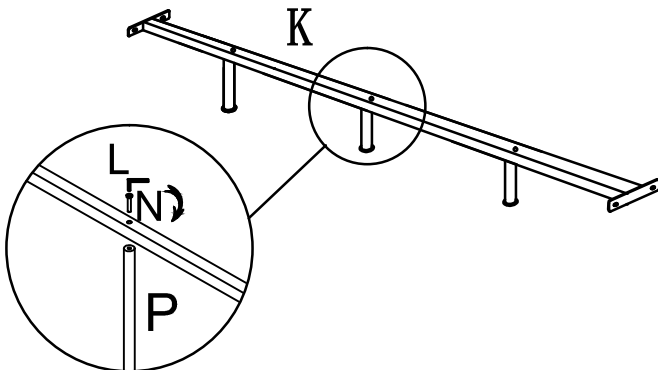


STEP 4

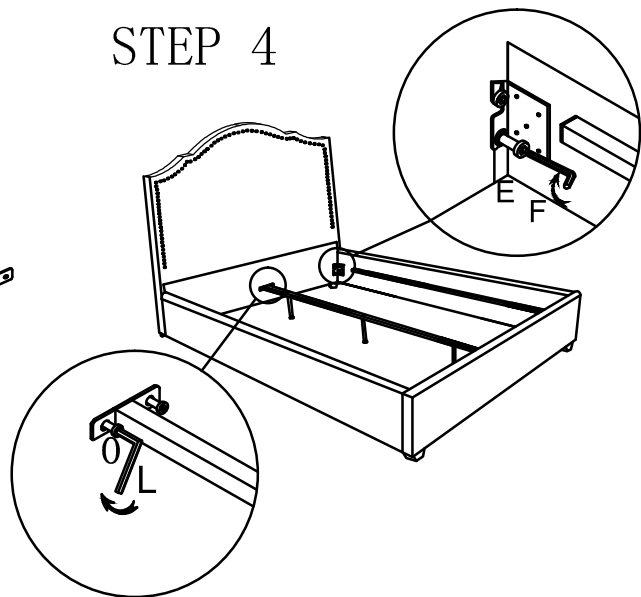

STEP 5

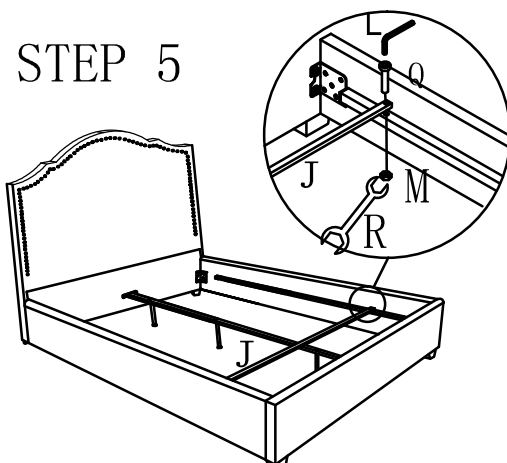

COMPLETED

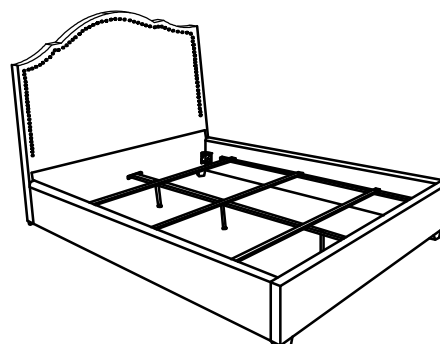




ASSEMBLY INSTRUCTION

HOMELEGANCE 1885FN-1 FULL HEADBOARD

HEADBOARD LIST: (NOTE:HARDWARE PACK INSIDE THE CARTON OF 1885FN-1)



A: Headboard
1PC




B: Leg
2PCS




C: Spring Washer
4PCS




D: Flat Washer
4PCS



E: Bolt M8*30mm
4PCS




F: Allen Key 5mm
1PC



G: Screw 4.0*60mm
4PCS

ASSEMBLY INSTRUCTION FOR 1885FN-1 FULL HEADBOARD ONLY.
NOTE: PLEASE DO NOT TIGHTEN ALL BOLTS UNTIL THE BED
IS ASSEMBLED COMPLETELY.

STEP 1

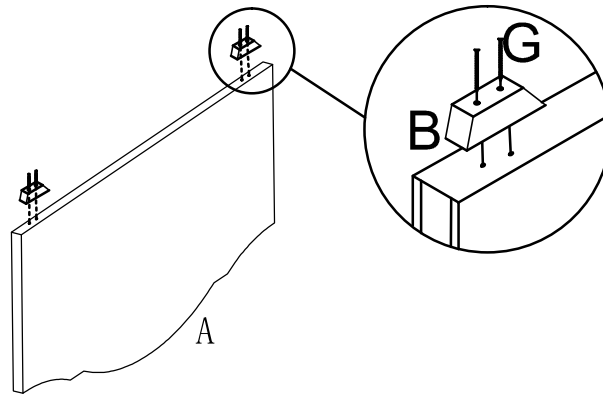

STEP 2

COMPLETED

