## H O M E G A N C E


## ASSEMBLY INSTRUCTION

ITEM#:5488-24



## **DESCRIPTION: COUNTER HEIGHT CHAIR**

NO.	HARDWARE LIST		QTY	NO.	PARTS LIST		QTY
А		ALLEN KEY 5MM	1	а		LEG FRAME A	1
В		ALLEN BOLT 1/4"*5/8"	5	b		LEG B	2
С		ALLEN BOLT 1/4"*13/16"	8	С		STRETCHER	1
D	0	FLAT WASHER	4	d		POST	1
Е	٥	LOCK WASHER	4	е		SEAT	1

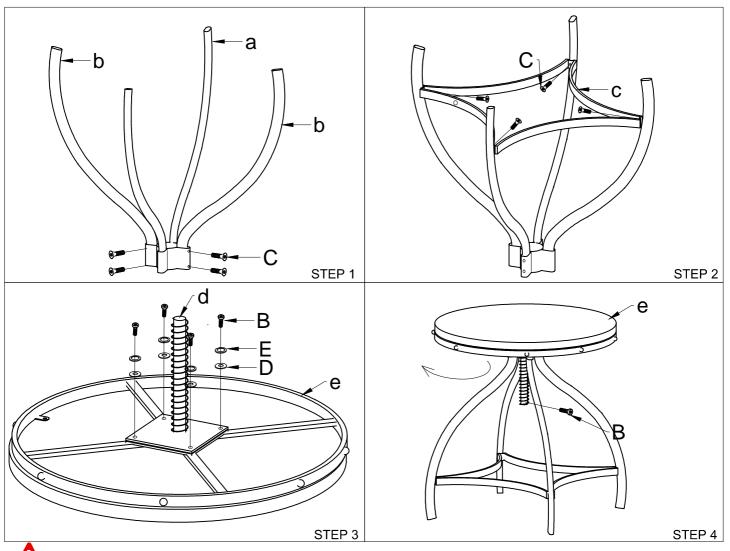

For items use on wooden floor,hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration

Do not tighten bolts until completely assembled