


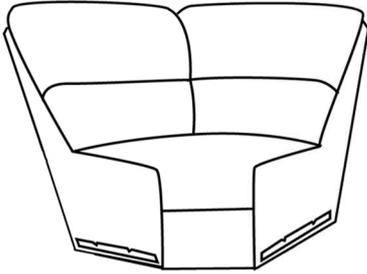


Assembly Instruction **CORNER SEAT** ITEM NO.: 8308-CR

NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.


COMPONENT LIST (CHAIR)

NO.	DRAWING	QTY	DESCRIPTION
A		1	CORNER SEAT


HARDWARE LIST

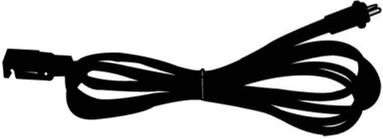NO.	DRAWING	QTY	DESCRIPTION
1		1	EXTENSION CORD



STEP#1

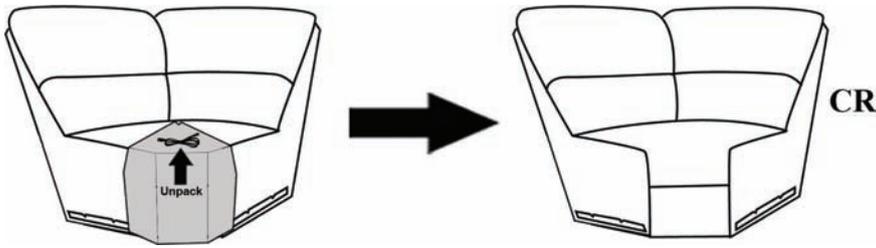

STEP#2




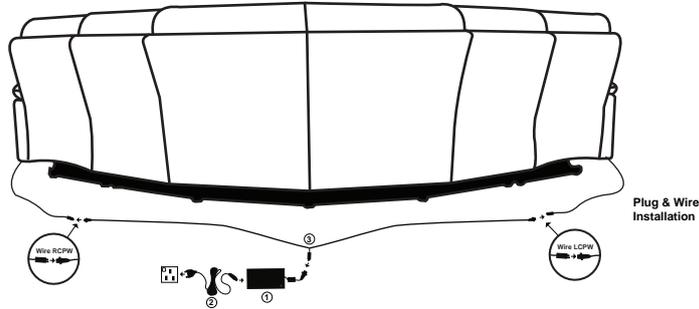


REMARK:
Y-Cable MUST be used when combination include two power reclining chairs.

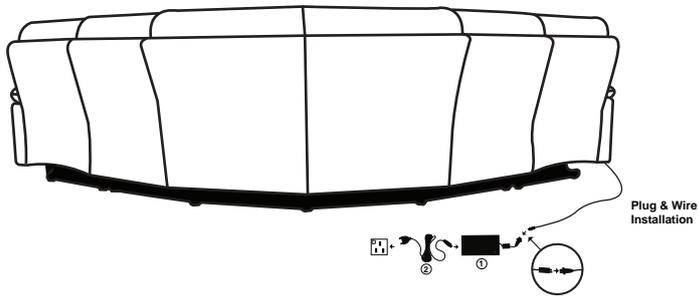

REMARK:
Y-Cable will NOT be used when combination include ONLY one power reclining chair.

STEP#3

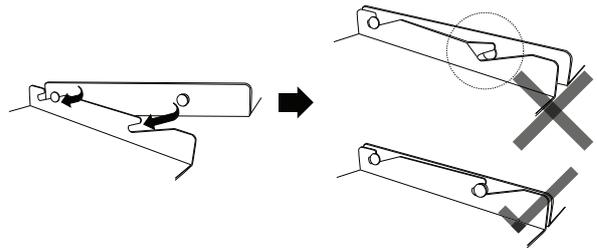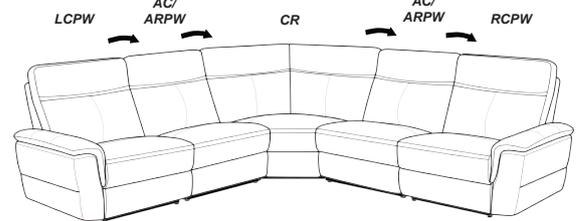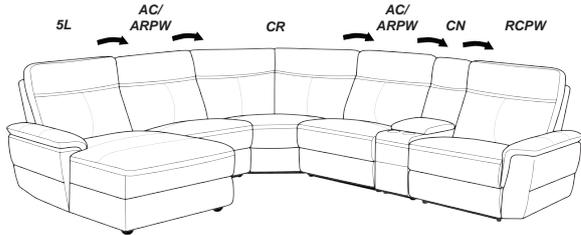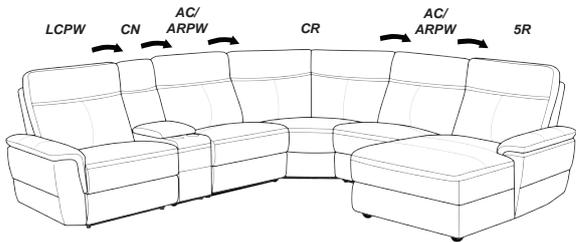

CARE INSTRUCTION FOR TOP GRAIN LEATHER WITH PVC:

In order to maintain the original appearance of your top grain leather with PVC furniture, please follow below simple care procedure

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage leather and PVC.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.
- Wipe leather and PVC with professional cleanser.